

AIRPORT DIAGRAM

BALTIMORE/WASHINGTON INTL THURGOOD MARSHALL (BWI)
AL-804 (FAA) BALTIMORE, MARYLAND

ATIS
115.1 127.8
BALTIMORE TOWER
119.4 257.8
GND CON
121.9
CLNC DEL
118.05

D

324 Δ

RWY 04-22
PCN 62 F/A/W/T
S-80, D-220, 2D-600, 2D/2D2-790

RWY 10-28
PCN 105 F/A/W/T
S-80, D-220, 2D-1020, 2D/2D2-1340


RWY 15L-33R
PCN 15 F/A/W/T
S-30, D-45

RWY 15R-33L
PCN 70 F/A/W/T
S-80, D-220, 2D-675, 2D/2D2-890

VAR 11.1° W
JANUARY 2010
ANNUAL RATE OF CHANGE
0.0° W

NE-3, 18 SEP 2014 to 16 OCT 2014

NE-3, 18 SEP 2014 to 16 OCT 2014

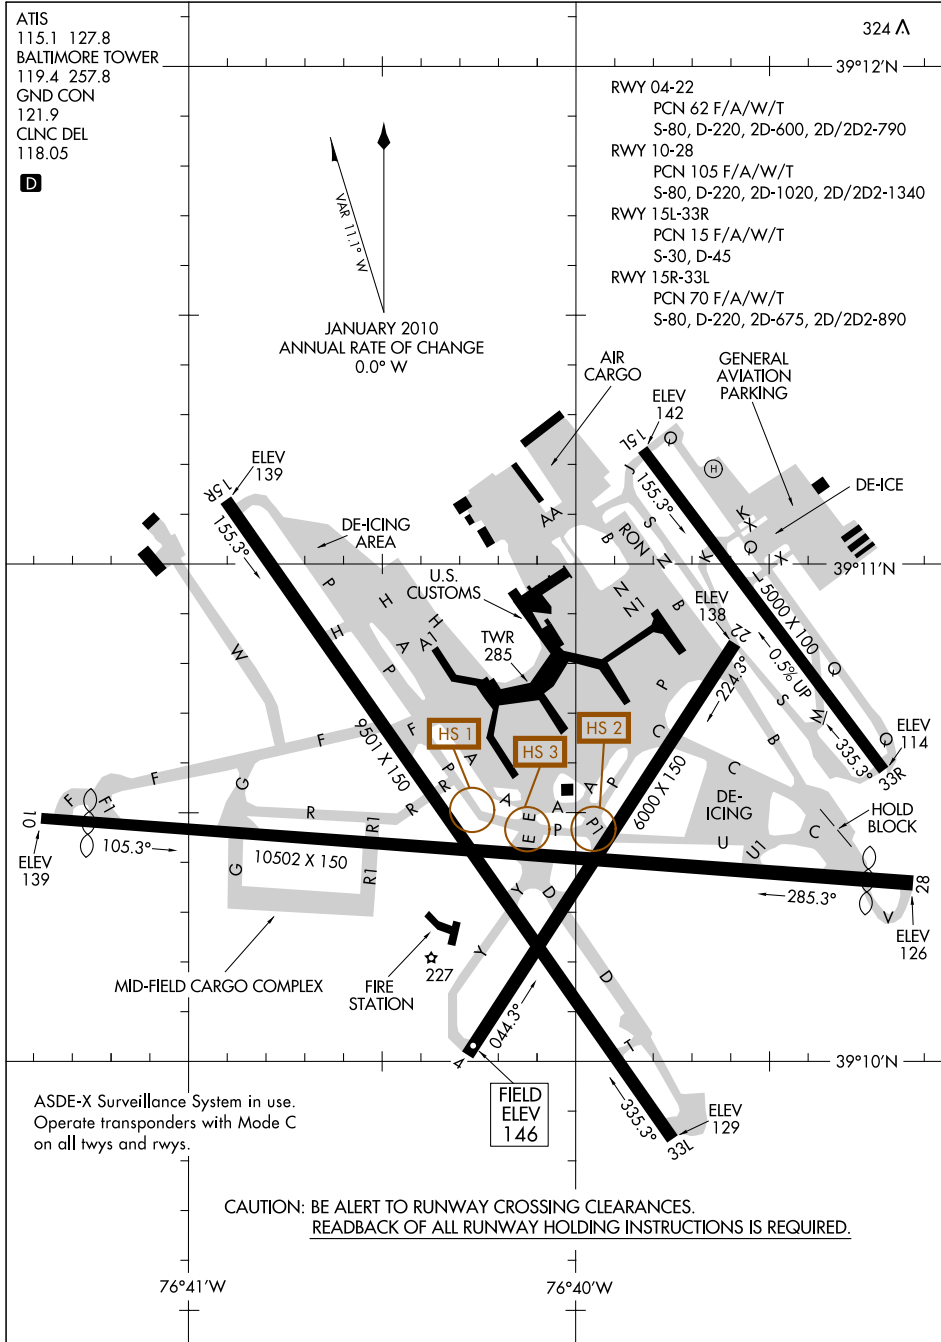

ASDE-X Surveillance System in use.
Operate transponders with Mode C
on all twys and rwys.

CAUTION: BE ALERT TO RUNWAY CROSSING CLEARANCES.
READBACK OF ALL RUNWAY HOLDING INSTRUCTIONS IS REQUIRED.

76°41' W

76°40' W

AIRPORT DIAGRAM

BALTIMORE, MARYLAND
BALTIMORE/WASHINGTON INTL THURGOOD MARSHALL (BWI)