#### STOWAGE NUMBERING SYSTEM

BAY|ROW|TIER BB|RR|TT


# CARGO HOLD (volume)

Described by a group of adjacent bays.

### BAY (length) **BB**RRTT


02 01 03	06 05 07	EVEN <b>40 FT</b> . ODD <b>20 FT</b>

# ROW (width) BBRRTT

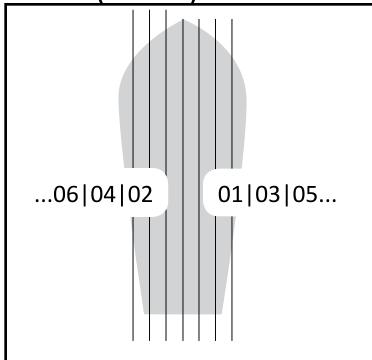

EVEN (PORT) | ODD (STARBD.) Number odds or evens outward from mid-line. If odd number of rows, middle row is designated 00

# TIER (height) BBRRTT

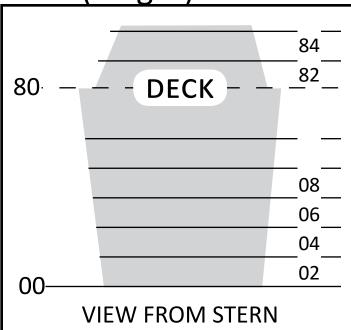

ALL TIER NUMBERS ARE EVEN
Typically start with 82 at the deck
level and 02 at the base-level increasing going upwards.