

AIRPORT DIAGRAM

HARTSFIELD - JACKSON ATLANTA INTL (ATL)
ATLANTA, GEORGIA


ATIS ARR 119.65
DEP 125.55
ATLANTA TOWER
119.1 254.4 (RWY 08L-26R)
125.325 254.4 (RWY 08R-26L)
119.3 254.4 (RWY 09R-27L)
123.85 254.4 (RWY 09L-27R)
119.5 254.4 (RWY 10-28)
GND CON
121.9 254.4 (RWY 08L-26R, 08R-26L)
121.75 254.4 (RWY 09L-27R, 09R-27L)
121.65 254.4 (RWY 10-28)
CLINC DEL
118.1

*Group VI aircraft are restricted from using Taxiway Foxtrot east of Ramp 5 North to the west side of Taxiway Charlie.
**Group VI aircraft are restricted from using Taxiway Lima east of Ramp 5 South to west of Ramp 6 South.
***Aircraft with wingspan greater than 171' are restricted from using Taxiway Victor.

FIELD
ELEV
1026

D
LANDING AIRCRAFT CAN EXPECT TO REMAIN ON TOWER FREQUENCY UNTIL SPECIFICALLY INSTRUCTED TO CONTACT GROUND CONTROL.
CAUTION: BE ALERT TO RUNWAY CROSSING CLEARANCES.
READBACK OF ALL RUNWAY HOLDING INSTRUCTIONS IS REQUIRED.

SE-4, 18 SEP 2014 to 16 OCT 2014

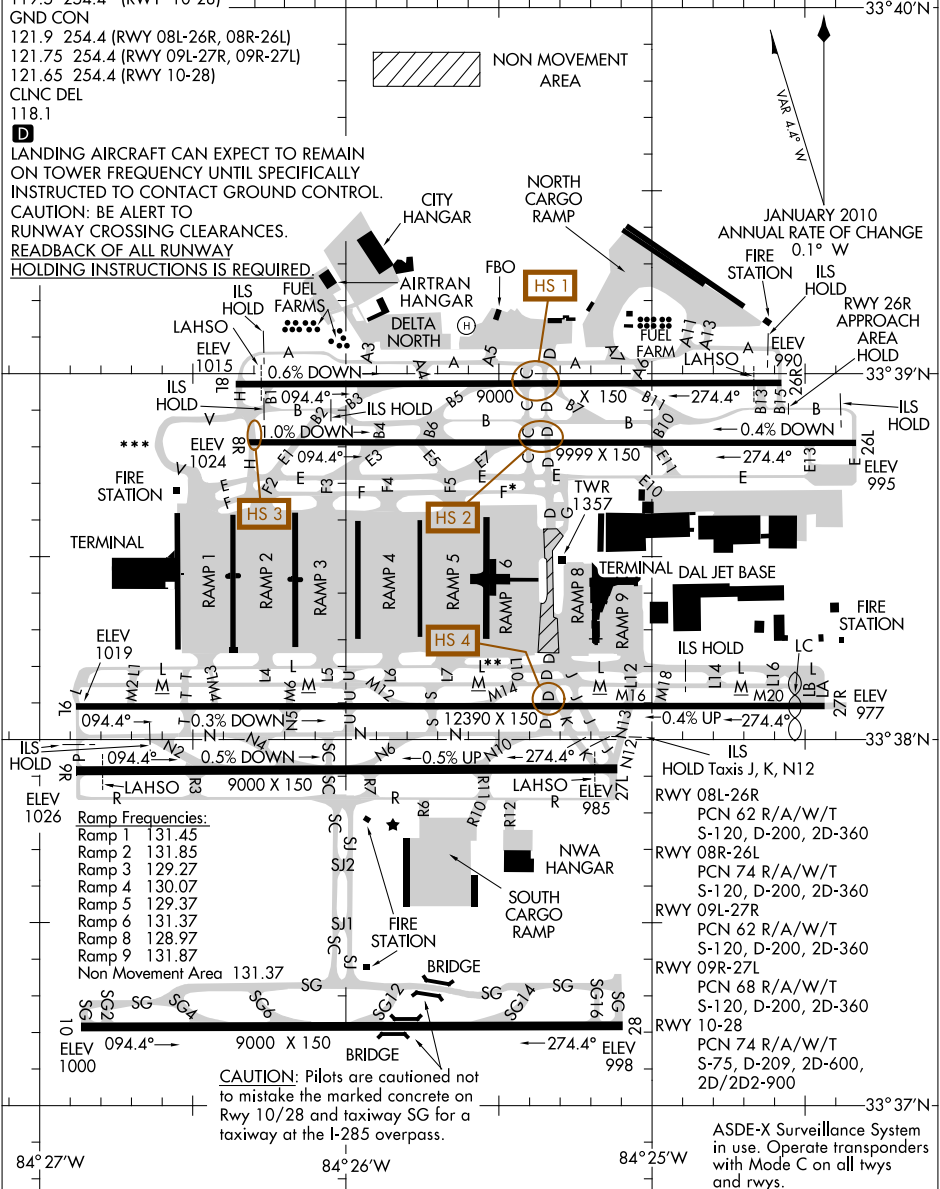

SE-4, 18 SEP 2014 to 16 OCT 2014

AIRPORT DIAGRAM

HARTSFIELD - JACKSON ATLANTA INTL (ATL)
ATLANTA, GEORGIA