


EXAMPLE OF A SUPPORTING POINT

GARRISON I BATTALION
800 YARDS

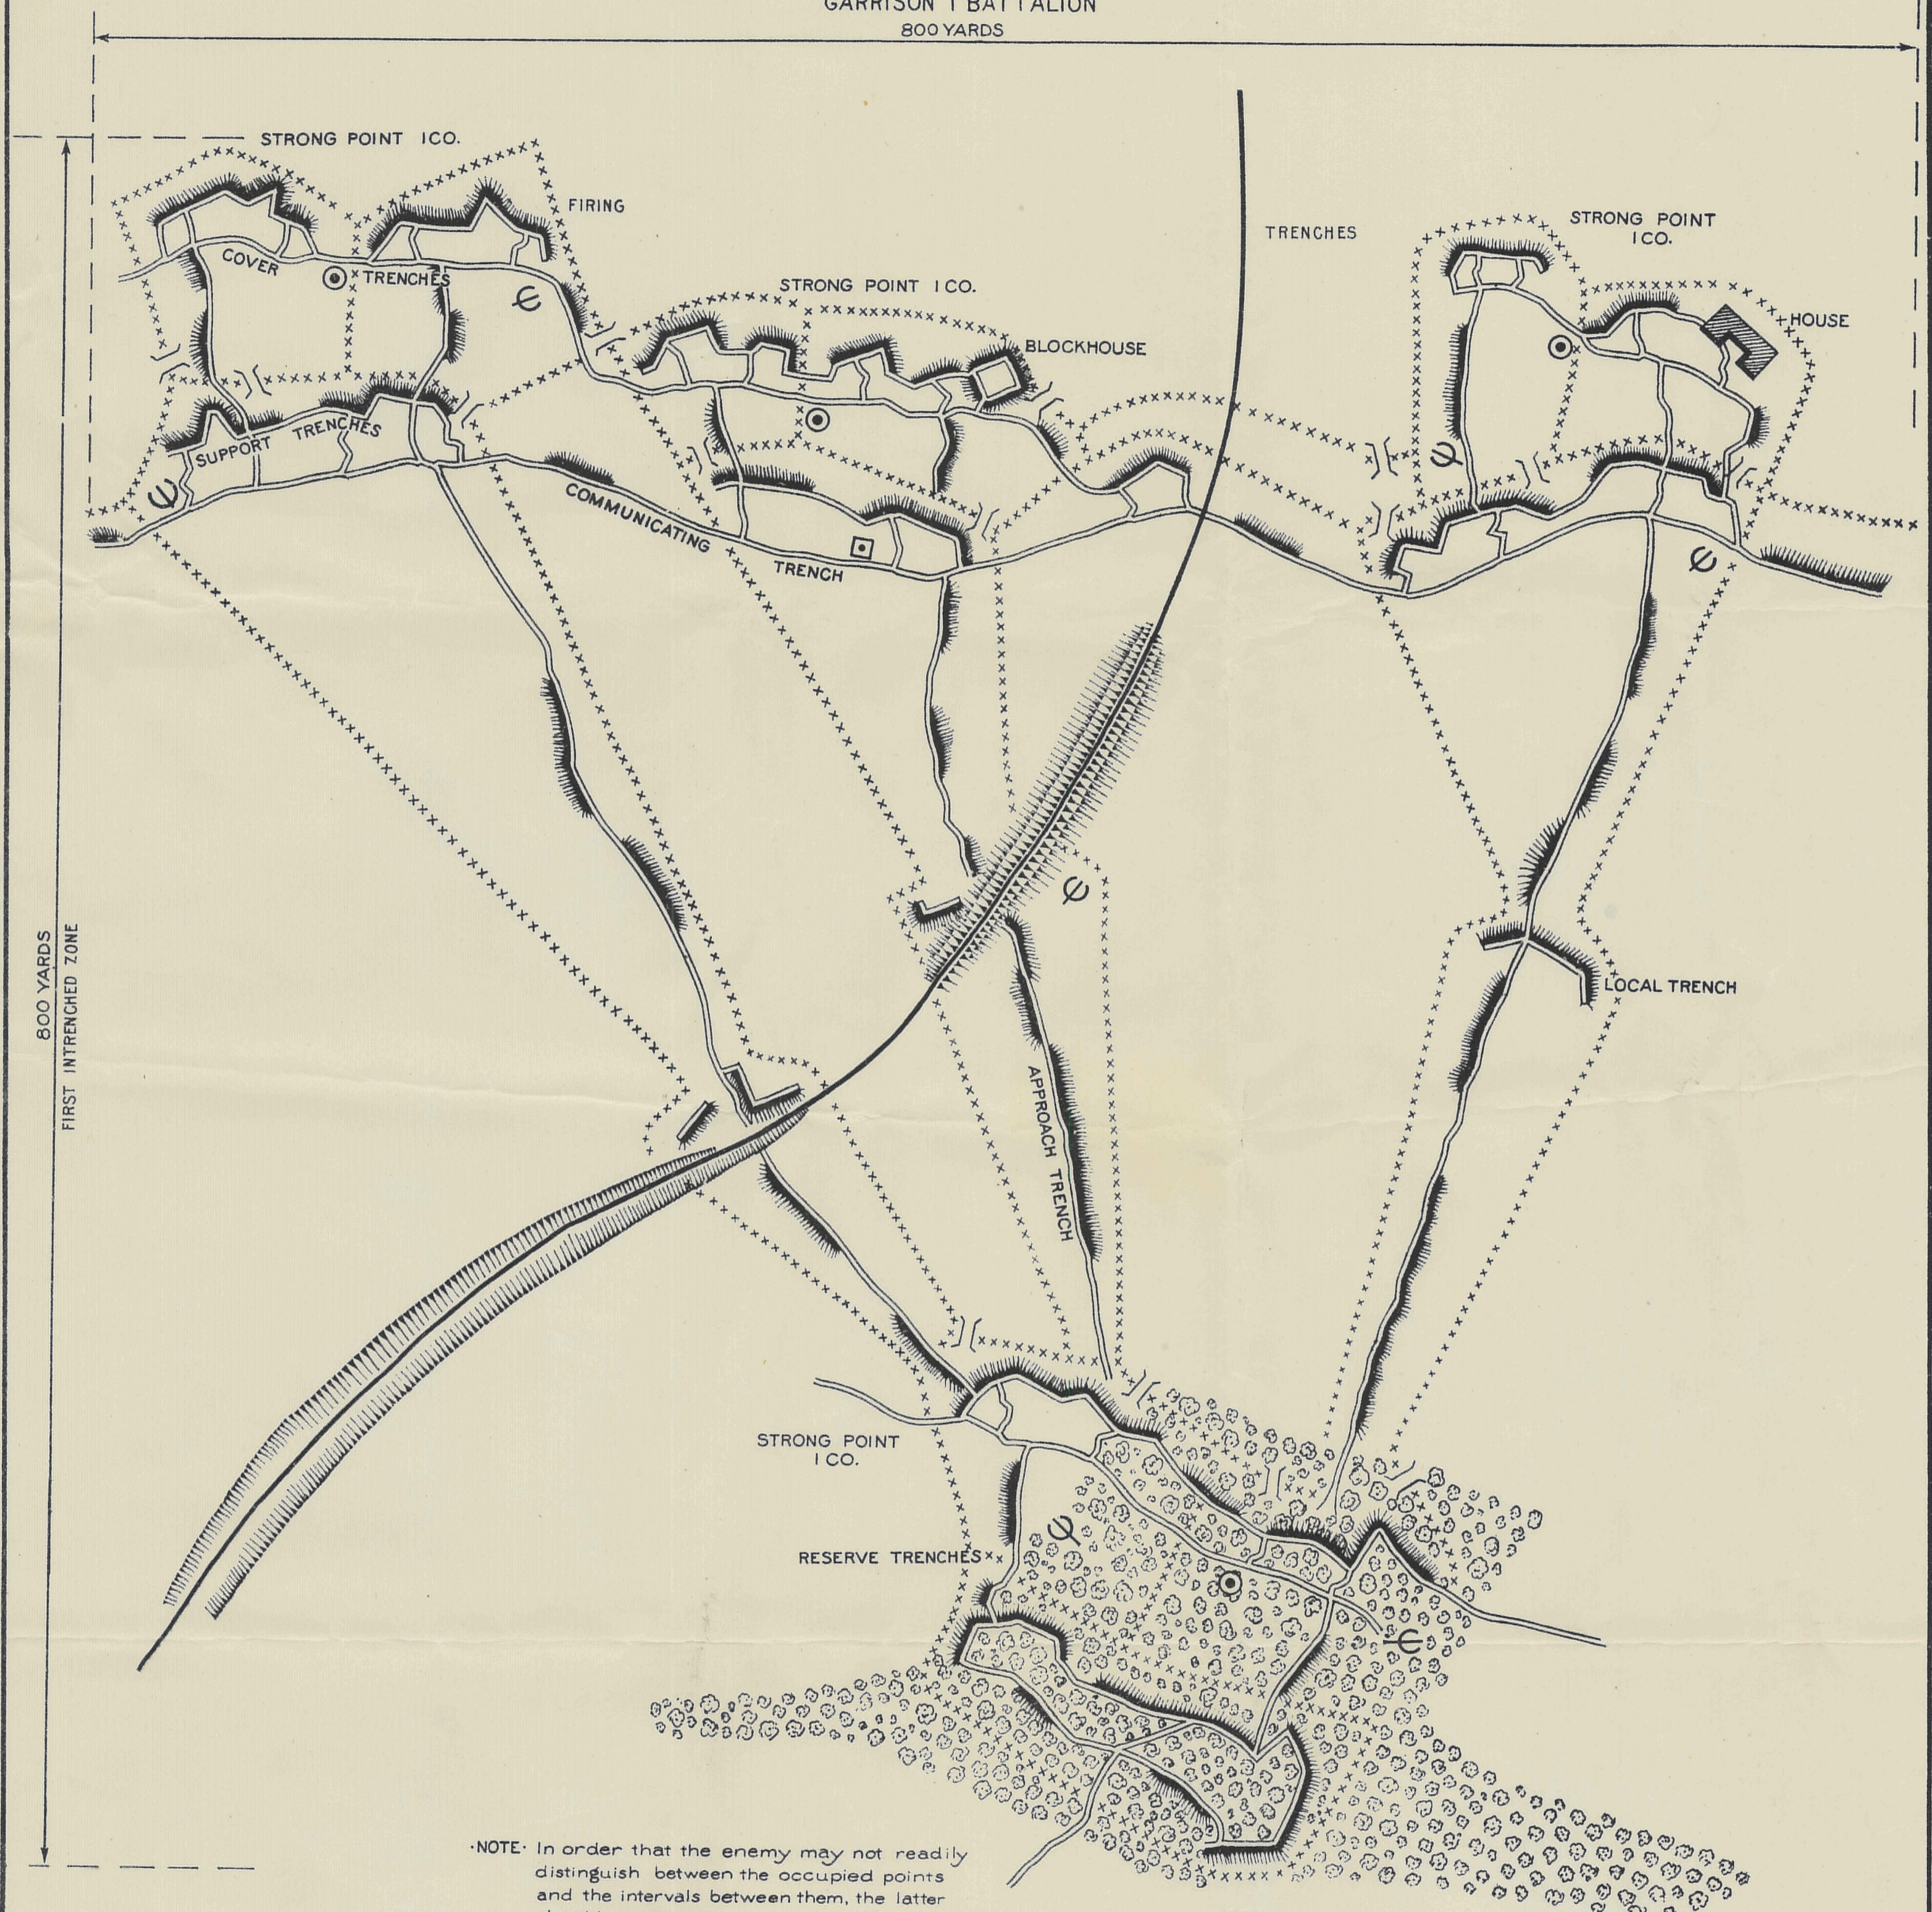

NOTE: In order that the enemy may not readily distinguish between the occupied points and the intervals between them, the latter should present the same appearance as the adjacent points. This is accomplished by digging dummy trenches or communicating trenches in the intervals.

SCALE
0 25 50 75 100 200 YARDS

- LEGEND
- Trenches arranged for firing
 - Approaches and Communicating Trenches
 - Machine Gun
 - Barbed Wire Entanglement
 - Passages
 - Co. Command Post
 - Bn. " "