

T216114

NAVAL POSTGRADUATE SCHOOL

Monterey, California



THESIS

AAW FIREPOWER INDEXING FOR NAVAL COMBATANTS

by

Alan Douglas Zimm

September 1983

Thesis Advisor:

W. Hughes

Approved for public release; distribution unlimited

Unclassified

SECURITY CLASSIFICATION OF THIS PAGE (When Data Entered)

REPORT DOCUMENTATION PAGE

READ INSTRUCTIONS
BEFORE COMPLETING FORM

1. REPORT NUMBER		2. GOVT ACCESSION NO.	3. RECIPIENT'S CATALOG NUMBER
4. TITLE (and Subtitle) AAW Firepower Indexing for Naval Combatants		5. TYPE OF REPORT & PERIOD COVERED Master's Thesis; September 1983	
7. AUTHOR(s) Alan Douglas Zimm		8. CONTRACT OR GRANT NUMBER(s)	
9. PERFORMING ORGANIZATION NAME AND ADDRESS Naval Postgraduate School Monterey, California 93943		10. PROGRAM ELEMENT, PROJECT, TASK AREA & WORK UNIT NUMBERS	
11. CONTROLLING OFFICE NAME AND ADDRESS Naval Postgraduate School Monterey, California 93943		12. REPORT DATE September 1983	13. NUMBER OF PAGES 200
14. MONITORING AGENCY NAME & ADDRESS (if different from Controlling Office)		15. SECURITY CLASS. (of this report)	
		15a. DECLASSIFICATION/DOWNGRADING SCHEDULE	
16. DISTRIBUTION STATEMENT (of this Report) Approved for public release; distribution unlimited.			
17. DISTRIBUTION STATEMENT (of the abstract entered in Block 20, if different from Report)			
18. SUPPLEMENTARY NOTES			
19. KEY WORDS (Continue on reverse side if necessary and identify by block number) Anti-aircraft defense systems, anti-ship warfare, anti-ship cruise missiles, air defense, naval vessels, firepower indexing, simulation, mathematical models.			
20. ABSTRACT (Continue on reverse side if necessary and identify by block number) A simulation is developed (Linear Anti-ship Missile Air Defense Simulation, or LASMADS) which models ship defenses under ASCM attack. Using this simulation, a firepower index is developed for current naval ships. The firepower index is used in a deterministic model which predicts the results of the ASCM-Surface ship engagement, and is responsive to the most important attack and defense characteristics and			

Item 20 (contd)

variables. Uses of firepower indexes as an operational planning tool is discussed.

Approved for public release, distribution unlimited.

AAW Firepower Indexing For Naval Combatants

by

Alan Douglas Zimm

Lieutenant Commander, United States Navy

B.S., University of California Los Angeles, 1972

Submitted in partial fulfillment of the
requirements for the degree of

MASTER OF SCIENCE IN OPERATIONS RESEARCH

from the

NAVAL POSTGRADUATE SCHOOL

September, 1983

ABSTRACT

A simulation is developed (Linear Anti-ship Missile Air Defense Simulation, or LASMADS) which models ship defenses under ASCM attack. Using this simulation, a firepower index is developed for current naval ships. The firepower index is used in a deterministic model which predicts the results of the ASCM-Surface ship engagement, and is responsive to the most important attack and defense characteristics and variables. Uses of firepower indexes as an operational planning tool is discussed.

TABLE OF CONTENTS

I.	INTRODUCTION-----	8
	A. FIREPOWER INDEXING-----	8
	B. POSSIBLE USES OF FIREPOWER INDEXING OF NAVAL SHIPS-----	10
	C. EXTENT OF THIS PROJECT-----	11
	D. OUTLINE OF THE GENERAL COURSE OF THE INVESTIGATION-----	13
II.	LINEAR ANTI-SHIP MISSILE AIR DEFENSE SIMULATION (LASMADS) -----	16
	A. PURPOSE AND OBJECTIVES OF THE SIMULATION-----	16
	B. BASIC ASSUMPTIONS-----	17
	1. Single Axis of Attack-----	17
	2. Time Intervals Between ASCM (TIMINT)-----	23
	3. Coordination of SAM Area Defenses-----	23
	4. Range of Detection-----	25
	5. Area Defense SAM Firing Doctrine-----	26
	6. Point Defenses-----	27
	7. Damage Assessment-----	29
	C. SETUP AND USE OF LASMADS-----	31
	D. SIMULATION OUTPUT AND DEMONSTRATION OF CAPABILITIES-----	43
	1. Output Options and Description-----	43
	2. Demonstration of Capabilities-----	56

III.	FORMULATION OF AN INDICATOR OF SHIP COMBAT POWER-----	61
A.	BASIC BEHAVIOR OF THE MARGINAL VALUES OF ADDITIONAL ASCM IN AN ATTACK-----	61
B.	DEFINITION OF THE BASE CASE SCENARIO-----	70
C.	MODIFICATION OF THE BASE CASE TO ACCOUNT FOR FIRST ORDER EFFECTS-----	73
1.	Time Intervals Between Attacking ASCM-----	73
2.	Variables Affecting Area Defense Performance-----	85
a.	Firing Doctrine-----	87
b.	SAM Probability of Kill-----	91
c.	Degradation Factor Due to Reduced Detection (Radar) Range-----	93
3.	Additivity of Forces and Formation Effects--	102
4.	Factors Affecting the Leakage Value-----	106
a.	Intercepts Factor-----	107
b.	ASCM "Difficulty"-----	107
c.	Layer Effect-----	108
D.	COMBINED AND SECOND ORDER EFFECTS-----	109
1.	Jamming-----	110
2.	Reduction of the Effectiveness of Command and Control-----	111
3.	Multiple Wave Attacks-----	112
4.	Decoys and Counter Targeting-----	115
IV.	THE AGGREGATE MODEL: Sums-----	118
A.	DETERMINATION OF BASIC SHIP VALUES-----	118
B.	DETERMINATION OF AGGREGATE FORMATION VALUE-----	120

1.	Capacity Value-----	120
2.	Collapse Value-----	123
3.	Leakage Value-----	123
4.	Extracting Results-----	124
5.	Testing-----	126
V.	SINGLE VALUE FIREPOWER INDEXES AND LANCHESTER EQUATIONS-----	129
VI.	CONCLUSIONS-----	131
	APPENDIX A: Suggestions for Further Work-----	134
	COMPUTER PROGRAM LASMADS-----	138
	COMPUTER PROGRAM SUMS-----	190
	LIST OF REFERENCES-----	199
	INITIAL DISTRIBUTION LIST-----	200

I. INTRODUCTION

A. FIREPOWER INDEXING

The use of a single numerical value as an approximation of the combat power of a military unit has been used with success in models of land combat. Usually this procedure involves assigning a firepower score for each specific weapon system available to the unit and summing these values to obtain a composite force "firepower index." This firepower index is considered to be representative of the military capability or value of the aggregate unit. In most operational large-scale ground combat models, these values are important inputs in determining engagement outcomes, assessing casualties and approximating the movement of the lines of battle. These values are also used in Lanchester-type attrition models with some success. Taylor [Ref. 1] and Dupuy [Ref. 2] give extensive examples and make use of firepower indexing.

The use of firepower indexing for naval applications has met with less acceptance. The reasons mostly revolve around the issue of the number of components which are aggregated into a unit. In an army formation, there are large numbers of individual systems. In reality, each of these individuals will perform differently, even given the same equipment and training; however, by the law of large numbers, the net

performance of the formation would be expected to approach a certain mean value. Thus, the assignment of a single value for a unit can be rationalized, and is probably necessary for many of the large-scale applications in which it is used.

In contrast, in a naval unit there are relatively few individual combat systems, far smaller numbers and redundancies, and a highly centralized (and vulnerable) control facility with relatively few decision makers. The law of large numbers is not applicable to an individual naval unit. Consequently, there is the probability of wide variance in the performance of similar units. In addition, naval units do not degrade gracefully when subjected to battle damage. While it is reasonable to assign an army unit a one or two percent degradation due to combat losses, a cruise missile or torpedo hit on a destroyer or frigate will usually exhibit an "all or nothing" result. A single hit can elicit a wide range of results. The numerically small number of hits in a naval engagement are another source of variance.

Such sources of wide variance discourage use of any scheme of battle results calculation which tends to give expected value results. With the smaller number of units, small number of systems on each unit, and relatively small number of attacking weapons, the determination of the results of naval combat has usually been approximated by using computer simulation. A high-speed computer can resolve an entire missile engagement for a battle fleet in extraordinary detail.

B. POSSIBLE USES OF FIREPOWER INDEXING OF NAVAL SHIPS

Even with modern high speed computers there are limitations on the utility of detailed simulations, particularly in wargaming on a global basis. For example, the Naval Warfare Gaming System (NWGS) installed at the Center for Wargaming at Newport, Rhode Island, resolves naval engagements by stochastic simulation using human input for most engagement/fire decisions. In large scale, global games involving thousands of units and large ratios of time compression the computer system can become overloaded. The requirement for human interaction slows the process and places disproportionate demands for human attention to resolve engagements on a unit level. In this application alone there is a need to determine expected combat results by a method other than direct simulation. Firepower indexing could be used to meet this requirement.

Determining combat results based on firepower indexes has benefits in addition to saved computer time. First, it tends to clarify the question of relative value: an index twenty percent larger in one vessel than another implies twenty percent more combat value, a useful and easily-grasped measure. Second, the process of determining the firepower index in itself tends to illuminate those factors which optimize the combat value of a unit, and thus can be reflected in ship design. Third, firepower indexing simplifies

the approach to "how much" questions: how much air defense capacity is necessary to deal with a given air threat? How much anti-submarine capability is required for an advance into a specific threat area? Fourth, the determination of firepower indexing opens the way towards the possibility of attrition modeling using differential, or Lanchester equations, with their great utility in campaign analysis.

C. EXTENT OF THIS PROJECT

Naval warfare can be divided into three generic areas of interactions: anti-submarine, anti-surface, and anti-air. Specific equipment on board a ship often is specialized to operate in one and only one of these areas: a surface-to-air (SAM) missile has no anti-submarine capability, just as a torpedo has no anti-aircraft value. In some cases, entire ships are designed with one area of combat in mind with only limited capabilities in the other areas. This suggests that firepower indexing of naval units should have separate values for each type of warfare. Otherwise, the specialized nature of most platforms would be lost in the aggregating process.

This research has been directed toward developing a firepower index for ships in the field of anti-air warfare. The specific work was performed by considering area and point defenses of ships when under attack by anti-ship cruise missiles (ASCM), and was formulated using the results of extensive simulation backed up by theoretical computation.

A second objective was to apply these firepower indexes into a deterministic model which could be used to give combat results. The objective was to make this model small and simple (and thus easily used on micro-computers) and yet responsive to the major variables in an attack.

This work is by its nature inaccurate and incomplete.

Inaccurate because the basic information required to develop "accurate" results is mostly classified. Even within the classified sources there is considerable debate as to system responses, kill probabilities, effect of jamming, and the entire range of performance-related parameters. Consequently, rather than attempt to prove "the number" a more useful approach would be to demonstrate and validate a method, incorporating sufficient flexibility in the approach to allow specific tailoring to the numbers of the specific situation. Consequently, the numbers for "generic" systems using values obtainable in open-source literature were used.

Incomplete because as with all models, only those combat variables which were assumed to have a direct, significant, first-order effect of the outcome of the engagement were investigated. The study was primarily hardware-oriented, since the equipment was assumed to be functioning at capacity and uniformly, and that performance was not degraded by communications or command-and-control difficulties. Some suggestions for incorporating these factors are discussed

but were not investigated. In addition, in most cases independence was assumed between the influence of the effects. The exploration of the various parameters, without the assumptions of independence (if visualized as a graph, the "space between the axes"), might be a fruitful area for later investigation.

Consequently, attention should not be concentrated on the individual numbers and combat results. Rather, the salient concepts are the utility of naval firepower indexing, and the realization that these indexes can be used in a simple deterministic model which can reproduce the combat results of more detailed simulations.

Because any accurate use of these models will require application of the methodology using "actual" performance figures, no attempt was made to prove out any particular set of numbers. For that matter, once the models were developed to the point where a reasonable set of results were attained, no further attempt was made to fine-tune the parameters in order to achieve a close fit along all dimensions of investigation. Instead, the concentration is on the methodology. With the concepts and results presented, actual system performance values can be used to generate "real" values.

D. OUTLINE OF THE GENERAL COURSE OF THE INVESTIGATION

There were four basic steps taken in the course of the research.

The first step was to create a simulation of the ASCM-surface ship combat. The simulation was designed to incorporate most of the major factors influencing the engagement. Because of the number of variables to be investigated, and the concomitant requirement for a very large number of runs, the simulation was simplified as much as possible in order to reduce computer run time.

The second step was a combination of two processes. The simulation was exercised extensively to determine the response of the results of the engagement when individual parameters were varied. A base-case engagement was stipulated, and experiments were run. For instance, to determine the effects of radar detection range, scenarios were replicated using progressively longer detection ranges.

Concurrent with the experimentation was application of theoretical calculations. Theory was used to both identify those parameters which would have first-order effects on the result, and to predict and justify the results of the experiments.

Once a thorough understanding of the problem was achieved, the third step was to isolate and quantify those factors having first-order effects.

The fourth step was to combine these values into a simple, deterministic model. The results of the model were compared to the results of the simulation to test for comparability of results.

The area of firepower indexing for naval ships is a large and relatively unexplored area. This work only begins to attack the problem. Consequently, suggestions are included for improvements to the work already performed, and areas needing additional treatment will be indicated. These comments are included in the body of the paper and formal recommendations summarized in Appendix A.

II. LINEAR ANTI-SHIP MISSILE AIR DEFENSE SIMULATION (LASMADS)

A. PURPOSE AND OBJECTIVES OF THE SIMULATION

Most simulations of air defense are geometrically detailed, "next-event" type simulations. They account for, in precise detail, every event which could possibly require or allow action. Through attention to detail they are very precise simulations.

For the purposes of this research there were several disadvantages to most of these simulations:

* SIZE: Most of the programs run into the tens of thousands of lines, and are usually designed for one specific purpose. The size and complexity of the programs precluded either tailoring output or modifying the program to explore parameters different from those specified originally.

* RUNNING TIME: Performing 1000 replications of an ASCM attack on a typical battle group using one of the current air defense simulations on an IBM 360 (or similar generation computer) will take on the order of three to six minutes of running time. To explore the dimensions of the problem would require several hundred runs. Consequently, a simulation requiring less CPU time was desirable.

* SHIP DAMAGE: Many of the simulations do not incorporate battle damage or factor in immediately the effect of the damage on the air defense situation.

* EASE OF SETUP/FLEXIBILITY OF OUTPUT: Many simulations require an extensive amount of set-up activity, and are restrictive in the amount and types of information available in output. The large and varied number and types of scenarios required a simulation which could be easily and rapidly set up and would be compatible with a wide variety of outputs.

Consequently, a new simulation was written to accommodate those ends.

B. BASIC ASSUMPTIONS

1. Single Axis of Attack

ASCMs launched by a single unit or several units co-located will approach the target from a single direction. For the target unit the geometry of defense can be reduced to a one dimensional problem with the distance from target the parameter. This dimension will be referred to as the RANGE AXIS. By reducing the problem to a single geographic dimension (range), there is a great simplification in the program and reduction in the required calculations. A major reduction in program run time over three dimensional simulations was achieved: instead of three to six minutes to resolve an attack on a battle group, the LASMADS simulation run time was on the order of five to ten seconds.


Another assumption was that the focus of the attack would either be the high value unit(s) at or near the center of the formation or the centroid of the formation

itself. By this assumption most of the ASCMs can be considered to be following the same flight path from launch point toward the center of the formation.


The requirement of the simulation would then be to determine the positioning of the ships in the formation along the range axis. The procedure would be to plot the formation two dimensionally; determine the direction of the attack; and to project the ships in the formation onto the axis of attack so that the same amount of their missile envelope which would be available to intercept missiles targeted against the high value unit extends in front of the high value unit.

Figure 1 is an example which demonstrates this procedure for two ships, the High Value Unit (HVU) and a SAM firing ship. The SAM missile ship has a missile with a maximum intercept range of 75 nautical miles (nm). It is positioned away from the HVU and off the axis of attack a sufficient distance so that only 50 nm of the missile envelope is available to defend the high value unit.

Consequently, the SAM missile ship should be placed on the range axis 25 nm further away from the origin of the attack than the HVU. If a convention is used where the attack always comes from the right of the range axis, and the HVU was (arbitrarily) assigned the position of 100 nm along the range axis, the SAM missile ship would be placed at position 75 nm. In that position 50 nm of the missile

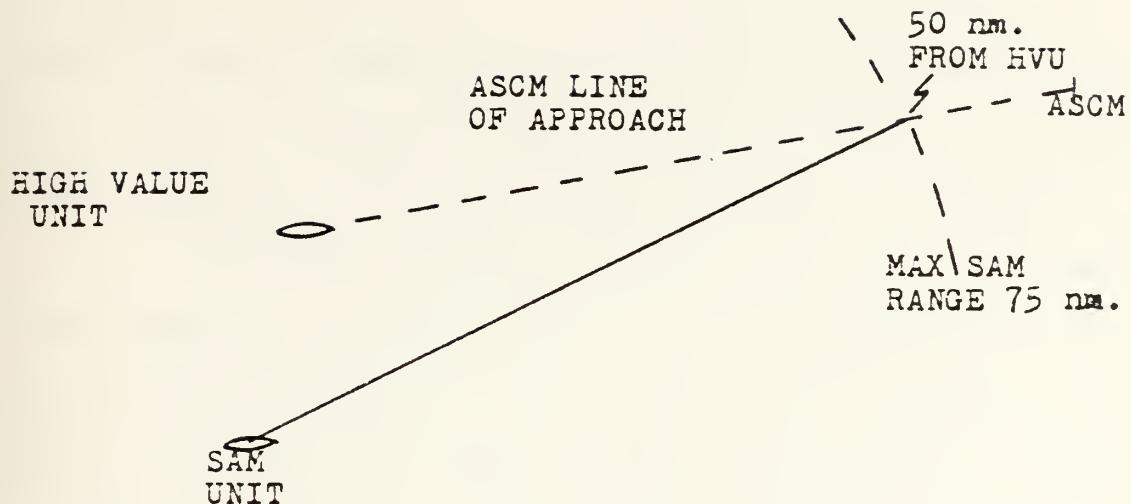

A. Three Dimensional geometry of attack

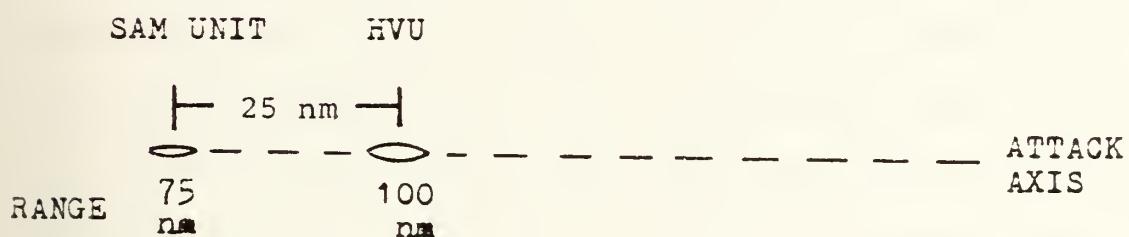

B. Equivalent one dimensional representation

Fig. 1. Procedure for Reducing a Two-Dimensional Formation to One Dimension, for use in the LASMADS Simulation.

envelope would be available to protect the high value unit, while a missile actually targeted against the SAM ship would still be subject to the full 75 nm envelope of the SAM.

An additional factor to be considered is the effect of the intercept angle on the effective kill probability (P-K) of the defending missile. The fusing of SAM warheads is usually optimized for a shallow angle of intercept; intercepts at angles greater than, for example, 40 degrees, would show a smaller kill probability.

To take this into account, besides indicating the position of the ship, the axial position of the ship is assigned: whether it is on the attack axis or to the left or right (in effect dividing the defense into three planes). Ships on the plane to the left of the attack axis are coded with a "0"; those on the attack axis are coded with a "1"; and those on the plane to the right of the attack axis are coded with a "2". This procedure is illustrated in Fig. 2. An off-angle degradation factor (OAEG) was included as a specifiable parameter. If and only if the incoming ASCM had as a target a ship on a plane different from the plane occupied by the ship engaging that ASCM, an angled intercept was assumed. The P-K was reduced by the off-angle degradation factor, or twice the OAEG if the target and shooter were separated by two planes. For this work an OAEG factor or 0.15 was used.

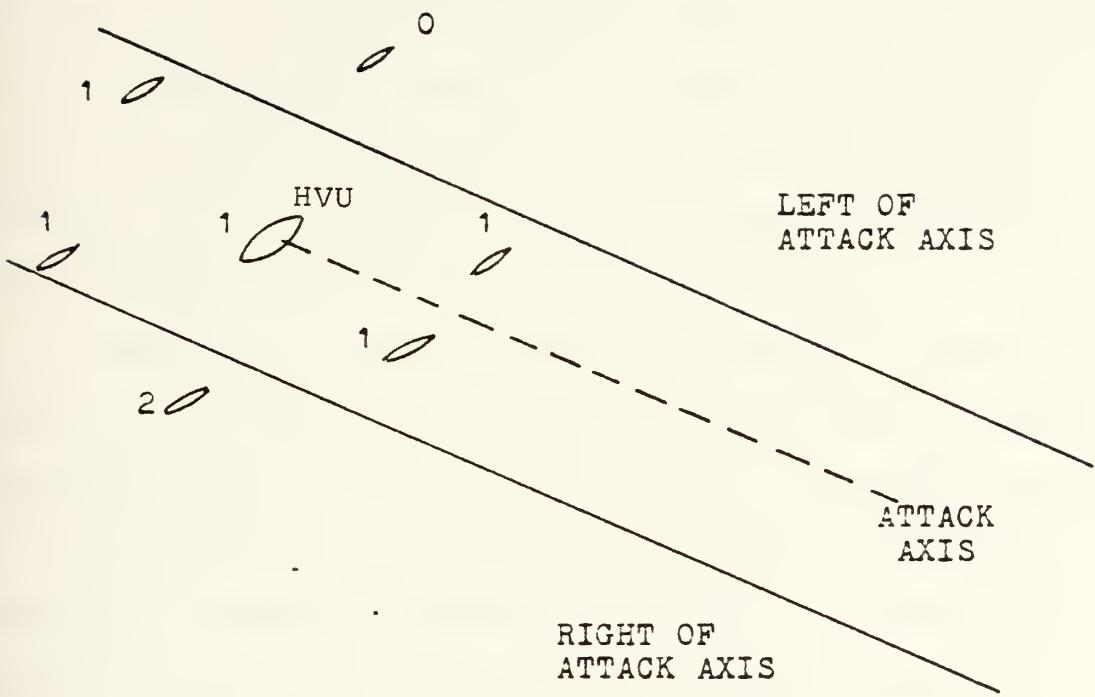


Fig. 2. Coding of the Plane Occupied by Ships in the Formation Relative to the Attack Axis.

This procedure of reducing the air defense of a formation into a one-dimensional problem is computationally attractive; however, the question remains as to what is lost from the simulation. In situations where the missile is detectable and intercepted at great ranges, very little is lost. For example, the usual U.S. battle group screen distance from the CV is 5 nm; intermediate range SAMs can intercept at 25 nm or more. At these ranges linearizing the problem had little impact on the results.

However, the maximum detection range of sea-skimming ASCMs is on the order of 15-22 nm, and first SAM intercept optimistically at 7-11 nm. A ship firing across one plane for an intercept at 5 nm will, in the LASMADS simulation, effectively receives an unwanted, artificial "bonus" of about 40% in effective SAM relative velocity due to the suppression of the off-axis geometric effects. This effect will be evident at intercept ranges less than 10 miles, but is insignificant beyond that. This will lead to more intercepts in the LASMADS simulation than would be actually possible. It should be noted that this effect is only present for engagements which involve ships and targets on different planes; since most of the ships will be considered to be on the axis, and most of the ASCMs targeted against them, this calculational error is not present for the majority of the engagements. However, as discussed in the

body of the paper, the change in number of possible intercepts is quantifiable and can be compensated for in the final result.

A further improvement to the LASMADS program would be to allow missile ships to only engage sea-skimming missiles which are on the same plane as the defending ship.

2. Time Intervals Between ASCM (TIMINT)

The LASMADS simulation models the incoming ASCM attack as a stream of missiles arriving with a constant interval between missiles. This is considered to be a reasonable model of ship-launched attacks, and serviceable when considering air-launched ASCM. The advantage of this formulation is that it is an easily-quantifiable variable, easily understood and translatable in terms of equipment capabilities. This is particularly important because of the very strong dependence of defending ship performance on TIMINT.

3. Coordination of SAM Area Defenses

Area defense missile systems are considered to be perfectly coordinated in the LASMADS simulation. Fire control channels are ordered by maximum to minimum reach along the range axis. When an ASCM penetrates the envelope, the first available fire control is assigned to engage. The missile is engaged by only that fire control--there is no possibility of an additional fire control simultaneously engaging the ASCM. When an ASCM is destroyed and the fire

control engaging it becomes available, it will be assigned automatically to the closest unengaged ASCM within its envelope.

The result is a simulation which will result in the best possible performance by the defending forces.

There is an additional benefit gained in the model by this formulation of the assignment of defensive assets and the stream nature of the attack. In most next-event type simulations, the dimension which the simulation moves along is time. The time of every event is stored in the computer. When that time is reached, the computer then must evaluate that event to decide if action is required or allowed. As a result, many events are "null" events which are evaluated as having no effect on the engagement.

For example, in a next-event type simulation when an ASCM enters each SAM envelope, the simulation must stop and evaluate that event for possible action. When the ASCM is already engaged, or the ship is destroyed, or all the ship's batteries already engaged, that event becomes a "null" event. The only thing affected is that additional computer time is required to evaluate the event.

In LASMADS, the dimension along which the simulation progresses is the next ASCM in the missile stream. The missile moves to an envelope, is engaged, and then moves directly to the intercept event. The missile is detected,

a battery is assigned to engage, the intercept is evaluated and re-engagement effected as necessary until the ASCM is engaged by point defense systems and hits the target. No extraneous event checks are required. During the flight time of the SAM, the ASCM might enter several envelopes; however, since the missile is already engaged, no event checks are required. Availability of fire control and self defense batteries are accounted for by simply recording the end time of engagement, and preventing the battery from engaging the next ASCM until that time is elapsed.

There are two advantages to this formulation. First, there is a major reduction in the run time required for the simulation, estimated to be about 35%, since the null events need not be evaluated. Second, since the incoming missiles are evaluated sequentially, the hit percentage resulting from that missile number in the stream is also the marginal value of adding an additional missile to the attack. Consequentially, it is possible in this simulation to run one attack of, say, 210 incoming ASCM and know the marginal value of each of the missiles. This is a decided benefit both in computer run time and in conceptualizing the results.

4. Range of Detection

A cookie cutter detection model was used with the range of detection determined by the operator in the scenario setup. The range of detection is determined from each ship individually; consequently, if an incoming ASCM is detected

by the outermost ship, only that ship is considered to have the contact and only that ship can engage the missile.

Altitude of the missile is not specifically modeled in the simulation. The operator determines the range of detection of the ASCM by his calculations or data external to the program, based on equipment performance, radar cross section, environment, and ASCM altitude. He inputs this value as the radar range to be used in that scenario (the input variable RADAR).

The range of detection is uniform over all the ships. There is no allowance for different radar performance.

5. Area Defense SAM Firing Doctrine

The SAM firing doctrine for area defense was "shoot-look-shoot shoot." When the firing range was great enough that if the SAM missed, there would be another firing opportunity by the same ship, then only one round was fired. If the range was so short that only one firing opportunity remained, then two rounds were fired. In the two round salvo, the possibility of success by each of the missiles was considered to be independent.

This firing doctrine was selected as a compromise between the demands of a high kill percentage for self-defense and the requirement to conserve limited amounts of ammunition. The optimality of this doctrine is discussed later in the paper.

The simulation does not allow chasing shots. A minimum SAM intercept range is specified for area defense weapons and firing is not allowed if the intercept point would occur at a range less than that specified minimum.

6. Point Defenses

There are four different types of point defense systems incorporated into the simulation:

PD SAM - Point defense surface-to-air missile,

similar to NATO sea sparrow, BPDMS, or

SAN-4.

MC GUN - Medium caliper gun systems, similar to
5" to 76mm.

CIWS - Close in weapon systems, similar to the
Phalanx or the Soviet 30mm gatling system.

ECM - Electronic countermeasures, a combination
of close-in chaff, deceptive repeating
(RGPO) and jamming.

A single P-K is input by the operator for the kill probability of that class of weapons vs the incoming ASCM class. No distinction is made between different marks or mods of systems or different effectivenesses of systems within a class--for instance, the 5" gun will have the same kill probability as the 76mm.

Every missile is considered to have been detected in time to be engaged by the full range of point defense systems

on the target ship. However, the point defenses of a ship are not allowed to engage missiles which are targeted at a different ship.

All ships are considered to be on such a course as to allow the largest number of point defense systems on the target ship to engage. The duration of the attack is assumed to be so short that the ship does not have sufficient time to turn to present other batteries in the event that some of the defenses are destroyed or completely expend their ammunition.

The point defense routine in the program is called ENDGAME. It sequences the batteries to engage incoming missiles in the order of the range of the system with longest range systems engaging first. The first system to engage is PD SAM, followed by MC GUN, CIWS, and ECM. Times of engagement and cycles times between engagement are accounted for, preventing one battery from engaging two ASCM simultaneously. If there are two of a type of battery available, only one battery will be allowed to engage an individual ASCM.

ECM is considered to be last in the engagement queue, even though its range of engagement exceeds the range of other systems. The rationale is that an ECM "kill" does not involve the physical destruction of the incoming missile but rather its misdirection. It is assumed that this misdirection is so small that the other point defense systems would still be cued to engage the missile.

The cycle time between engagements is an input variable and is the same for each class of system. For ECM, a system time for a typical RGPO cycle is used. The assumption is that the ECM will only be able to engage one seeker at a time. However, by the queueing process in the program, that cycle will not be started on missiles which are destroyed by another AD or PD system. In the case of incoming COSRO (CONical Scan Range Only) seekers where many missiles can be engaged simultaneously by the ECM, a COSRO option is provided in the set-up. Essentially, this option sets the cycle time of the ECM to 0.0.

In addition, the ECM system is assigned a P-K, like any hard kill system. This is a bit questionable since usually the seeker is susceptible to electronic countermeasures or it is not, with no middle ground such as is usually represented by a probability. Thus, the system used in the program is a rough model and open to improvement.

7. Damage Assessment

The object of the damage assessment portion of the program was to provide real-time degradation of the defensive capabilities of a ship subject to battle damage. Consequently, the program concentrates on weapon systems, weapons controls and magazines, and does not address propulsion or seaworthiness.

A basic assumption made is that area defense SAM systems are sufficiently isolated from one another that a

cruise missile will only destroy one installation per hit, regardless of the weight of warhead and residual fuel. It is also assumed that the warhead will be large enough to eliminate the entire system if it hits in that part of the ship. There is no allowance for systems which may be degraded, but still capable of performing some functions. Point defense systems are treated probabilistically in that each missile hit has a 33% (20% in CVs) of destroying each point defense system.

Each penetrating missile is assigned a probability of hitting a part of the ship, as follows:

- * There is a 5% chance of inflicting no area defense SAM system damage.
- * There is a 15% chance of disabling all systems (CIC or catastrophic hit).
- * There is a 40% chance of hitting the forward area defense installation.
- * There is a 40% chance of hitting the after area defense installation.

In any case, the entire ship is considered to be out of commission on the third hit and all systems destroyed with the exception of U.S. aircraft carriers.

No attempt is made to tailor the damage to the resistance of the individual ships; a Kirov will be placed out of commission after the same number of hits as a Knox class frigate. This is an obvious area for improvement.

C. SETUP AND USE OF LASMADS

In the LASMADS simulation all the parameter changes, ship positioning and other adjustments are made in a designated section in the program. The program is then compiled and run.

For the IBM 3033 at the Naval Postgraduate School the set-up commands for the workspace are:

```
DEFINE STORAGE 1M
```

```
I CMS
```

```
GLOBAL TXTLIB FORTMOD2 MOD2EEH IMSLSP NONIMSL
```

```
FILEDEF 06 (followed by either printer or disk  
designation)
```

The program listing included in this paper runs to approximately 2500 lines. However, this is deceptively large. A large number of the program lines are comments, included for clarity. Approximately 1100 of the lines are individualized ship initialization section. Since most of that work is repetitive, it could be compressed into a subroutine; however, it was not in order to allow clarity, to simplify the debugging procedure, and to allow easy adjustments of the capabilities of the ships. The actual working portion of the program, exclusive of input, is approximately 700 lines. Consequently, it is probable that the program could be run on a microcomputer.

Running time for a single iteration of a large attack on a battle group runs in under one second and, thus,

LASMADS itself might be a candidate for combat resolution for large, global wargames.

The only library subroutine used is LRND, a routine for generating uniform random numbers. It is used in the subroutine ROLL.

Lines 225-231 of the program listing permit using up to three loops in the program. The loop integer variables available are AA, TT, and SS. The loop statement numbers are 5, 6, and 7. The bottom of the loops are lines 2478-80. The purpose of these loops are to allow sequential tests, varying up to three variables. For example, the same battle group can be tested with varying TIMINT, radar range and/or composition of attack. When not used, these steps are commented out of the program. In various places, examples have been left in the program listing showing this technique (see lines 299, 308, 360).

Line 280 commences the normal operator input section to tailor the individual scenario.

Line 286 allows input of the number of repetitions of the scenario. Larger number of repetitions reduces the variance of the results. Two hundred repetitions was found to be sufficient when only one ship was defending; battle groups consisting of six or more ships should use over 500.

Line 289 requires the identification of the nationality of the defending ships. At this time, the program only differentiates between US and Soviet ships. The only change

incorporated was in the SAM missile velocity (see line 468). However, this technique could be used to further tailor equipment capabilities and performance to national standards.

Line 293 requires the total number of ships and decoys used in the scenario. In this case, decoys are designated offboard mobile decoys deployed in advance of the attack. Chaff deployed by ships to counter individual ASCMs is not considered as a decoy in this application. The total number of ships and decoys allowed is 20; however, the only thing that limited this is the dimension statements on the data storage and so this could be easily expanded if desired.

Line 296 requires the total number of attacking ASCM. The maximum number allowed (again, a dimension statement limitation) is 210.

Line 302 requires the class of the incoming ASCM. The program incorporates three classes:

- #1 is a mach 0.8 sea skimmer;
- #2 is a mach 2.0 intermediate altitude missile;
- #3 is a mach 3.5 high altitude missile.

Each of these classes have separate P-K parameters and cycle time responses of the defending systems programmed.

Line 306 requires the time interval between incoming ASCM. The program assumes the interval between each missile is the same. A negative number should not be input.

Line 312 allows use of a radar activation delay. If this option is chosen (by setting `DELAY=1`), the defending vessels radars will not be on when the attacking ASCM reach the outermost reach of the ships' radars. The radars will be activated at a time `DT` seconds later, where `DT` is an input parameter (line 316). This option simulates a formation which is electronically silent and only activates radar at some warning such as an ESM intercept of a seeker head activation. Note that the delay time `DT` is counted in seconds starting from the usual cookie-cutter range of intercept for the first missile in the attack queue. Also, if the missile is scheduled to impact on the target before radar turn-on, the missile will still be engaged by the point defenses of the target.

Line 319 allows use of an option which incorporates detection, assignment, and handoff time delays. The program normally assumes perfect command and control of these elements. When this option is invoked, at each detection, assignment, or handoff there is a probability (input at line 323) that the action will take more time than optimum; the additional time is determined by multiplying a uniform random number with the maximum delay time (input at line 326). While this option has been successfully run, it has not been thoroughly debugged in its present form.

Line 329 allows the option of a given percentage of ASCM (input at line 333) to entirely slip through the area defenses and go directly to engagement by the point defenses of the targeted ship.

Line 336 allows the attacker to engage in two waves. Each wave is separated by a time input on line 340. Regardless of the time of separation, all ships in the defending formation are still considered afloat for targeting by the second wave. The damage on area and self defense systems remains. The effect of the time separation between the waves is to allow the defending systems to complete previous engagements and to be prepared to engage the following ASCMs.

Line 343 allows an option where targeting of the ASCM is adjusted towards the higher value targets. The usual method of assigning missiles to targets in the simulation is probabilistically, with probability in direct proportion to the ship's radar cross section. Line 343 allows selection of an "augmentation option" by assigning AUG = 1.

When the augmentation option is selected, a percentage of the missiles (input on line 346, HVTPER) are retargeted to higher value targets. The value of a ship as a target is determined by the operator. The priority of targeting is assigned by the order in which it has been input on lines 369-90. The amount of augmentation is determined by multiplying a uniform random number times the maximum percentage

that the missile targeting may be augmented (input on line 349, HVTVUL).

For example, assume there is a 6 ship battle group. The operator assigns the most valuable target as Ship #1, the next valuable as #2, and so on. A ASCM, originally targeted against Ship #5, is allowed augmentation by the random draw. The maximum degree of augmentation (input by the operator) in this example is 0.50. So, a missile may change targeting by a maximum of $(6 \times .5) = 3$ places up the queue. An additional random number is drawn to determine how much of this possible augmentation it may use. The random draw is a .33, so it is augmented $(3 \times .33) = 1$ place up in the value queue; consequently, the target is shifted from #5 to #4.

This procedure allows great flexibility in creating targeting distributions. Table 1 demonstrates the results of exercising various combinations of parameters. In the example, there are five ships in the targeted group, each with the same radar cross section. The normal targeting of 100 ASCMs is shown in Case 1, i.e., a uniform distribution. Cases 2 through 7 show the effect of different values of HVTPER and HVTVUL. Note that the program truncates decimals, so that a move up the queue of 1.99 places results in a move of only 1 place up.

TABLE 1
DEMONSTRATION OF TARGET AUGMENTATION OPTION

CASE NUMBER

	1	2	3	4	5	6	7
HVTPER	0	.5	.5	.75	.75	1.0	1.0
HVTVUL	0	.5	1.0	.5	1.0	.5	1.0
SHIP 1	20.0	28.1	40.2	31.9	50.0	35.7	60.3
2	20.0	20.1	17.8	20.1	17.1	20.1	16.0
3	20.0	20.0	16.1	20.1	14.2	20.0	11.8
4	20.0	18.1	13.9	17.1	10.6	16.0	8.0
5	20.0	13.8	12.0	10.9	8.1	8.2	3.9

Distribution of Targeting

100 missiles against 5 targets (equal radar cross section)

500 replications

This procedure is a bit tortured and cannot be justified in terms of modeling the actual targeting process. However, models of the targeting process are not available on the unclassified level. Consequently, this model was developed with the object of providing the maximum amount of flexibility for the operator in generating targeting distributions. By adjusting the parameter values, almost any desired targeting distribution can be realized. In the lack of a realistic targeting model, the decision was to opt for the ability to replicate almost any targeting scheme.

Line 352 allows the choice of an option to allow the ECM equipment the capability of multiple simultaneous engagements. This option is invoked by setting COSRO equal to 1. Invoking this option results in setting the cycle time of ECM engagements to 0.0 seconds.

Line 358 requires the input of the maximum detection range of the ships' radar against the ASCM. The program uses a cookie-cutter detection model with detection at that range from the detecting platform. This is an operator decision and should account for the power of the radar, the environment, the cross-section of the ASCM, altitude, and other factors of importance. When using Class 1 ASCMs (sea skimmers), the maximum detection range should be set at under 22 nm.

Line 366 requires the input of the required tracking time of the target until the ship can hand off the target to the

fire control systems. This tracking time is the same for all ships.

Lines 368 through 442 require the input of the ship class, position of the ship on the range axis, and whether the ship is located at the left, right, or center plane of the attack axis. The center plane will usually be referred to as "on" the attack axis.

The following ship classes are programmed:

- #1 US Carrier
- #2 CGN 38
- #3 CG 26
- #4 CG 16
- #5 DDG 2
- #6 DDG 37
- #7 DD 963
- #8 FFG 7
- #9 FFG 1052
- #10 TICONDEROGA (with VLS)
- #11 KIROV
- #12 KIROV (with UDALOY PD SAM)
- #13 KIEV
- #14 BLK COM 1
- #15 SOVREMENNYY
- #16 UDALOY
- #17 MOSKOVA

#18 KARA
#19 KRESTA II
#20 KYNDA
#21 MOD KASHIN
#22 KRIVAK
#23 AUXILIARY
#24 CGN 36
#99 DECOY

Ships should be listed by their code number in order of value from high value to low. The value criteria is assigned by the operator and should be roughly the same as the targeting priorities of the attacking force.

The ships, in most cases, are considered to be with their planned weapons suites including, for many of the U.S. ships, CIWS and ECM systems which are scheduled for installation but not yet in place. The conspicuous exception is the DDG 2 class, which was retained with its current armament to check on the degradation of ship values for vessels with little point defense capability.

Table 2 is a listing of the weapons mounted on each ship class which can bear on the attack axis.

For the TICONDEROGA class, the vertical launch system is used. However, the full capabilities of the AEGIS system is not modeled for security reasons. Material published in open-source literature allowed the assignment of 18 fire

TABLE 2

WEAPONS SYSTEMS BEARING ON ATTACK AXIS

U.S. SHIPS

CLASS	#	#1 BATS	#2 BATS	#PD SAM	#MC GUN	#CIWS	#ECM
CV	1	0	0	2	0	2	1
CGN 38	2	0	3	0	2	1	1
CG26	3	2	0	0	1	1	1
CG16	4	4	0	0	1	1	1
DDG2	5	0	2	0	2	0	0
DDG37	6	2	0	0	1	1	0
DD963	7	0	0	1	2	1	1
FFG7	8	0	1	0	1	1	1
FFG1052	9	0	0	1	1	0	1
CG47	10	0	18	0	2	1	1
CGN38	24	0	4	0	2	1	1
SOVIET SHIPS							
KIROV	11	12	0	2	2	2	1
KIROV MOD	12	12	0	6	1	2	1
KIEV	13	0	2	1	2	2	1
BLK COM 1	14	6	0	2	1	1	1
SOVREM-							
ENNYY	15	0	3	0	2	1	1
UDALOY	16	0	0	2	2	1	1
MOSKOVA	17	0	2	2	1	0	1
KARA	18	0	1	1	1	1	1
KRESTA II	19	0	2	0	1	2	0
KYNDÄ	20	0	1	0	0	0	0
MOD KASHIN	21	0	1	0	2	0	0
KRIVAK	22	0	0	2	2	0	0

control channels as the capability of this system. Similarly, little is known about the capabilities of the TOP DOME systems installed on the KIROV and a follow-up cruiser class (BLK COM 1, an acronym for "Black Sea Combatant Ship Number 1" also identified in some U.S. sources as the KRASINA class). As a rough estimate, 6 channels per system were assigned as the capability of this system.

Assignment of the ship position on the range axis is performed as described above. All positions should be positive real numbers in nautical miles.

How far away from the direct line between the firing ship and the high value unit that a ship must be before it is considered to be on a different plane is dependent on the performance of the missile. If there is little degradation of the kill probability as the incidence angle increases, it is possible to move the criteria for an off-axis ship further out. This effect should be balanced against the geometric/relative velocity effects.

This criteria was not fully investigated in this study. As a approximation, a criteria of 2.5 nm off the axis of attack was used in the test program. Refining the result of the effect of firing on crossing targets is a place where the LASMADS simulation can be improved and is subject for further research.

Lines 464 through 504 contain the standard setup values used in the base case study. They may be changed by the operator if desired. They are placed last in the setup section since they probably will not be changed as often as the actual scenario composition. Values contained herein include:

- * ASCM velocity (CMVEL for each class, CMVOL for the class used in the run);
- * Surface to air missile velocity (SAMVOL);
- * P-K for each weapon vs each missile type;
- * Minimum and maximum intercept ranges for the long and intermediate range area defense SAMs;
- * Cycle time for each weapon system (defined as that amount of time required from the end of one engagement to commence firing for the next);
- * Kill assessment time (ASSES);
- * Time between missiles in a two-SAM salvo (SALVO);
- * Off-angle degradation as discussed above (OADES);
- * Radar cross section of deployable decoys (DXCS).

D. SIMULATION OUTPUT AND DEMONSTRATION OF CAPABILITIES

1. Output Options and Description

Line 456 allows the user to specify the desired output. There are four output options currently programmed:

#1 produces only a one-page summary of the engagement;

#2 produces the summary and a printout of the probability of hit of each missile, cumulative hits up to that missile, and percentage of hits through that missile;

#3 produces the summary, the missile data, and a plot of the percentage of hit for missiles 1 through 120;

#4 generates only the capacity and collapse values.

Tables 3, 4, 5, 6, 7, 8 and 9, and Figures 3, 4 and 5 are demonstrations of the capability and output of the LASMADS simulation.

Table 3 shows the basic output. Most of the entries are self-explanatory. All times are in seconds and all distances are in nautical miles.

In the "Result of the Engagement" section, all values are averaged over the number of replications to give expected value results.

In the "Average Total Ships OOC" line, a ship is considered out of commission (OOC) if it has sustained three or more ASCM hits, regardless of the actual damage caused by the hits.

"Area Def Rounds Destroyed" is calculated by summing the number of SAM missiles in magazines destroyed by missile hits, missiles on ships which have sustained a CIC hit and thus do not have the capability to fire the missiles, and missiles remaining on ships sustaining three or more ASCM hits.

TABLE 3

*** L.A.S.M.A.D.S. ***

ATTACK STATISTICS

AVERAGE NUMBER OF AIRPACKING ASSAULT CLASSIFIED MISSILES	24	AVERAGE NUMBER OF DEFENDING SHIPS	4
AVERAGE NUMBER OF DEFENDER AREA MISSILES	10.0	AVERAGE NUMBER OF DEFENDER AREA DEFENSE BATTERIES	2
AVERAGE NUMBER OF AIRPACKING ASSAULT CLASSIFIED MISSILES	10.1	AVERAGE NUMBER OF DEFENDER AREA DEFENSE BATTERIES	6
AVERAGE NUMBER OF AIRPACKING ASSAULT CLASSIFIED MISSILES	0.0	AVERAGE NUMBER OF DEFENDER AREA DEFENSE BATTERIES	16
AVERAGE NUMBER OF AIRPACKING ASSAULT CLASSIFIED MISSILES	0.0	AVERAGE NUMBER OF DEFENDER AREA DEFENSE ROUNDS INIT	120
AVERAGE NUMBER OF AIRPACKING ASSAULT CLASSIFIED MISSILES	0.0	AVERAGE NUMBER OF DEFENDER AREA DEFENSE ROUNDS INIT	180.0
AVERAGE NUMBER OF AIRPACKING ASSAULT CLASSIFIED MISSILES	24.0	AVERAGE NUMBER OF DEFENDER AREA DEFENSE ROUNDS INIT	24.0

RESULT OF THE ENGAGEMENT OVER 5000 REPLICATIONS PER CYCLE

AVERAGE INITIAL SHIPS ON SHIPS	AVERAGE DEFENDER AREA DEFENSE BATTERIES REMAINING	AVERAGE DEFENDER AREA DEFENSE ROUNDS REMAINING	AVERAGE DEFENDER AREA DEFENSE ROUNDS DESTROYED
2.57	0.107		
6.27	0.069		
4.03	0.007		
1.51	0.644		
6.21	0.518		
26.69	0.222		

INDIVIDUAL SHIP STATISTICS

NUMBER	CLASS	TYPE	POSITION	AXIS	# KILLS	RUNS REM	# KILLS	# ECM
1	2	2	20.00	1	1	13.62	13.62	0
2	5	2	15.10	0	0	17.58	17.58	0
3	7	0	15.10	2	1	0.0	0.0	1
4	7	0	11.00	1	2	2.02	2.02	1
SHIP	#1 BATS	#2 BATS	#PD SAM	#MC GUN	#KILLS	RUNS REM	#KILLS	#ECM
1	0	2	0	0	0	0.0	0.0	0
2	0	2	0	0	0	0.0	0.0	0
3	0	0	0	0	0	0.0	0.0	0
4	0	0	0	0	0	0.0	0.0	0
SHIP	# MANAGED	# KILLS	# KILLS	# KILLS	# KILLS	RUNS REM	# KILLS	# ECM
1	0.11	0.62	13.62	13.62	13.62	13.62	13.62	0
2	4.91	1.44	1.44	1.44	1.44	17.58	17.58	0
3	6.73	0.33	0.33	0.33	0.33	2.02	2.02	0
4	5.71	0.21	0.21	0.21	0.21	0.0	0.0	0

SYSTEM PERFORMANCE OF INDIVIDUAL DEFENSES

LONG RANGE AIR DEFENSE SAM	KILLS	RUNS EXP	# SINGLE	# SALVO
INT RANG AIR DEFENSE SAM	0.0	0.0	0.0	0.0
PULN DEFENSE SAM	12.00	31.09	17.0	0.56
MEDIUM CALIPER GUN	2.81	3.74	4.96	
CIMS GUN	0.49	4.01	3.01	
ELECTRONIC COUNTERMEASURES	1.92	1.42	1.42	
	0.71	0.71	0.71	

TABLE 4
MISSILE REACHES SHIP TARGET- PERCENTAGE

ASCM 66 CUM HIT CUM%

1	0.104	0.01	0.008	71	0.0	0.0	101	0.0
2	0.113	0.02	0.009	72	0.0	0.0	142	0.0
3	0.116	0.02	0.007	73	0.0	0.0	143	0.0
4	0.114	0.03	0.008	74	0.0	0.0	144	0.0
5	0.115	0.04	0.007	75	0.0	0.0	145	0.0
6	0.115	0.04	0.007	76	0.0	0.0	146	0.0
7	0.117	0.05	0.007	77	0.0	0.0	147	0.0
8	0.120	0.02	0.007	78	0.0	0.0	149	0.0
9	0.122	0.04	0.004	80	1.0	0.0	151	0.0
10	0.122	0.04	0.004	82	0.0	0.0	152	0.0
11	0.121	0.07	0.009	84	0.0	0.0	154	0.0
12	0.125	0.32	0.070	87	0.0	0.0	155	0.0
13	0.127	0.35	0.075	89	0.0	0.0	157	0.0
14	0.141	1.07	0.60	91	0.0	0.0	159	0.0
15	0.149	1.23	0.62	94	0.0	0.0	161	0.0
16	0.153	1.29	0.62	96	0.0	0.0	162	0.0
17	0.155	1.35	0.67	97	0.0	0.0	164	0.0
18	0.156	1.72	0.67	99	0.0	0.0	166	0.0
19	0.159	1.83	0.67	101	0.0	0.0	167	0.0
20	0.160	1.94	0.67	102	0.0	0.0	169	0.0
21	0.164	2.13	0.67	103	0.0	0.0	170	0.0
22	0.000	0.00	0.00	104	0.0	0.0	171	0.0
23	0.000	0.00	0.00	105	0.0	0.0	173	0.0
24	0.000	0.00	0.00	106	0.0	0.0	174	0.0
25	0.000	0.00	0.00	107	0.0	0.0	177	0.0
26	0.000	0.00	0.00	108	0.0	0.0	178	0.0
27	0.000	0.00	0.00	109	0.0	0.0	180	0.0
28	0.000	0.00	0.00	110	0.0	0.0	182	0.0
29	0.000	0.00	0.00	112	0.0	0.0	183	0.0
30	0.000	0.00	0.00	113	0.0	0.0	184	0.0
31	0.000	0.00	0.00	114	0.0	0.0	185	0.0
32	0.000	0.00	0.00	115	0.0	0.0	187	0.0
33	0.000	0.00	0.00	116	0.0	0.0	189	0.0
34	0.000	0.00	0.00	117	0.0	0.0	191	0.0
35	0.000	0.00	0.00	118	0.0	0.0	192	0.0
36	0.000	0.00	0.00	119	0.0	0.0	193	0.0
37	0.000	0.00	0.00	120	0.0	0.0	194	0.0
38	0.000	0.00	0.00	121	0.0	0.0	196	0.0
39	0.000	0.00	0.00	122	0.0	0.0	197	0.0
40	0.000	0.00	0.00	123	0.0	0.0	198	0.0
41	0.000	0.00	0.00	124	0.0	0.0	200	0.0
42	0.000	0.00	0.00	125	0.0	0.0	202	0.0
43	0.000	0.00	0.00	126	0.0	0.0	203	0.0
44	0.000	0.00	0.00	127	0.0	0.0	205	0.0
45	0.000	0.00	0.00	128	0.0	0.0	206	0.0
46	0.000	0.00	0.00	129	0.0	0.0	207	0.0
47	0.000	0.00	0.00	130	0.0	0.0	209	0.0
48	0.000	0.00	0.00	131	0.0	0.0	210	0.0
49	0.000	0.00	0.00	132	0.0	0.0	0.0	0.0
50	0.000	0.00	0.00	133	0.0	0.0	0.0	0.0
51	0.000	0.00	0.00	134	0.0	0.0	0.0	0.0
52	0.000	0.00	0.00	135	0.0	0.0	0.0	0.0
53	0.000	0.00	0.00	136	0.0	0.0	0.0	0.0
54	0.000	0.00	0.00	137	0.0	0.0	0.0	0.0
55	0.000	0.00	0.00	138	0.0	0.0	0.0	0.0
56	0.000	0.00	0.00	139	0.0	0.0	0.0	0.0
57	0.000	0.00	0.00	140	0.0	0.0	0.0	0.0

TABLE 5

***** L . A . S . M . A . D . S . OUTPUT *****

ATTACK STATISTICS

NUMBER OF ATTACKING ASW ASCM MISSILE CLASSIFICATION	24	NUMBER OF DEFENDING SHIPS	4
SECONDARY ORIGIN MISSILES	10.0	NUMBER OF AREA DEFENSE SYSTEMS	2
NUMBER OF GAVELS	2	NUMBER SELF DEFENSE SYSTEMS	6
HVT TARGETS	0	NUMBER AREA DEFENSE BATTERIES	18
PURCHASED TARGETING	0.0	NUMBER AREA DEFENSE RND'S INIT	120
AUGMENT PERCENTAGE	0.0	RADAR RANGE	180.0
		LCN CYCLE TIME	24.0

RESULT OF THE ENGAGEMENT OVER 3000 REPLICATIONS PERCENT

	AVERAGE INITIAL HITS ON SHIPS	AVERAGE TOTAL SHIPS ON	AVERAGE AREA DEFENSE SYSTEMS REMAINING	AVERAGE DEFENSE SYSTEMS REMAINING	AVERAGE AREA DEFENSE SYSTEMS DESTROYED
1	2.14	0.00	0.21	0.00	0.00
2	0.21	0.00	0.31	0.00	0.00
3	0.31	0.00	0.41	0.00	0.00
4	0.41	0.00	0.51	0.00	0.00

INDIVIDUAL SHIP STATISTICS

NUMBER	CLASS	TYPE	POSITION	AXIS	# CIMS	# ECM
1	24	2	20.00	1	1	1
2	5	2	15.00	0	0	0
3	7	0	15.00	2	0	0
4	7	0	11.00	1	1	1

SHIP	#1 DAIS	#2 BATS	#3 PDSAM	#4 CGUN	#5 CIMS	#6 ECM
1	0	4	0	2	1	1
2	0	2	0	2	0	0
3	0	0	1	2	1	1
4	0	0	1	2	1	1

SHIP	#1 AGILE	#2 HITS	#3 KILLS	#4 RND'S REM
1	0.10	0.50	14.00	45.24
2	4.42	1.24	3.71	16.84
3	6.73	0.24	1.50	0.0
4	6.75	0.19	1.64	0.0

SYSTEM PERFORMANCE OF INDIVIDUAL DEFENSES

LONG RANGE AIR DEFENSE SAM	KILLS	RDS EXP	# SINGLE	# SALVO
INT Range Air Defense SAM	0.00	0.0	0.0	0.0
POINT DEFENSE SAM	17.05	32.15	23.33	0.41
MEDIUM CALIBER GUN	2.24	32.15	4.13	4.13
CIM'S GUN	0.44	4.13	2.47	2.47
ELECTRONIC COUNTERMEASURES	0.58	1.17	1.17	

TABLE 6

**** L.A.S.M.A.D.S. OUTPUT ****

ATTACK STATISTICS		DEFENSE STATISTICS	
NUMBER OF ATTACKING ASCM	24	NUMBER OF DUFFLING SHIPS	4
ASCM MISSILE CLASSIFICATION	22	NUMBER OF AIR DEFENSE SHIPS	2
SECONDARY BRAILLE MISSILES	10.0	NUMBER OF AIR DEFENSE BATTERIES	6
NUMBER OF WAVES	2	NUMBER OF SELF DEFENSE BATTERIES	16
HVI TARGETING	0	NUMBER OF AIR DEFENSE RADAR	120
PERCENT HVI TARGETING	0.0	RADAR RANGE	180.0
AJMENT PERCENTAGE	0.9	EC 4 CYCLE TIME	24.0

RESULT OF THE ENGAGEMENT OVER 5000 REPLICATIONS PERCENT

AVLAGE TOTAL HITS ON SHIPS					
AVLAGE TOTAL SHIPS COL	2.00	0.004			
AREA DEF BATTERIES REMAINING	0.18	0.044			
SELF DEF BATTERIES REMAINING	4.33	0.731			
AREA DEF ROUNDS REMAINING	13.94	0.875			
AREA DEF ROUNDS DESTROYED	65.25	0.544			
AREA DEF ROUNDS	21.98	0.183			

INDIVIDUAL SHIP STATISTICS

NUMBER	CLASS	TYPE	POSITION	AXIS	REPPLICATIONS			
					#1 BAIS	#2 BAIS	#PUSAM	#MC GUN
1	24	2	20.00	0	2	0	0	1
2	5	2	15.10	0	1	0	0	0
3	7	2	15.12	2	0	0	0	0
4	7	0	11.00	1	0	0	0	0
SHIP	#1 BAIS	#2 BAIS	#PUSAM	#MC GUN	#C1WS	#ECM	#RDS	#REM
1	0	4	0	0	2	0	0	45.22
2	0	2	0	1	2	0	0	20.92
3	0	0	0	1	2	0	0	20.92
4	0	0	0	1	2	0	0	0.0

SYSTEM PERFORMANCE OF INDIVIDUAL DEFENSES

	KILLS	RDS EXP	# SINGLE	# SALVO
LONG RANGE AIR DEFENSE SAM	0.0	0.0	0.0	0.0
INT RANG AIR DEFENSE SAM	17.39	32.78	20.71	6.01
POINT DEFENSE SAM	2.24	2.99	3.93	
MEDIUM CALIPER GUN	0.39	0.42	2.34	
CMS GUN	1.42	1.14		
ELECTRONIC COUNTERMEASURES	0.56			

TABLE 7

**** L.A.S.M.A.O.S. OUTPUT ****

ATTACK STATISTICS		DEFENSE STATISTICS			
NUMBER OF ATTACKING ASCM	24	NUMBER OF DEFENDING SHIPS	4		
ASCM MISSILE CLASSIFICATION	2	NUMBER OF AREA DEFENSE SHIPS	2		
SECONDS BETWEEN MISSILES	10.0	NUMBER AREA DEFENSE BATTERIES	2		
NUMBER OF WAVES	2	NUMBER SELF DEFENSE BATTERIES	6		
HVT TARGETING	1	NUMBER AREA DEFENSE RND'S INIT	120		
PERCENT HVT TARGETING	0.70	RADAR RANGE	180.0		
AUGMENT PERCENTAGE	0.70	ECA CYCLE TIME	24.0		
RESULT OF THE ENGAGEMENT OVER 3000 REPLICATIONS					
AVERAGE TOTAL SHIPS ON SHIPS	2.87	AVERAGE NUMBER OF DEFENDER	0.120		
AVERAGE TOTAL SHIPS CUL	0.38	CYCLE TIME	0.095		
AREA DEF BATTERIES REMAINING	3.59	NUMBER AREA DEFENSE	0.599		
SELF DEF BATTERIES REMAINING	13.51	NUMBER SELF DEFENSE	0.844		
AREA DEF RND'S REMAINING	54.43	NUMBER RADAR	0.454		
AREA DEF RND'S DESTROYED	32.99	NUMBER ECA CYCLE TIME	0.275		
INDIVIDUAL SHIP STATISTICS					
NUMBER	CLASS	TYPE	POSITION	AXIS	
1	24	2	20.0	1	
2	5	2	15.19	0	
3	7	0	15.12	2	
4	7	0	11.03	1	
SHIP	#1 BATS	#2 BATS	#PD SAM	#MI. GUN	#ECN
1	0	4	0	2	1
2	0	2	0	2	0
3	0	0	1	2	1
4	0	0	1	2	1
SHIP	# TARGETED	# KILLS	# KILLS	RND'S KILLED	
1	9.44	1.01	14.71	38.58	
2	5.49	1.60	3.75	15.83	
3	5.39	0.18	1.66	0.0	
4	5.68	0.08	0.57	0.0	
SYSTEM PERFORMANCE OF INDIVIDUAL DEFENSES					
	KILLS	RDS EXP	# SINGLE	# SALVO	
LONG RANGE AIR DEFENSE SAM	0.0	0.0	0.0	0.0	
INT RANGE AIR DEFENSE SAM	16.65	32.58	23.03	0.0	
POINT DEFENSE SAM	1.79	2.41		0.27	
MEEDIUM CALIPER GUN	0.49	4.63			
CLASS GUN	1.55	2.56			
ELECTRONIC COUNTERMEASURES	0.56	1.28			

TABLE 8

*** L.A.S.M.A.O.S. OUTPUT *** (Using penetration option)

ATTACK STATISTICS

	NUMBER OF ATTACKING ASSAULT SHIPS	NUMBER OF DEFENDING SHIPS
AIRCRAFT CARRIER ASSAULTS	22	4
NUMBER OF SHIPS	11.0	2
HULL NUMBER	2	7
HULL NUMBER OF LARGE SHIPS	1	18
PERCENT HULL NUMBER	0.70	140
AIRCRAFT PERCENTAGE	0.70	130.0
PERCENT CYCLE TIME	0.0	0.0

RESULT OF THE ENGAGEMENT OVER 2000 APPLICATIONS PERCENT

	AVERAGE INITIAL HITS ON SHIPS	AVERAGE INITIAL SHIPS HIT
AIRCRAFT DEFENDER	1.01	0.055
AIRCRAFT DEFENDER SHIPS REMAINING	0.13	0.055
SHIPS DEFENDER	5.4	0.769
SHIPS DEFENDER SHIPS REMAINING	16.38	0.910
AIRCRAFT DEFENDER	85.00	0.612
AIRCRAFT DEFENDER SHIPS DESTROYED	21.33	0.152

INDIVIDUAL SHIP STATISTICS

NUMBER	CCLASS	TYPE	POSITION	AXIS	#KILLS	RND'S REM	#KILLS	#KILLS	#KILLS
1	24	2	20.00	1	0	44.49	1	1	1
2	2	2	15.10	0	0	44.49	1	1	1
3	7	0	15.12	2	1	44.49	1	1	1
4	7	0	11.00	1	0	44.49	1	1	1
SHP	#1	DAIS	#2 BAIS	#3 PUD SAM	#4 NC GUN	#5 CLWS	#6 CHM	#7 CLWS	#8 CLWS
1	0	0	3	0	0	2	1	1	1
2	0	0	3	0	0	2	1	1	1
3	0	0	0	1	1	2	1	1	1
4	0	0	0	1	1	2	1	1	1
SHP	#1	ATK FIELD	#2	#3 KILLS	#4 KILLS	#5 KILLS	#6 KILLS	#7 KILLS	#8 KILLS
1	0.53		0.74	13.73	44.49	44.49	44.49	44.49	44.49
2	6.44		0.44	9.56	41.07	41.07	41.07	41.07	41.07
3	4.06		0.09	1.24	0.24	0.24	0.24	0.24	0.24
4	3.20		0.04	0.73	0.0	0.0	0.0	0.0	0.0

SYSTEM PERFORMANCE OF INDIVIDUAL DEFENSES

	KILLS	RND'S EXP	# SINGLE	# SALVO
LONG RANGE AIR DEFENSE SAM	0.0	0.0	0.0	0.0
MEDIUM RANGE AIR DEFENSE SAM	17.85	33.06	24.32	4.37
JOINT DEFENSE SAM	1.45	1.92	1.24	1.24
MEDIUM CALIPER GUN	0.44	0.44	0.44	0.44
CLWS GUN	2.06	3.45	1.77	1.77
ELECTRONIC COUNTERMEASURES	0.09	0.0	0.0	0.0

TABLE 9

ATTACK STATISTICS		DEFENSE STATISTICS	
NUMBER OF ATTACKING ASCM	24	NUMBER OF DEFENDING SHIPS	4
ASCM MISSILE CLASSIFICATION	2	NUMBER OF AREA DEF SHIPS	2
NUMBER OF LAUNCH MISSILLS	10.0	NUMBER AREA DEFENSE BATTERIES	6
NUMBER OF AIRCRAFTS	1	NUMBER SELF DEFENSE BATTERIES	6
HV TAKING TARGETING	0.70	NUMBER AREA DEFENSE RND'S INIT	120
PERCENT HV TARGETING	0.70	RANGE RANGE	180.0
AUGMENT PLACEMENT	0.0	EC A CYCLE TIME	0.0
RESULT OF THE ENGAGEMENT OVER 3000 REPLICATIONS PERCENT			
AVERAGE INITIAL HITS ON SHIPS	4.11	0.171	
AVERAGE INITIAL SHIPS LOC	0.63	0.126	
AREA DEF BATTERIES REMAINING	0.94	0.489	
SELF DEF BATTERIES REMAINING	1.62	0.669	
AREA DEF ROUNDS REMAINING	47.23	0.396	
AREA DEF ROUNDS DESTROYED	45.91	0.283	
INDIVIDUAL SHIP STATISTICS			
NUMBER CLASS TYPE POSITION AXIS			
1 24 2 10.00 1			
2 5 2 15.10 0			
3 7 0 12.12 2			
4 7 0 11.00 1			
SHIP #1 DAIS #2 BAIS #PDS SAM #MC GUN #LCM			
1 0 4 0 2 0			
2 0 2 0 1 1			
3 0 0 0 2 2			
4 0 0 0 1 1			
SHIP #3 KILLED #KILLS RND'S REM			
1 2.47 1.54 13.40 32.24			
2 5.43 2.19 3.10 12.27			
3 5.42 0.26 2.20 0.0			
4 3.69 0.12 1.39 0.0			
SYSTEM PERFORMANCE OF INDIVIDUAL DEFENSES			
LONG RANGE AIR DEFENSE SAM	KILLS	RDS EXP	# SINGLE
MEDIUM RANGE AIR DEFENSE SAM	0.0	0.0	0.0
POINT DEFENSE SAM	13.77	26.26	18.33
MEDIUM CALIPER GUN	2.44	3.25	4.11
CROSS GUN	0.61	0.11	
ELECTRONIC COUNTERMEASURES	2.01	3.34	
		2.14	

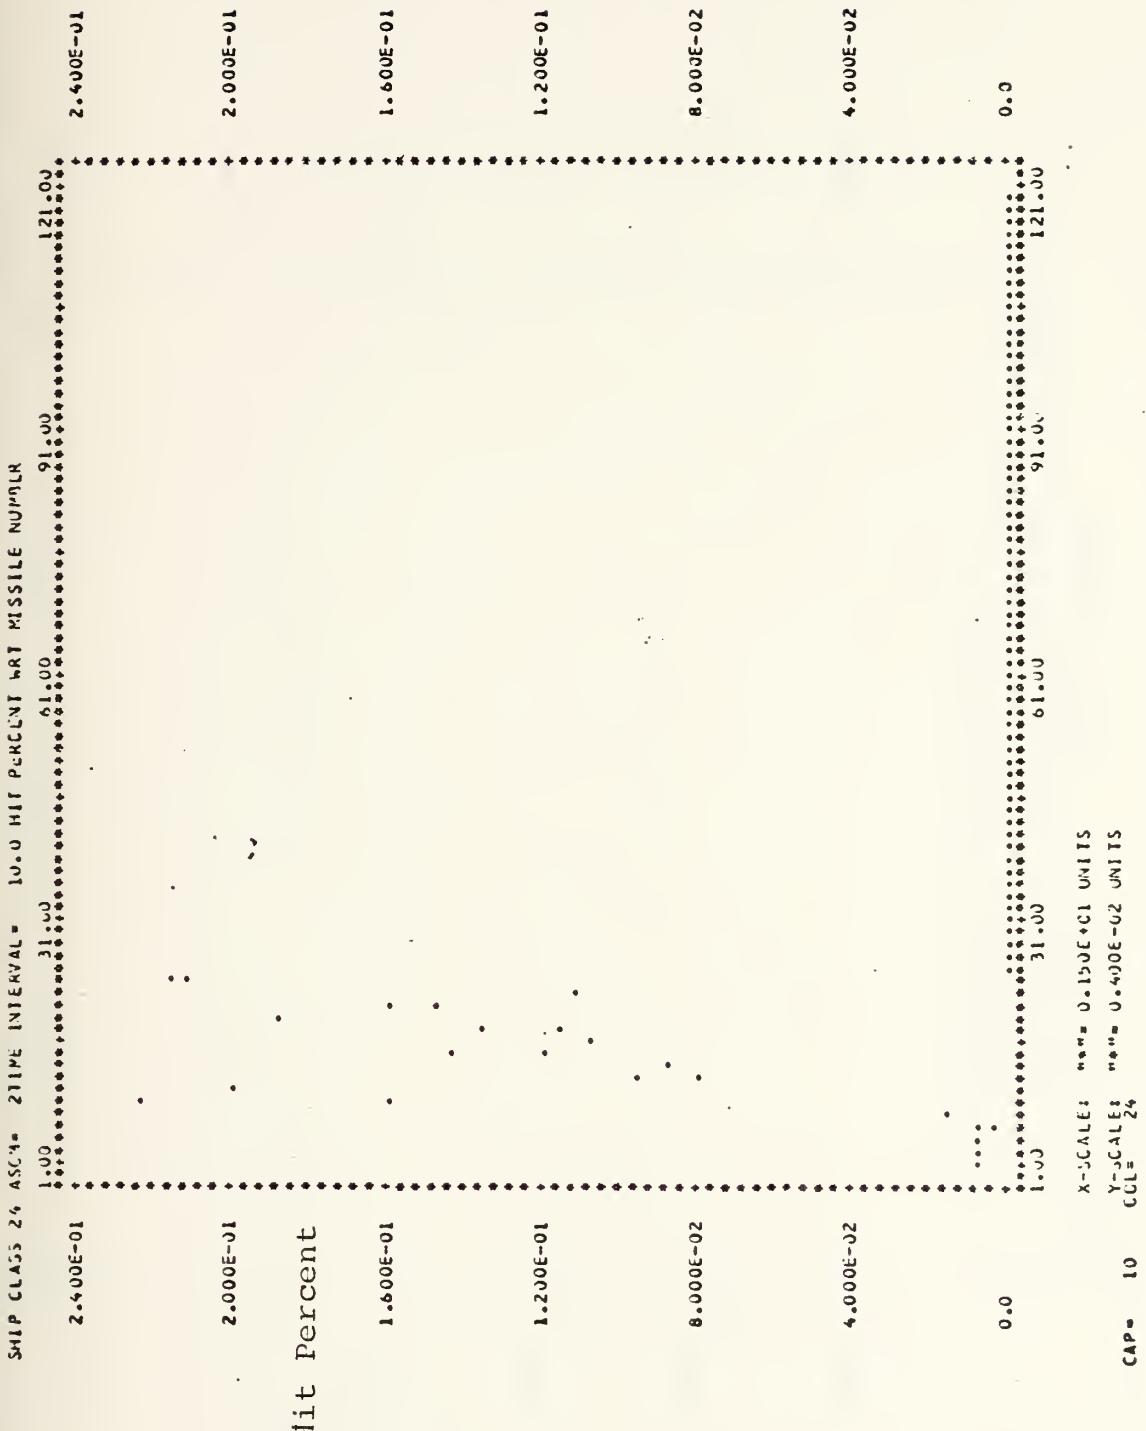


Fig. 3. ASCII Missile Number.

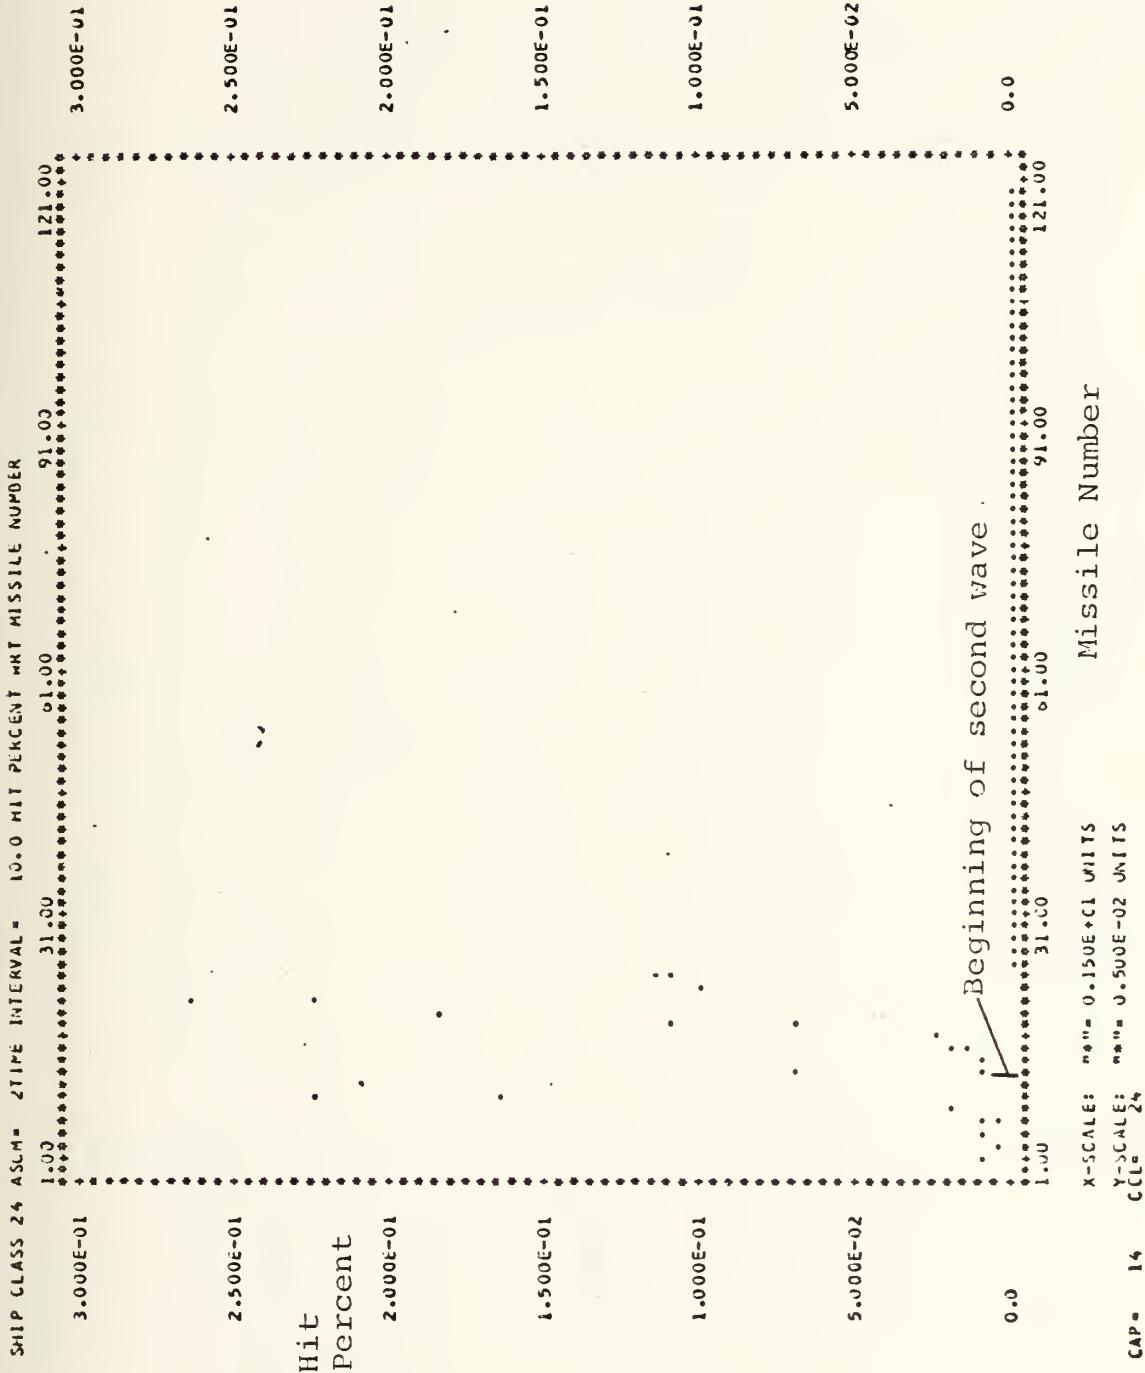


Fig. 4. Effect of Two Waves on Missile Hit Percentage

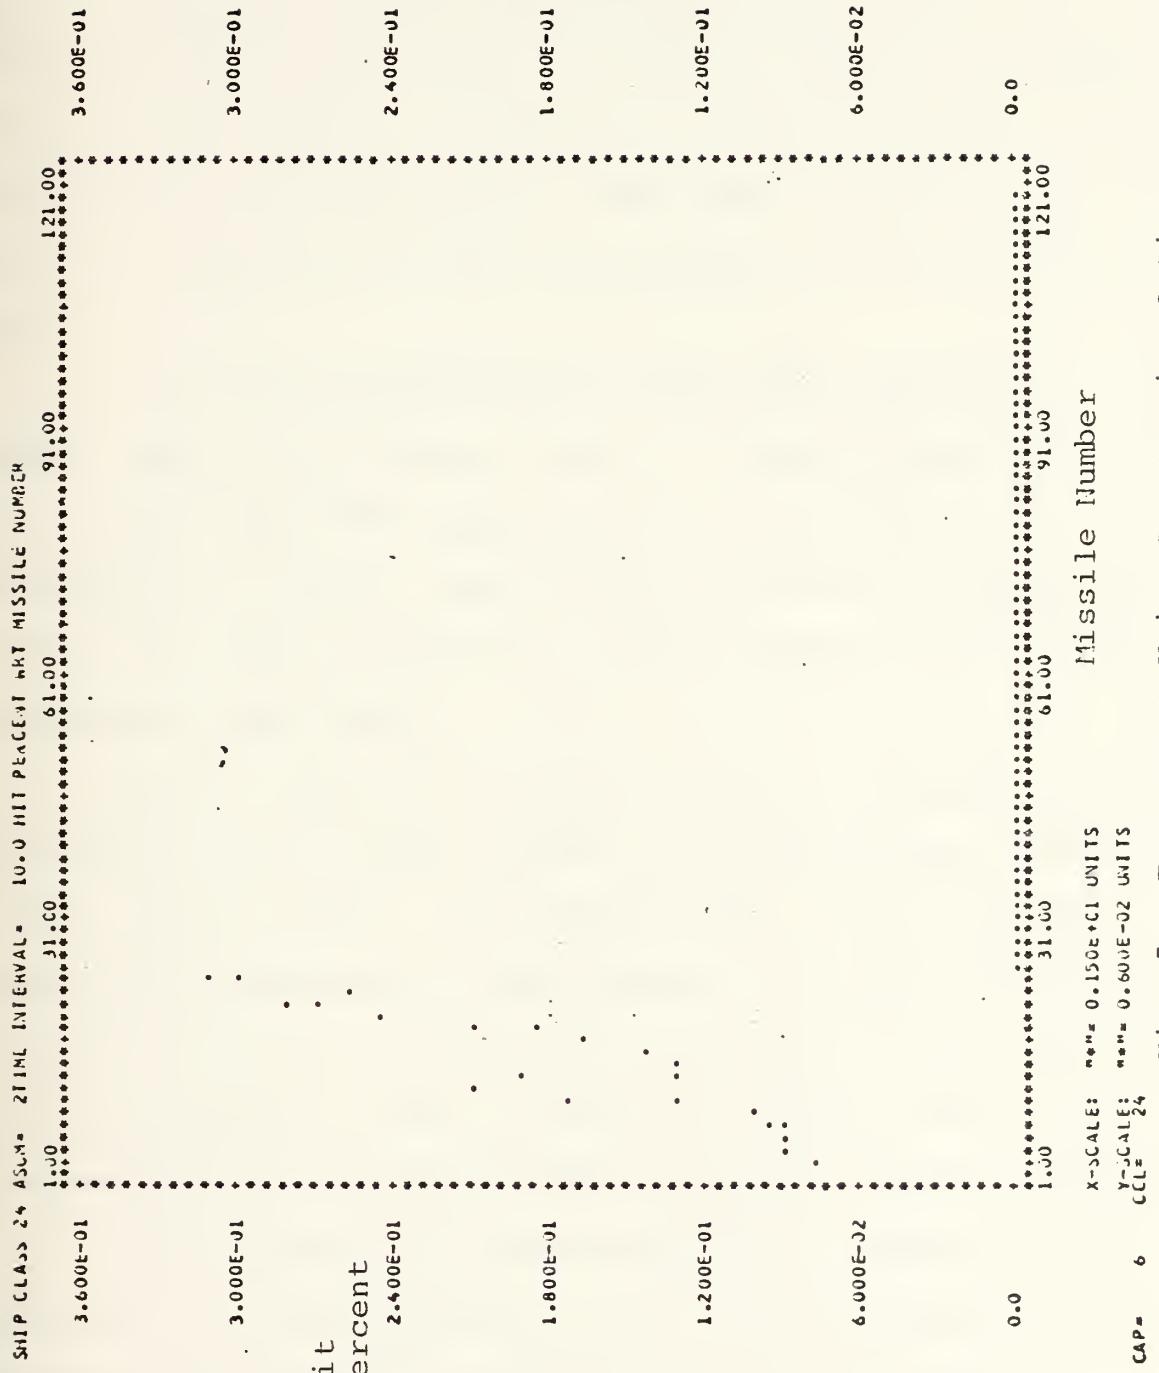


Fig. 5. Engagement Using Penetration Option

In the "individual ship statistics" section, "#1 BATS" are long range area defense SAM fire control channels and "#2 BATS" are the intermediate range area defense SAM fire control channels. "# TARGETED" is the average number of ASCMs targeted at that ship. "# HITS" is the average number of hits on that ship. "# KILLS" is the average number of ASCMs destroyed by that ship. "RNDS REM" is the average number of area defense SAM missile rounds remaining on that ship.

In "SYSTEM PERFORMANCE OF INDIVIDUAL DEFENSES," "KILLS" denotes the average number of ASCMs destroyed by that system; "RDS EXP" indicates the average number of engagements; "# SINGLE" and "# SALVO" records the number of single area defense SAMs fired and the number of salvos of area defense SAMs fired.

Table 4 shows in columnar format the average results attained by the individual ASCM. The first column ("ASCM") is the missile number. The second column (" % ") is the average hit percentage of that missile. The third column ("CUM HIT") is the average cumulative number of hits achieved up to that missile number. The fourth column ("CUM %") is the cumulative percentage of hits up to that missile number.

This output has considerable value. Because of the construction of the simulation, the hit percentage of the missile is the marginal value of that missile, and the

cumulative hit column gives the expected number of hits on the targets for an attack consisting of that number of missiles.

2. Demonstration of Capabilities

As an example, a series of scenarios will be shown demonstrating the various options available to the operator.

Tables 3 and 4 and Figure 3 show the results of an attack by an OSCAR class submarine on a US SAG (Surface Action Group).

The SAG consists of four ships: a CALIFORNIA class CGN, an ADAMS class DDG, and two SPRUANCE class destroyers. The ships are in a circular formation approximately 10,000 yards from ZZ (formation center). ZZ is unoccupied. The two SAM ships have been placed closer to the missile threat area; the attack axis so developed that the CALIFORNIA and one of the SPRUANCES were on the axis, while the ADAMS and the other SPRUANCE were respectively left and right of the axis.

In the engagement the OSCAR has fired 24 Class 2 (intermediate altitude, mach 2.0) ASCM at the formation. The missiles were separated by 10.0 seconds. Targeting was proportionate to ship's radar cross section.

Table 3 shows the overall results of the engagement. The CALIFORNIA class cruiser, which was on the attack axis closest to the origin of the attack and has the greatest anti-air capability, recorded the most ASCM kills. After

5000 runs, there were an average total of 2.57 hits on the ships, with an average of 0.27 ships placed out of commission. The ADAMS class DDG sustained the most hits because of its poor point defense capabilities and because it was on an attack plane of its own and thus the CGN's fire was not as effective in screening that ship. The fewest number of hits sustained was by ship #4, the SPRUANCE which was farthest from the origin of the attack and on the attack axis, and thus could be directly screened by the CALIFORNIA class. Between rounds fired and round destroyed in the magazines, the force only has approximately 50% of its area defense ammunition loadout remaining.

Table 4 shows the course of the attack from the attacker's viewpoint. Note the first 6 ASCM have a low probability of penetration; this is expected since the defending fource has 6 area defense batteries. Missiles 8, 9 and 10 have a significantly higher percentage of hit. Since they directly followed the first 6 rounds, they were unengaged during the period when the defending batteries were occupied with the first ASCMs in the stream and thus were allowed to penetrate the defensive zone and probably were engaged only by point defenses. The probability of hit for the next rounds are again lower, due to the area defense batteries being available to engage them. However, the percentage of hit was not as low as earlier since the

defending ships had by that time suffered battle damage and because the ASCM were closer to the formation and thus presented fewer intercept opportunities.

Figure 3 shows this in graphic output.

Table 5 shows the results of the same scenario with the modification that the OSCAR has fired its missiles in two waves, separated by 60.0 seconds. Note that the number of hits has been reduced to an average of 2.14. Table 6 is again the same situation, except the two wave attack is separated by 600.0 seconds. The number of hits has been reduced to an average of 2.00. This result is expected since the pause between waves allows the defending systems to complete their engagement cycle and prepare for the next wave. Figure 4 shows this effect graphically where the probability of hit of the missiles arriving first in the second wave is reduced to that of the first missiles in the first wave.

Table 7 shows the two wave attack with a 60.0 second wave separation but using the Augmented Targeting option. Seventy percent of the ASCM were allowed up to a 70% shift. Note the shift in the number of missiles targeted against each ship. Hits on the High Value Unit (HVU) has doubled from 0.50 to 1.01. Total hits on the formation has increased from 2.14 to 2.87 due to the damage sustained by the HVU and the resulting reduction of area defense capability.

Table 8 duplicates the scenario of Table 7 but using the COSRO ECM option which allows for multiple simultaneous ECM engagements (further discussion of this option follows in a later section). Total hits on the formation is reduced by over 50% to 1.31 hits. Note, however, that the actual number of kills attributed to ECM increases only a small amount, from 0.66 kills to 0.89 kills.

Since ECM is considered a kill only when the ASCM has penetrated all other defenses, the small increment in ECM kills is directly translatable into hits prevented. Hits prevented results in systems preserved from destruction. These systems are thus "alive" for a greater period and able to acquire, engage, and destroy additional targets. Consequently, there is an increased performance by other point and area defenses when the ECM system is given more capability. This explains why the ECM system accounted for an increase of 0.23 kills and the other systems accounted for the remaining increase of 1.33 kills over the number of kills recorded in Table 6. This example also illustrates the interactive nature of the various point and area defense systems to the total defensive capability of the vessel.

Table 9 is for the same scenario as in Table 8 with the inclusion of the area defense penetration option. Randomly, 25% of the attacking ASCM were allowed to slip through the area defenses without being engaged. Total hits on the ships has increased from 1.31 to 4.11. Figure 5

shows graphically the effect of this option on the hit percentage of the missiles in the stream.

The above section has demonstrated some of the options available in the LASMADS simulation. Other options (such as command and control degradation) are available and, obviously, the possible scenarios available to exercise every combination of option and parameters of each option are immense. The object of the research was to isolate and characterize the most important effects to achieve representative Firepower Indexes that characterize a ship's AAW capability.

III. FORMULATION OF AN INDICATOR OF SHIP COMBAT POWER

A. BASIC BEHAVIOR OF THE MARGINAL VALUES OF ADDITIONAL ASCM IN AN ATTACK

Figures 6 through 9 are examples of plots of hit percentage plotted against missile number. As discussed before, the nature of the LASMADS simulation equates the marginal value of adding an additional missile on to an attack to the hit percentage realized by that missile in a stream attack. The figures represent two classes of ships--KIROV, with a very large area and point defense anti-air capability, and KARA, with a relatively smaller capability--and two time intervals between incoming ASCM, 0.1 seconds and 1000.0 seconds.

All of the curves have similar features. These features are demonstrated on Figure 10.

For an initial number of missiles shown as "A" to "B" on the graph, there is a low and fairly constant hit percentage. This is representative of those intensities of attacks which are within the ability of the ship to handle. The resulting percentage of hits is the result of unsuccessful engagements by the defending systems.

Point "C" represents an inflection point where the slope of the hit probability turns sharply upwards. This point represents the intensity of attack which is near the limit of the defending systems' defensive capability.

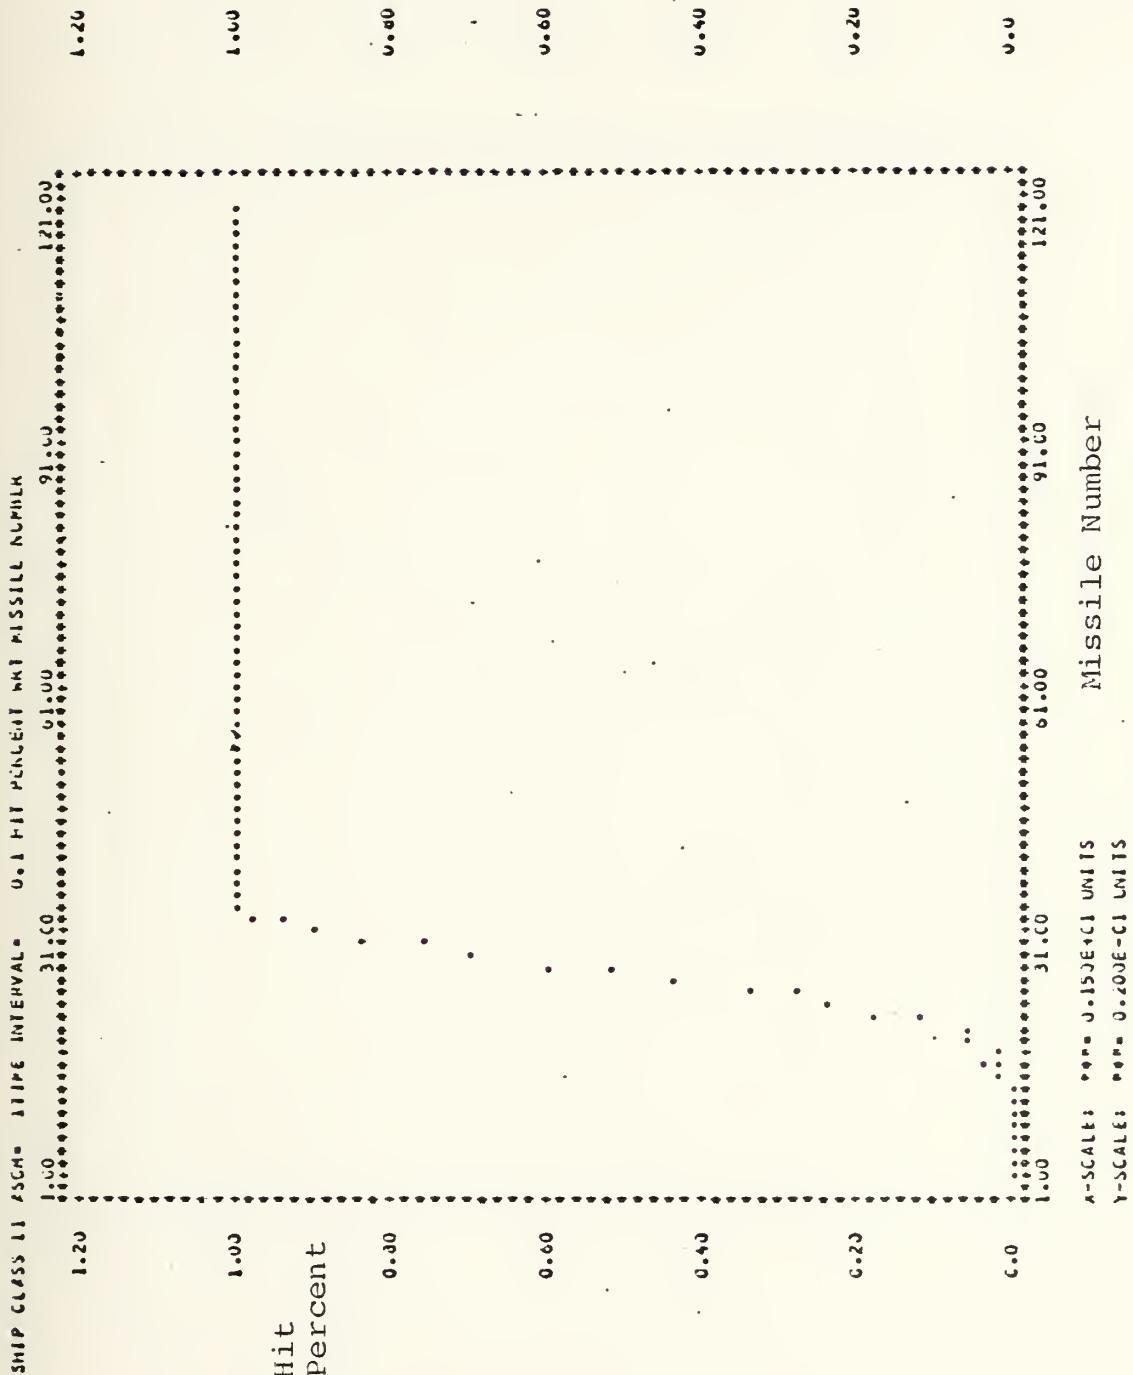


Fig. 6. KIROV Class 0.1 Second TIMINT.

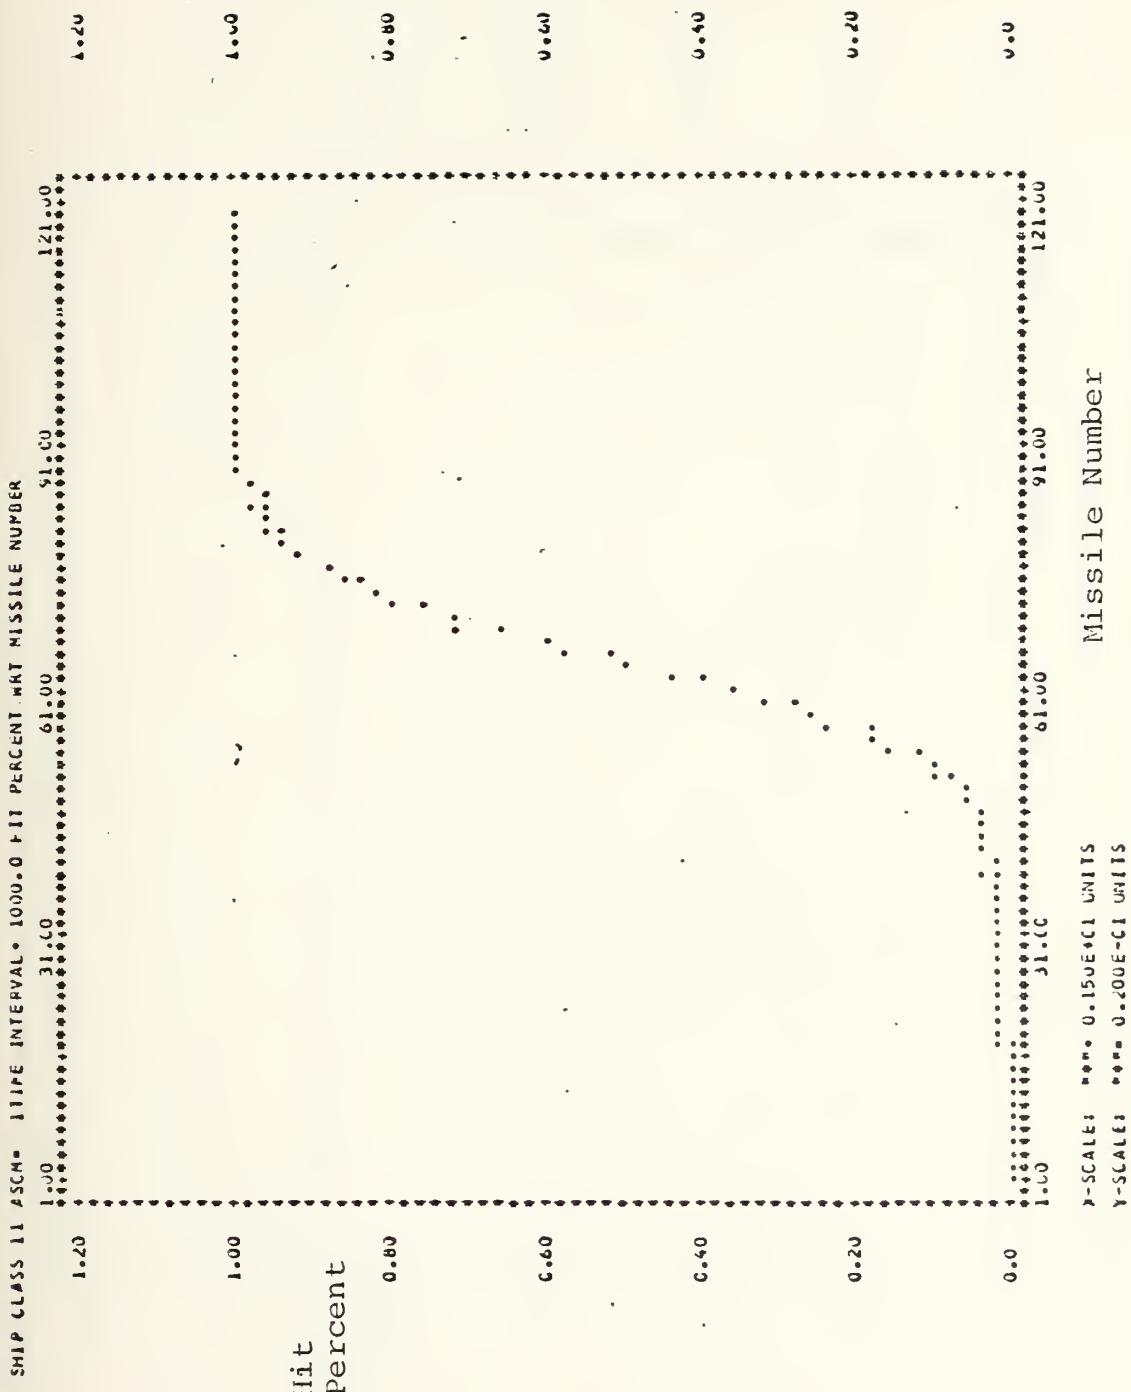


Fig. 7. KIROV CLASS, 1000 Second TIMINT.

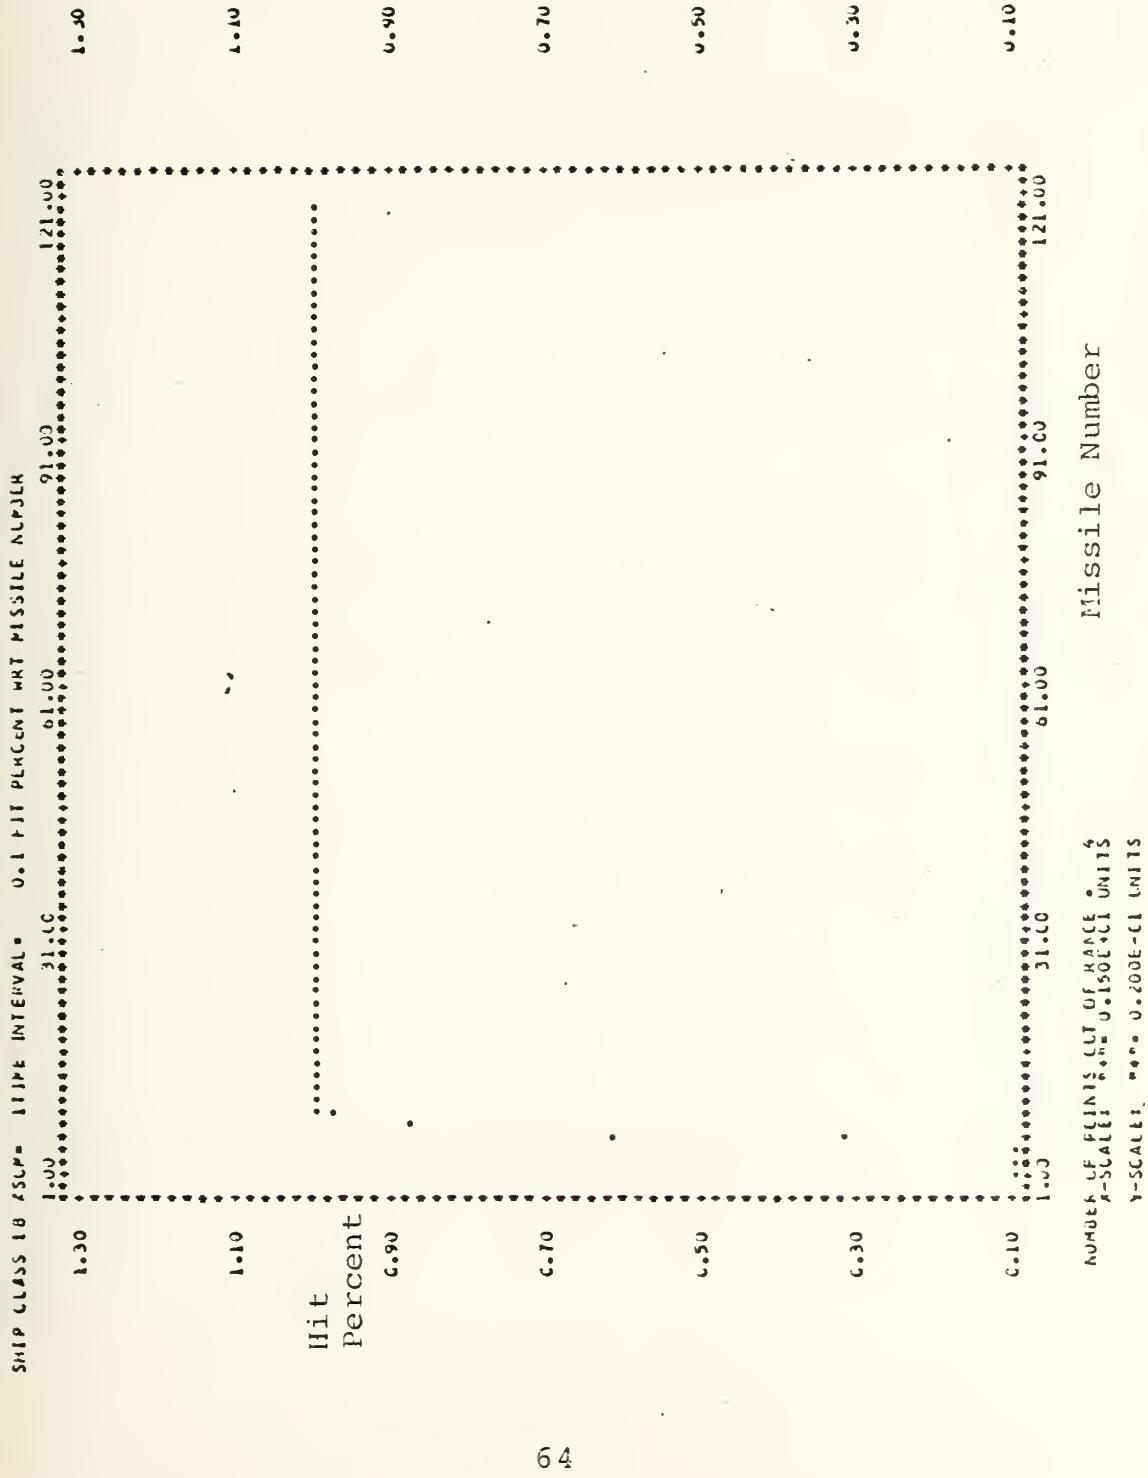


Fig. 3. KARA Class 0.1 Second TIMINT.

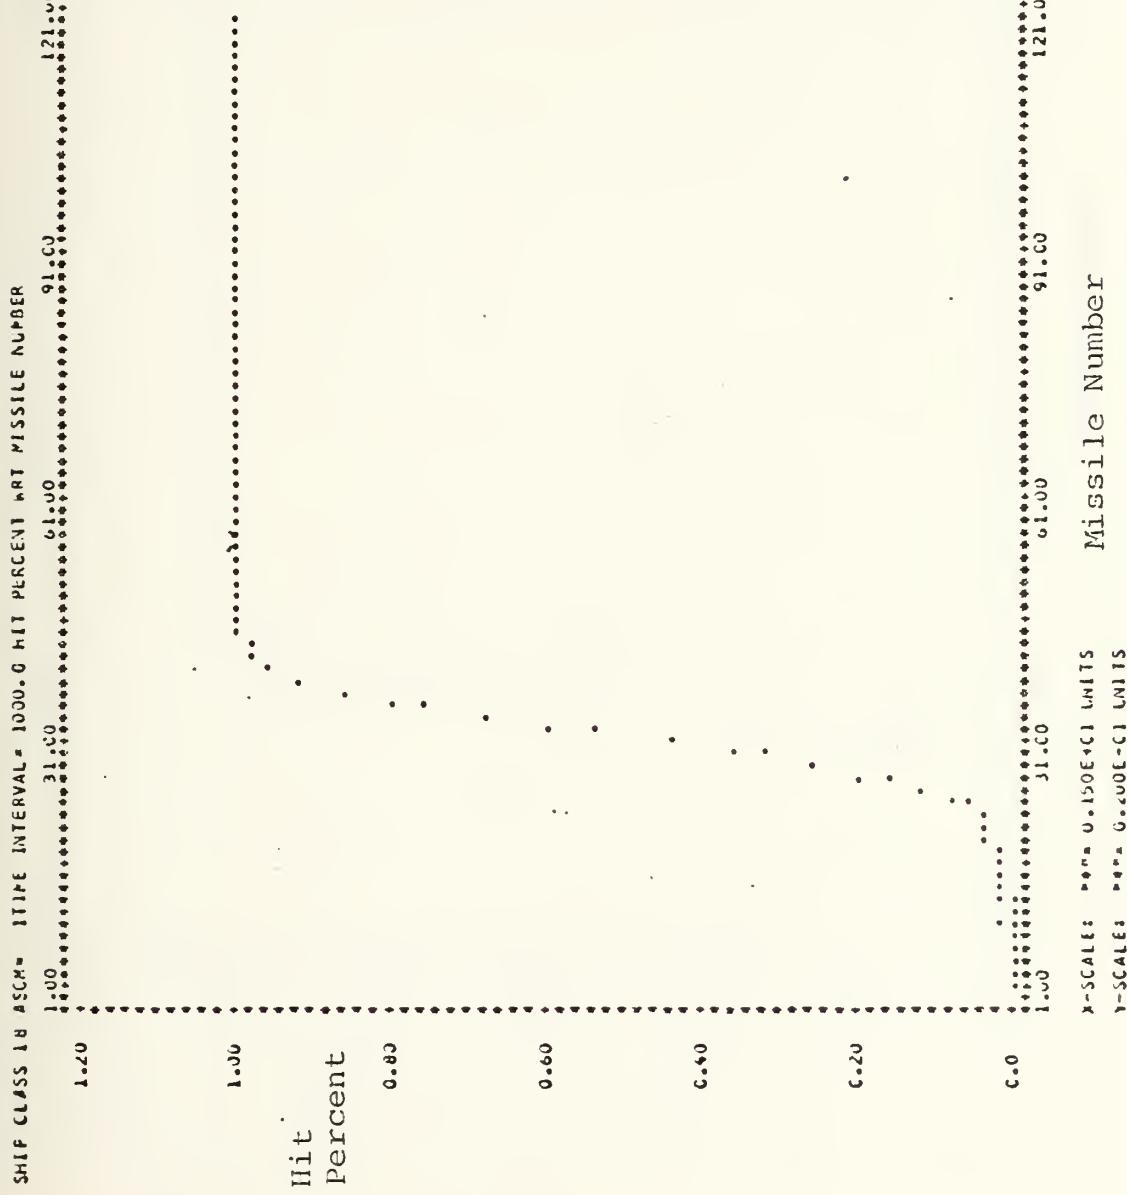


Fig. 9. KARA 1000 Second TIMINT.

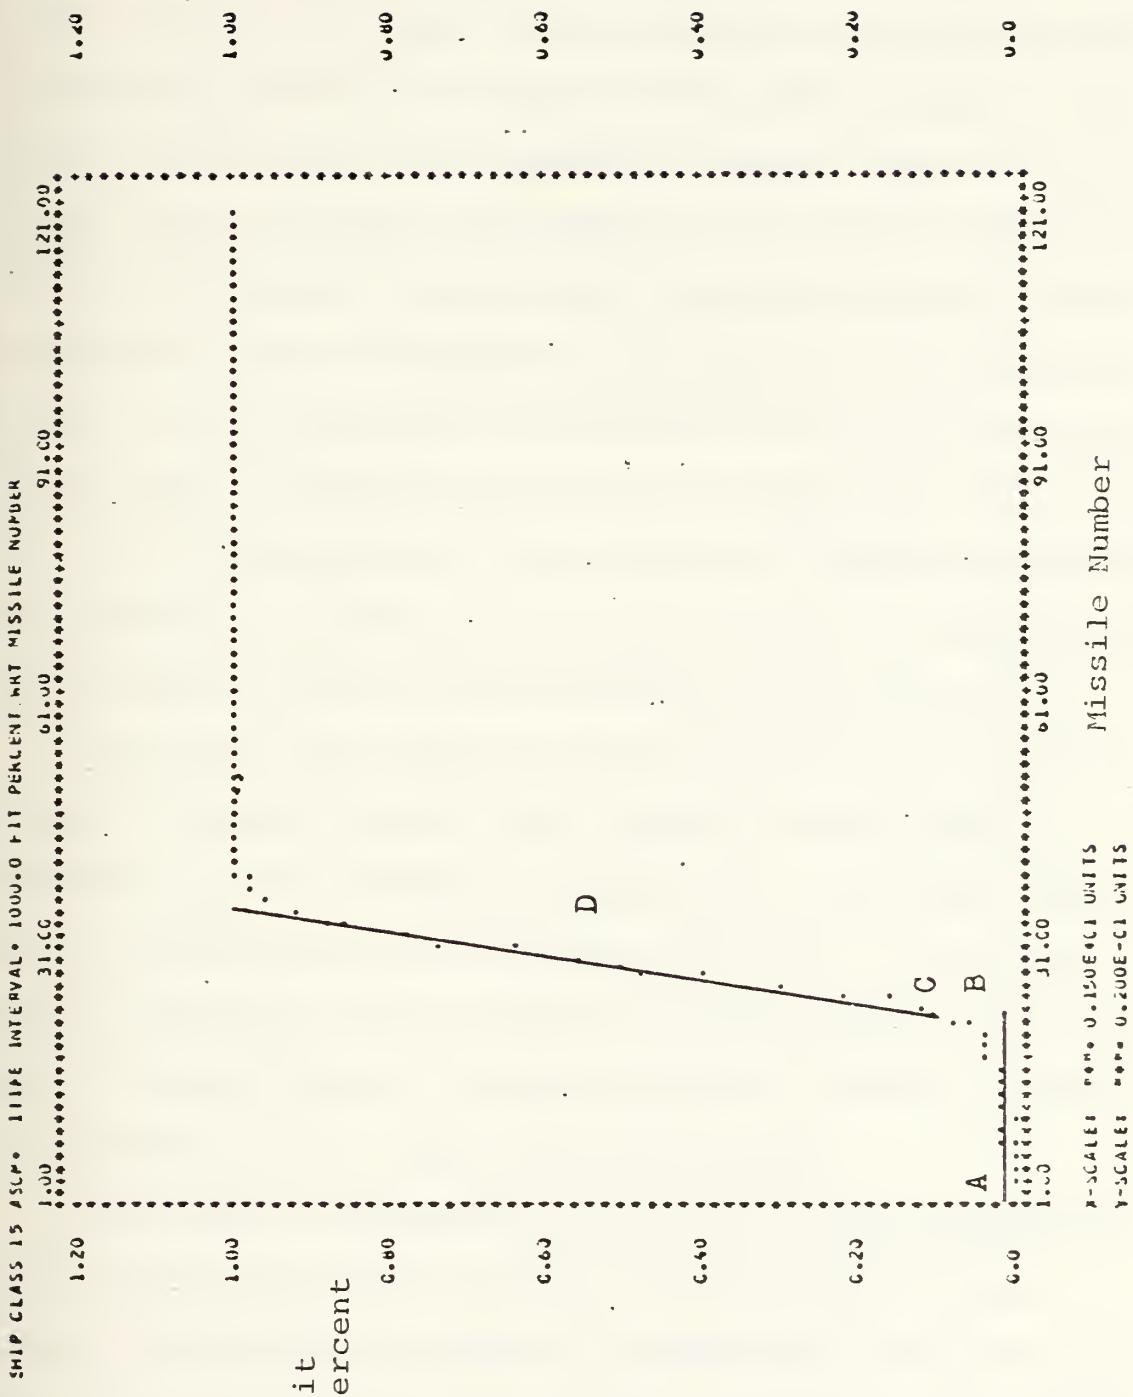


Fig. 10. Single Ship.

There are three factors which are responsible for the number of missiles defeated by the ship before the inflection point is reached: first, seen in the 0.1 second TIMINT plots, the number of incoming ASCM exceed the number of systems available to counter them; second, seen in the 1000.0 TIMINT plots, the cumulative damage inflicted by the ASCMs leaking through the defenses has inflicted sufficient damage on defending systems that the effectiveness of the successive layers of defense of the ship has been reduced; third, in the case where the defenses are particularly good, in the 1000.0 TIMINT case ammunition supply will limit the survival of the platform. For values of TIMINT between these two extremes, a combination of these effects is responsible for the upward turn in the probability of missile hit.

From point "C", the plot of hit percentage rises with nearly a constant slope. This slope is established by defining a point "D" which is defined as that point where the hit percentage of the ASCMs exceeds 50%. The slope remains constant until a point is reached where a tailing off is usually present. This tailing off usually starts at a percentage in the range of 85-90 percent.

This curve is characteristic of all of the probability of hit plots performed on all of the individual ships tested, regardless of number or composition of the various area and point defense installations. However, each vessel

had different values for the level between "A" and "B", the missile number of the inflection point "C", and the slope of the line between "C" and "D". When the conditions of the attack, or the capabilities of the defending systems were adjusted, the curve retained its general shape but had different values for the above points.

More significantly, this behavior was retained when dealing with formations of ships. For example, Figure 11 is a plot of the probability of kill vs missile number for a six-ship U.S. carrier battle group. Although the inflection point is more rounded, this curve still has the characteristic initial level, inflection point, and positive constant slope.

The following terms are used in describing the model:

The percentage of hits experienced between point "A" and "B" is called the LEAKAGE. It will be considered as a constant and is determined by using the average cumulative hit percentage at the inflection point "C".

The inflection point "C" is called the CAPACITY of the ship. By experimentation it was decided to fix this point at that missile number that exceeded a hit percentage of 10%.

With point "C" determined, the slope of line "C-D" can be defined by using one additional point. This point was fixed as the missile number where the probability of hit exceeded 50%. This point was defined as the COLLAPSE point.

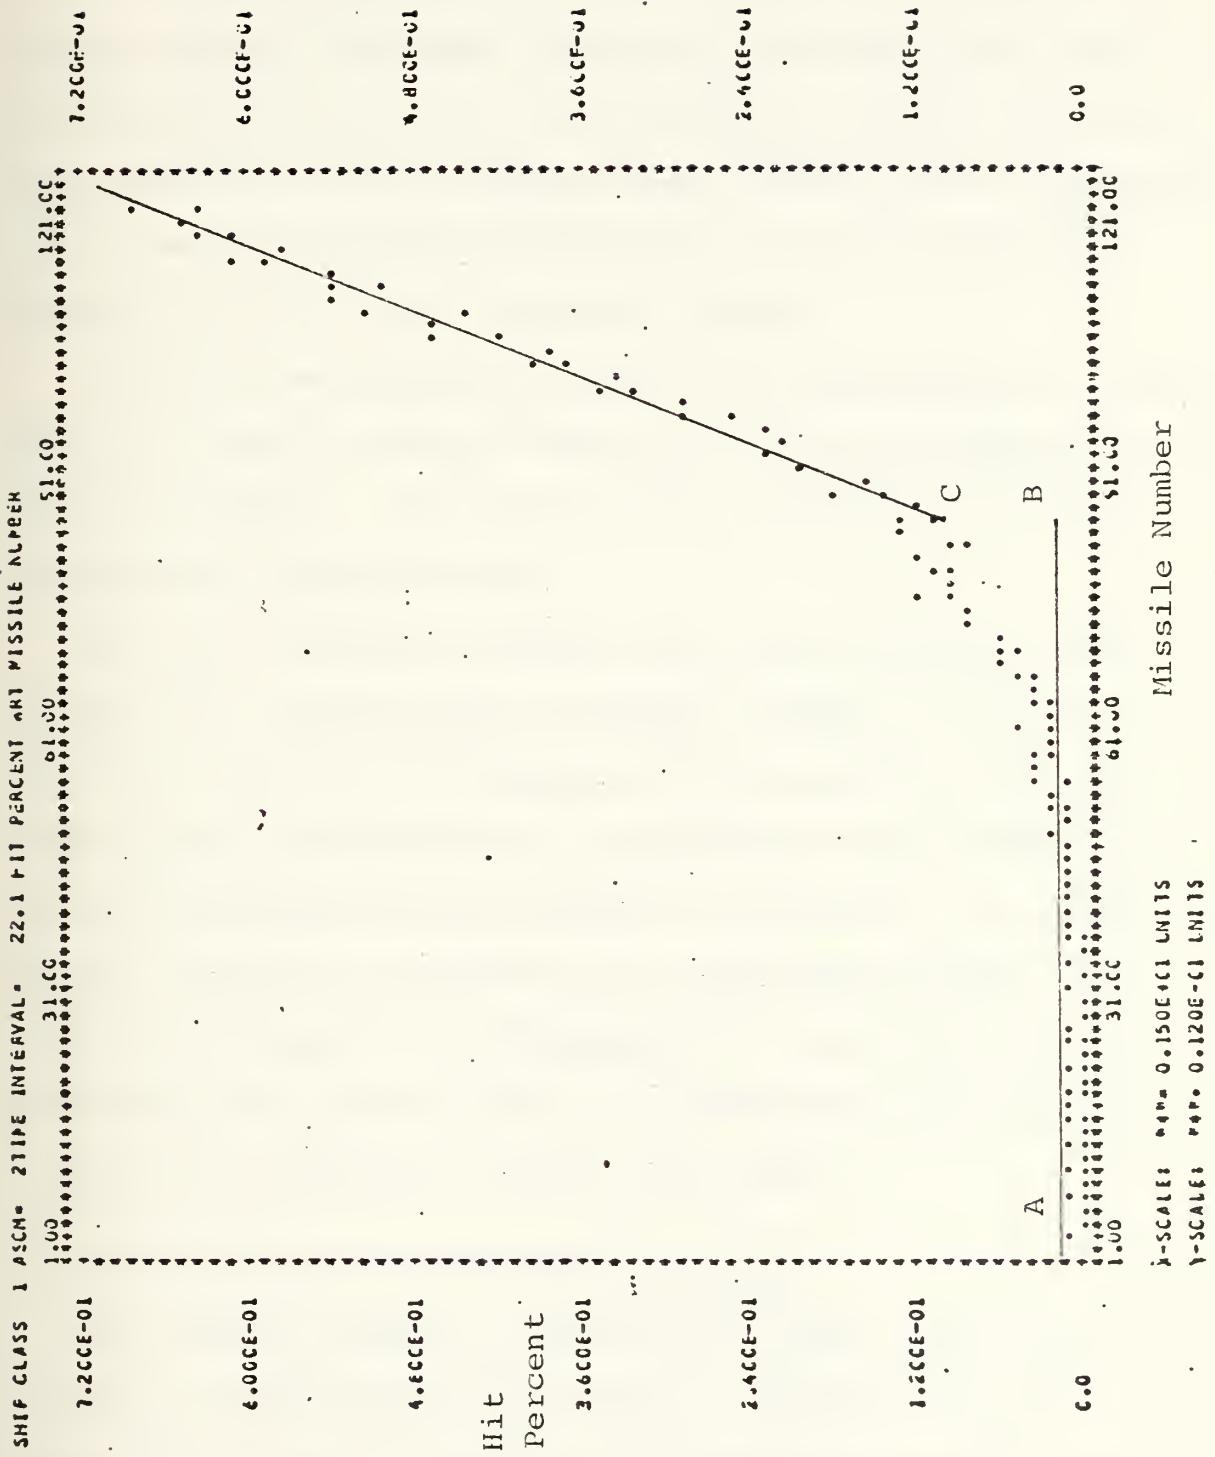


Fig. 11. Formation of Six Ships.

The model for a ship's AAW defense was thus defined by three values: a capacity value which determined the point where the ship's defenses could no longer fully defend itself against additional missiles; a leakage value, which was the percentage of hit for all missile attacks sized less than capacity; and a collapse value, which, with the capacity value, defined the rate of increase of the hit percentage for all missiles above a capacity attack.

It should be noted that there is a discontinuity in this model; at missile number (capacity-1), the hit percentage is equal to leakage. At missile number (capacity), the hit percentage is equal to 10%.

The curve described above is the basic model for the results of an ASCM attack on surface vessels. The next objective would be to determine which parameters were of first order significance and how exactly they affected the shape and placement of the values of the curve. In other words, the above is proposed as a fundamental model; the values in the model are determined for a base set of conditions; and those values are subsequently modified to account for variations from the base case.

B. DEFINITION OF THE BASE CASE SCENARIO

The general purpose of defining the base case is to provide a foundation for the model. The base case is generally defined as those sets of conditions which allow

the defending ships to reach their full defensive combat power. In realistic terms, this could be interpreted as a clear environment, maximum radar performance, warning of the attack, optimum command and control, full magazines, and an attacking ASCM which is within the capabilities of the defending systems. Given this situation, all adjustments to the basic values generated are degradations to ship performance.

In terms of the LASMADS model, the base case conditions are a range of detection of 180.0 nm, with a Class 2 (intermediate altitude, mach 2.0) incoming ASCM. None of the other options are used.

The Class 2 ASCM was chosen because it was considered the easiest to destroy: P-K values of 0.7 for area defense SAM, 0.75 for point defense missiles, 0.10 for medium caliber gun, 0.60 for CIWS, and 0.50 for ECM were used.

To determine baseline values, engagements were run on each of the ship classes in this study. Attacks consisting of Class 2 ASCMs in very large numbers were considered, and usually 1000 replications were run. For reasons discussed below, a run using TIMINT of 0.1 seconds, representing a near-perfectly coordinated time-on-target wave attack, and a run using a TIMINT of 1000.0, representing an uncoordinated stream attack were used. From these results the leakage, capacity, and collapse values were determined. Table 10 shows the results of these runs.

TABLE 10

SUMMARY TABLE OF RESULTS OF SHIP VALLATION

CLASS 1D NR	CLASS	LEAK	CAPACITY	COLLAPSL	TIMINT
		0.1 . 1000	0.1 . 1000	0.1 . 1000.0	
1	CARRIER	.06	2	4	- 13
2	CGN 38 VIRGINIA	.02	5	7	- 45
3	CG 26	.02	4	6	- 32
4	CG 16	.02	6	8	- 60
5	DDG 2 ADAMS	.04	3	4	- 27
6	DDG 37	.03	4	6	- 30
7	DD 963 SPRUANCE	.06	1	3	- 7
8	FFG 7 PERRY	.03	2	4	- 24
9	FFG 10 52 KNOX	.13	1	2	- 5
10	CG 47 TICONDEROGA	.02	30	34	- 71
11	KIROV	.01	31	34	- 85
12	KIROV (MOD 1)	.01	33	38	- 94
13	KIEV	.01	4	6	- 57
14	BLK COM I	.01	16	18	- 62
15	SOVREMENNY	.02	5	6	- 31
16	UDALOY	.07	2	6	- 20
17	MUSKOVA	.02	4	6	- 39
18	KARA	.02	4	6	- 38
19	KRESTA II	.02	3	5	- 31
20	KYNDAA	.02	1	2	- 14
21	MOD KASHIN	.02	3	5	- 31
22	KRIVAK	.23	1	2	- 9
23	AUXILIARY				
24	CGN 36 CALIFORNIA	.02	6	8	- 57

C. MODIFICATION OF THE BASE CASE TO ACCOUNT FOR FIRST ORDER EFFECTS

1. Time Intervals Between Attacking ASCM

As discussed above, there are three factors which tend to limit the survival of a platform: capacity for handling simultaneous targets, cumulative damage due to leakage, and ammunition supply. Capacity for handling simultaneous targets is important for "wave" attacks, and was modeled by assigning a TIMINT of 0.1 seconds. Leakage and ammunition supply are important for attacks where the channel capacity of the defending ship is sufficient to handle the attack rate, as modeled by assigning a TIMINT of 1000.0 seconds.

The relationship between a ship's capacity value at 0.1 seconds and its capacity at 1000.0 seconds is determined by the individual weapon suite. Unfortunately, there is no method for determining one value from the other. For example, the FFG 7 class capacity at 0.1 seconds is 2 missiles; its capacity at 1000.0 seconds is 19 missiles or a 950% gain. For the CG 47 class, at 0.1 seconds the capacity is 30 and at 1000.0 seconds 60, or a 100% gain. With the wide variance in results between the various systems, values for the extremes were generated by using the LASMADS simulation.

Figures 12 through 17 show the results of a series of scenarios with one CG 16 class cruiser engaging Class 2

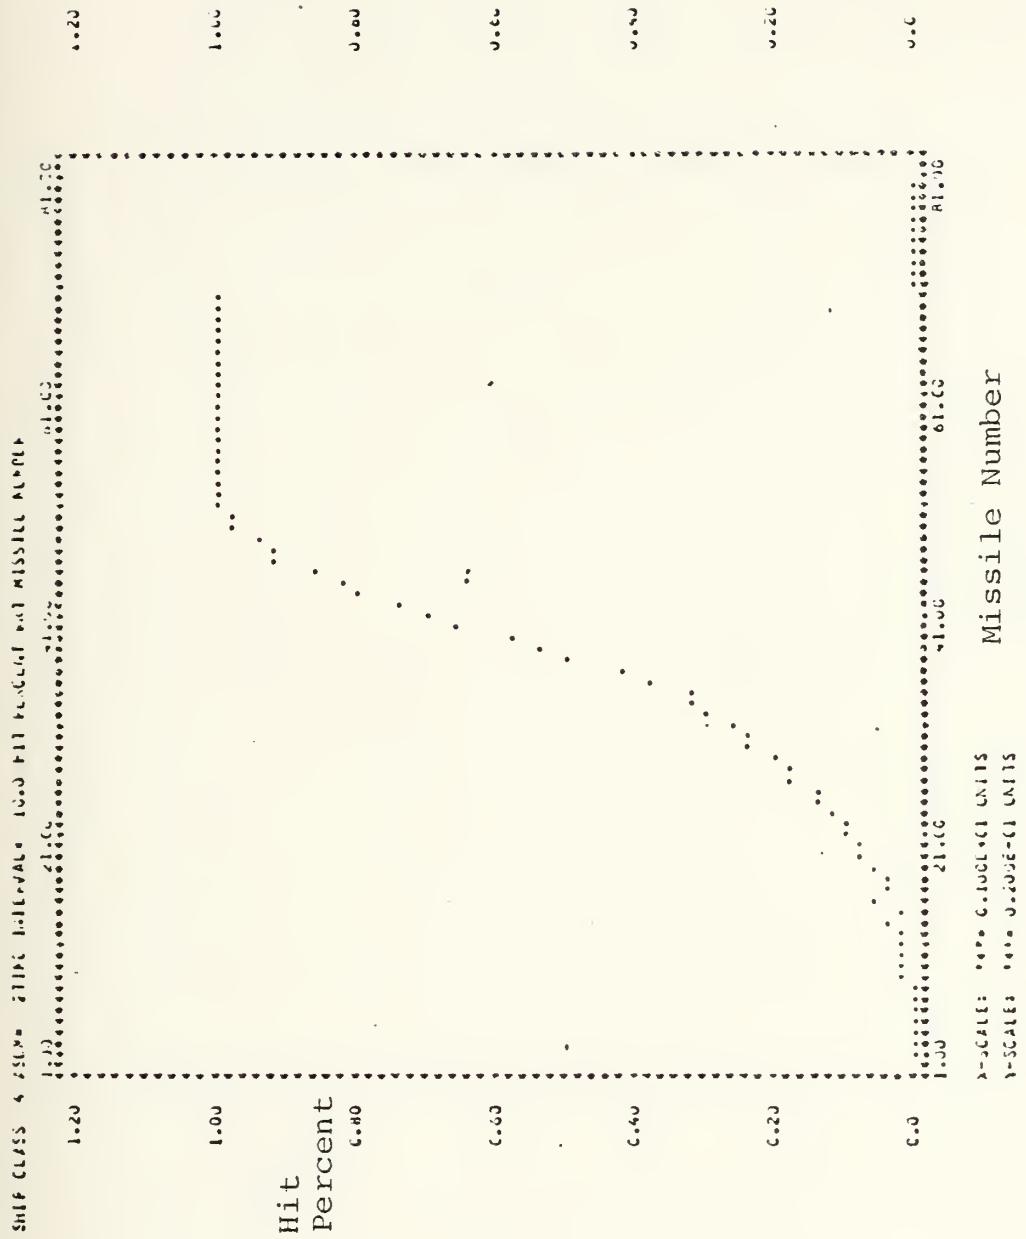


Fig. 12



Fig. 13

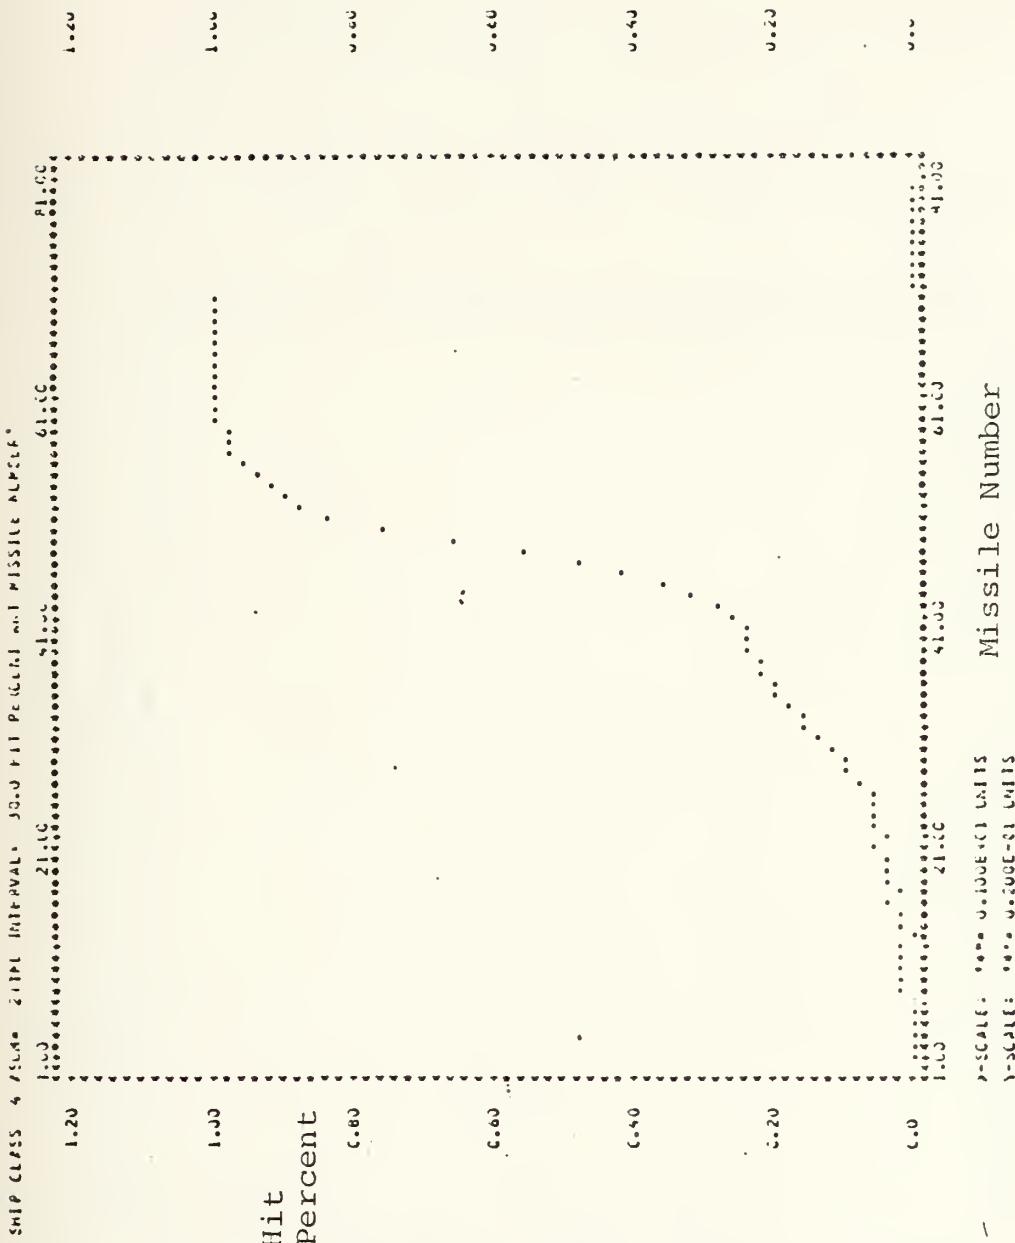


Fig. 14

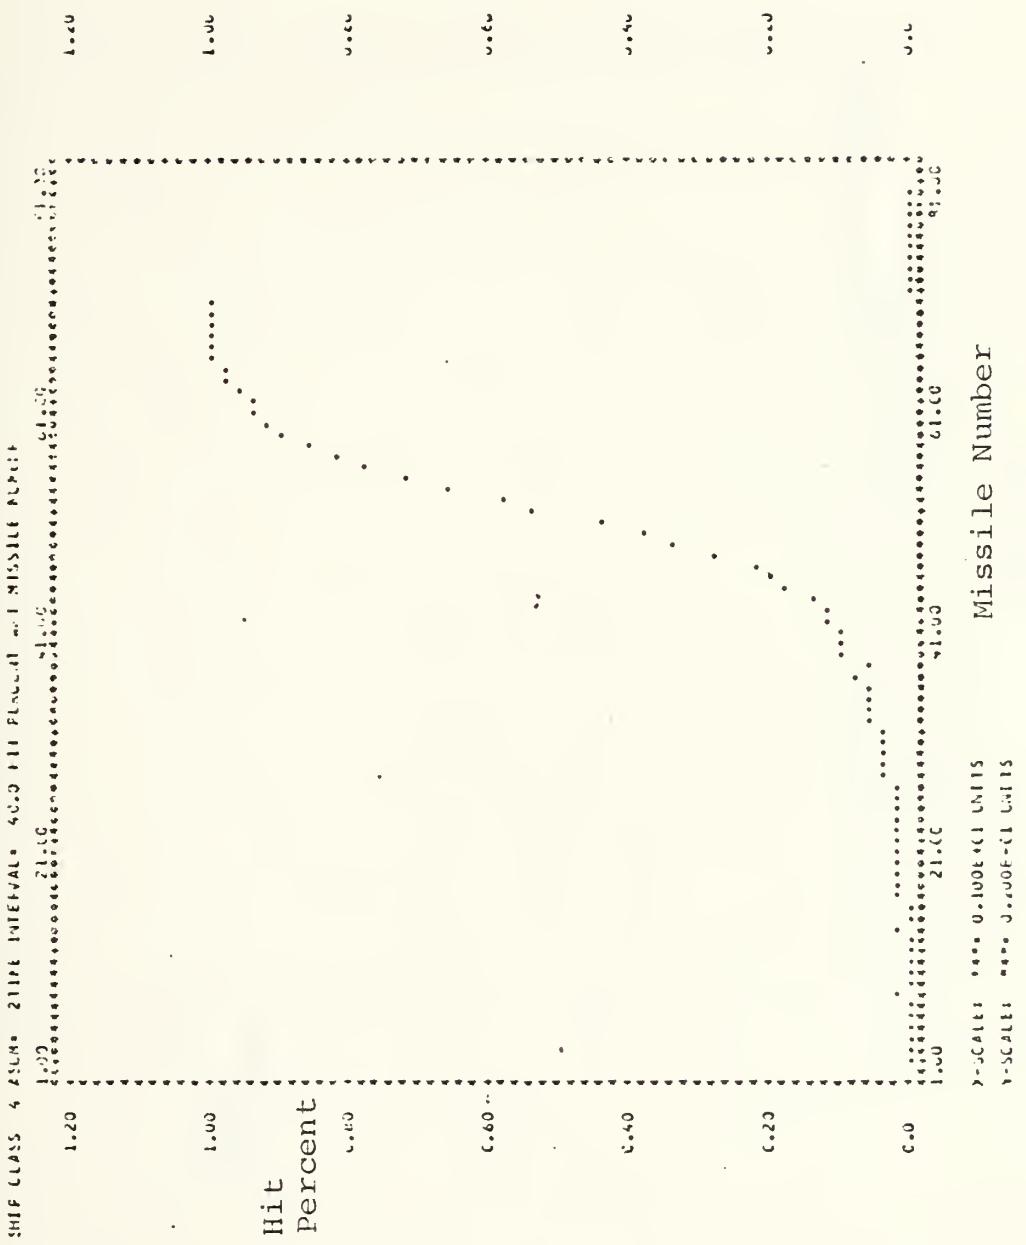


Fig. 15

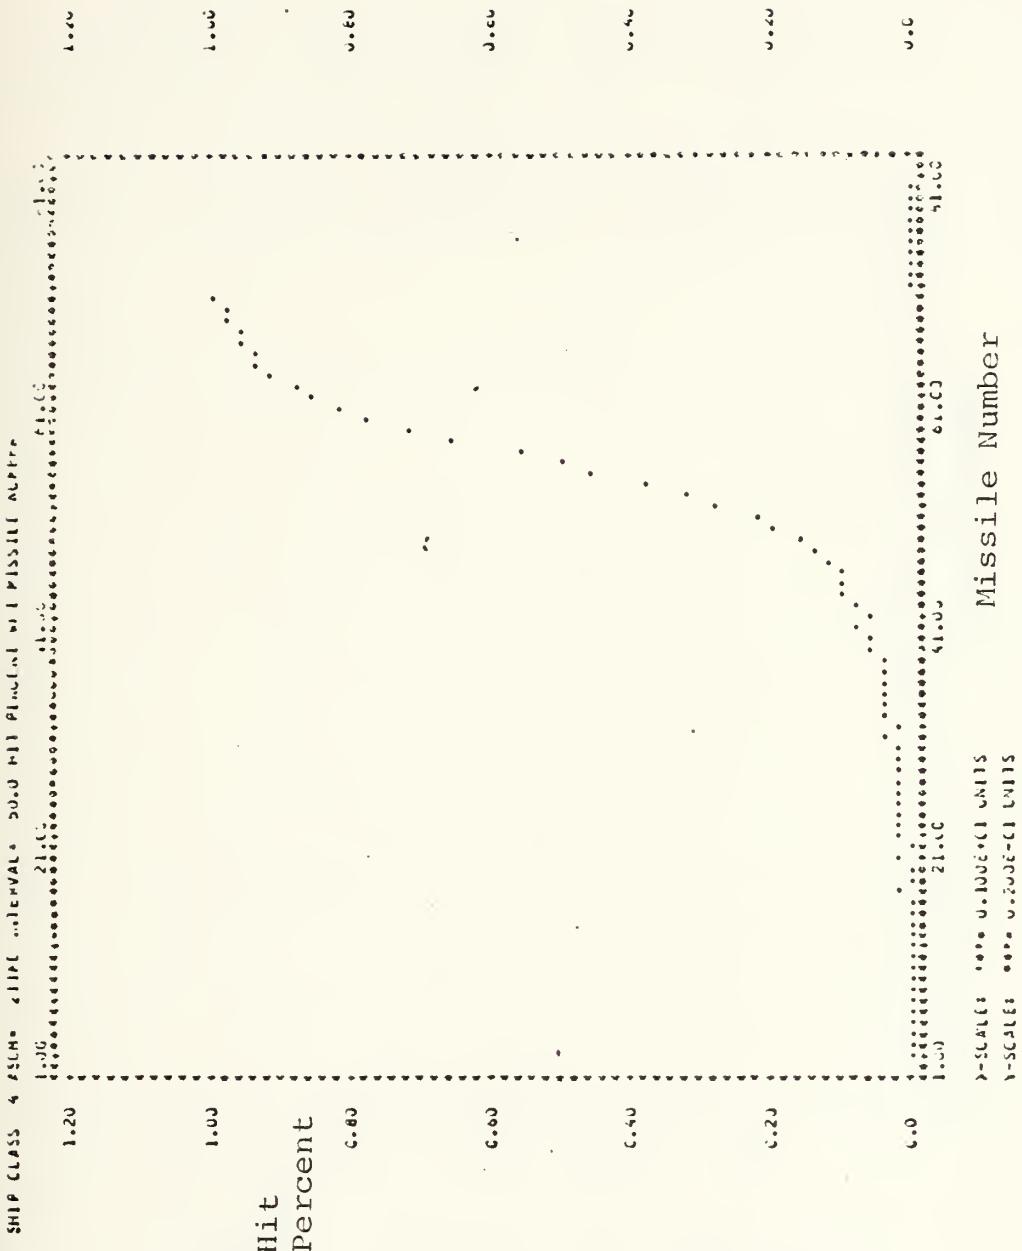


Fig. 16

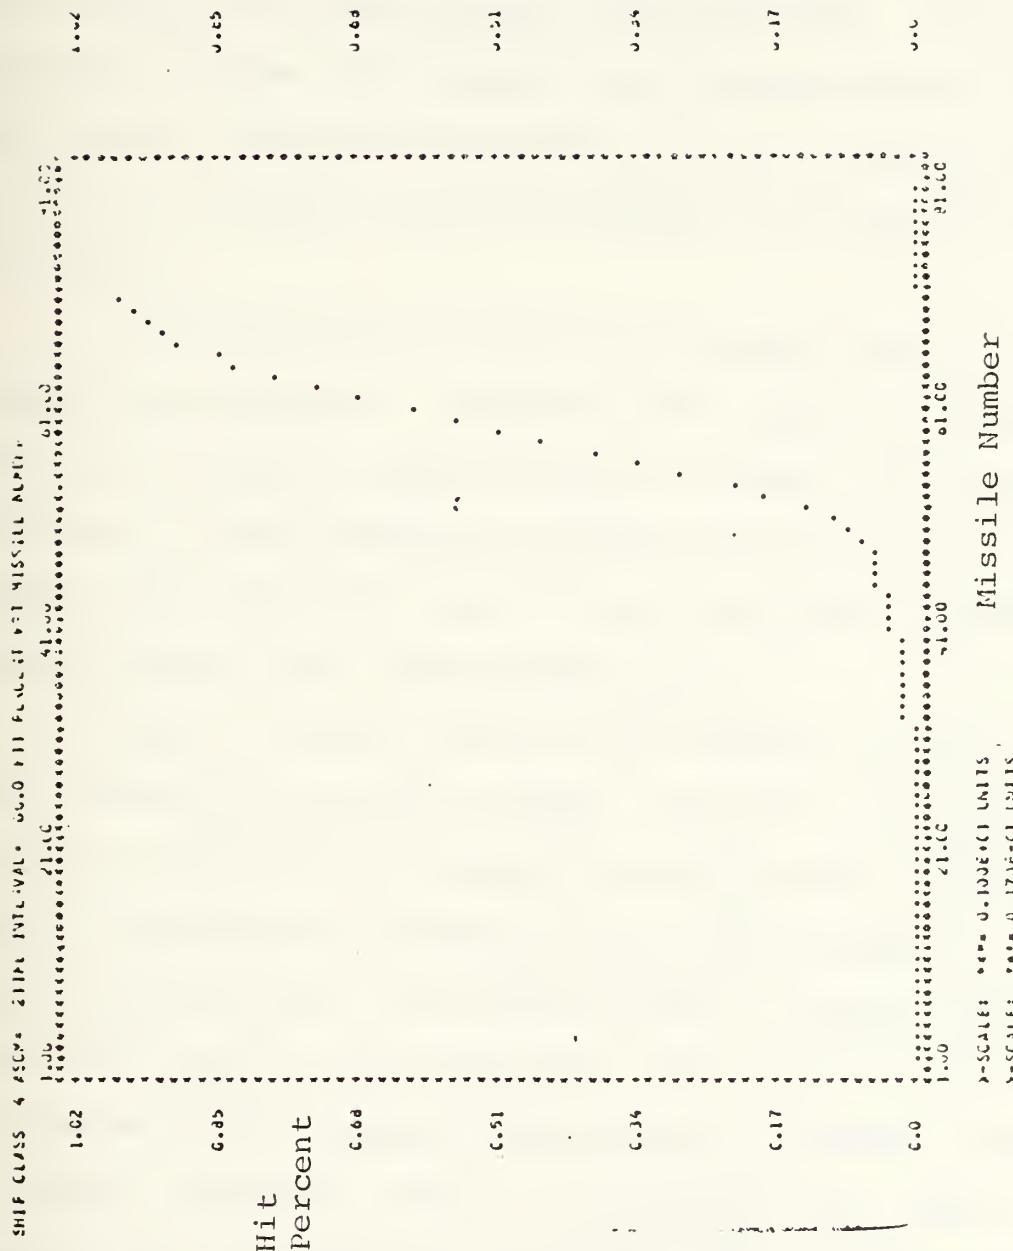


Fig. 17


ASCMs incoming at various TIMINT. The TIMINTs vary between 10 seconds to 60 seconds. Figure 18 superimposes the 10 and 50 second curves for comparison; evidently the effect of changing TIMINT is to shift the curve to the left or right, while maintaining approximately the same slope. As TIMINT increases, so does the capacity and collapse values. From this example the general question was then to resolve how the values progressed from one extreme to the other as TIMINT was varied.

Intuitively there should be no change until a certain threshold was reached. Similarly there should be a maximum value above which no change should be evident (100.0 seconds was chosen as the simulation parameter because it was greater than the flight time of any of the ASCMs considered, and thus safely above the maximum value).

Figure 19 shows a plot of the capacity value for the FFG 7 class plotted against TIMINT. The plot was generated by running the LASMADS simulation using the FFG 7 class ships in the base case scenario with varying TIMINT. Three scenarios are plotted, one with two FFG 7, another with three FFG 7 and the last with four. In each case there is no response in the capacity value until a threshold TIMINT is reached; after that point, the capacity value rises linearly until it reaches its maximum value. Superimposed on the three-ship plot is a line which represents the model



Fig. 1.8

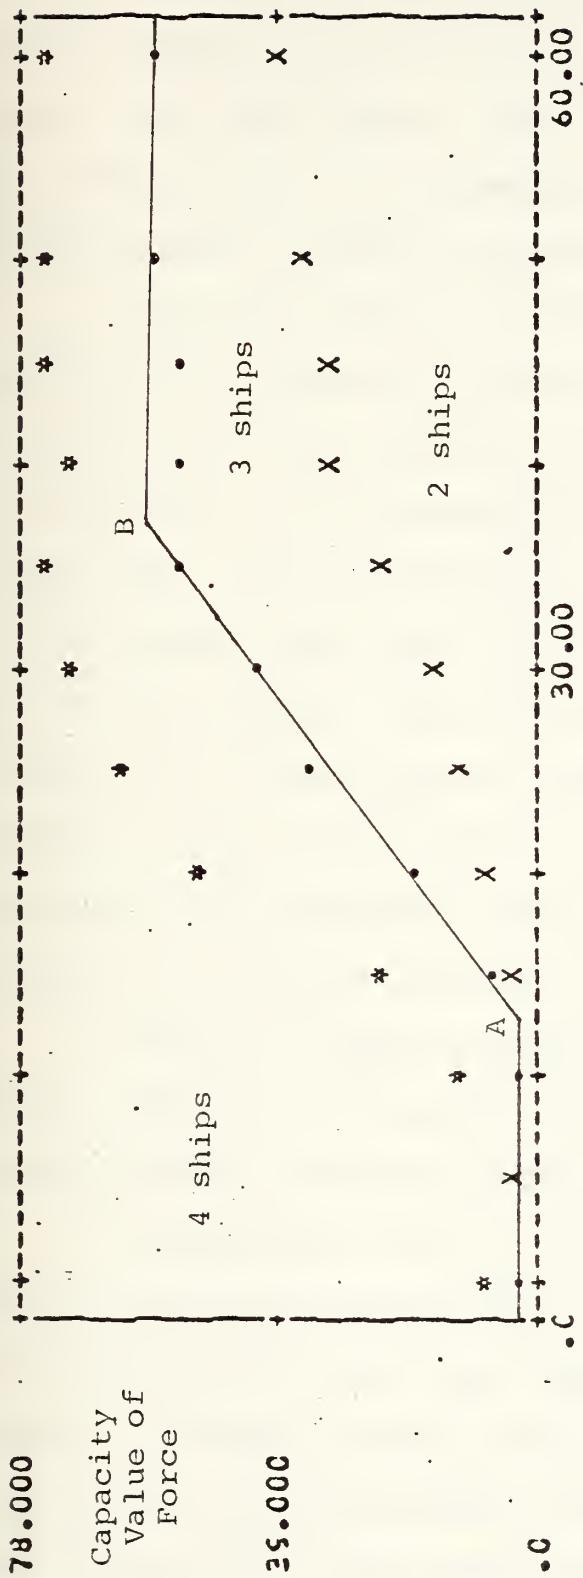

X-SCALE: 0.75×10^4 UNITS Time Interval
 Y-SCALE: 0.130×10^4 UNITS
 PLOT OF SATURATION VALUES VS TIME
 FFCT FERRY CLASS RADAR 1EC
 ALL SHIPS ON ATTACK AXIS

$\sum_{i=1}^4 \text{SHIP}_i = 100$
 $\sum_{i=1}^4 \text{SHIP}_i = 4$

Fig. 19

for the behavior of the capacity and collapse values with varying TIMINT. Point "A" represents the lower inflection point; any TIMINT smaller than this value has no effect on the value. Point "B" represents the upper inflection point; at this TIMINT or above, the ship can reach its full capacity.

Note that there is a difference in the threshold values and the slopes of the lines between the three cases. In particular, the slope of the two-ship case is approximately twice that of the one-ship case, and the three-ship case three times. This is understandable because, for instance, in the two-ship case each individual ship need only engage every other missile. The individual missiles will be targeted 50% at one ship and 50% at the other so the effective targeting rate of each ship is cut in half. If the TIMINT of the ASCMs was 15 seconds, each ship would be effectively in a $\text{TIMINT} = 30$ seconds engagement.

Figure 20 shows a comparable behavior by the collapse value. Testing of representatives from the other classes of ships showed equivalent behavior.

Consequently, the 0.1 second case and the 1000.0 second case define the extremes of performance that a ship may have depending upon the TIMINT of the incoming ASCM stream. As TIMINT varies between the extremes, so does the ship's Capacity and Collapse values. This behavior is modeled from the results of the above experiments.

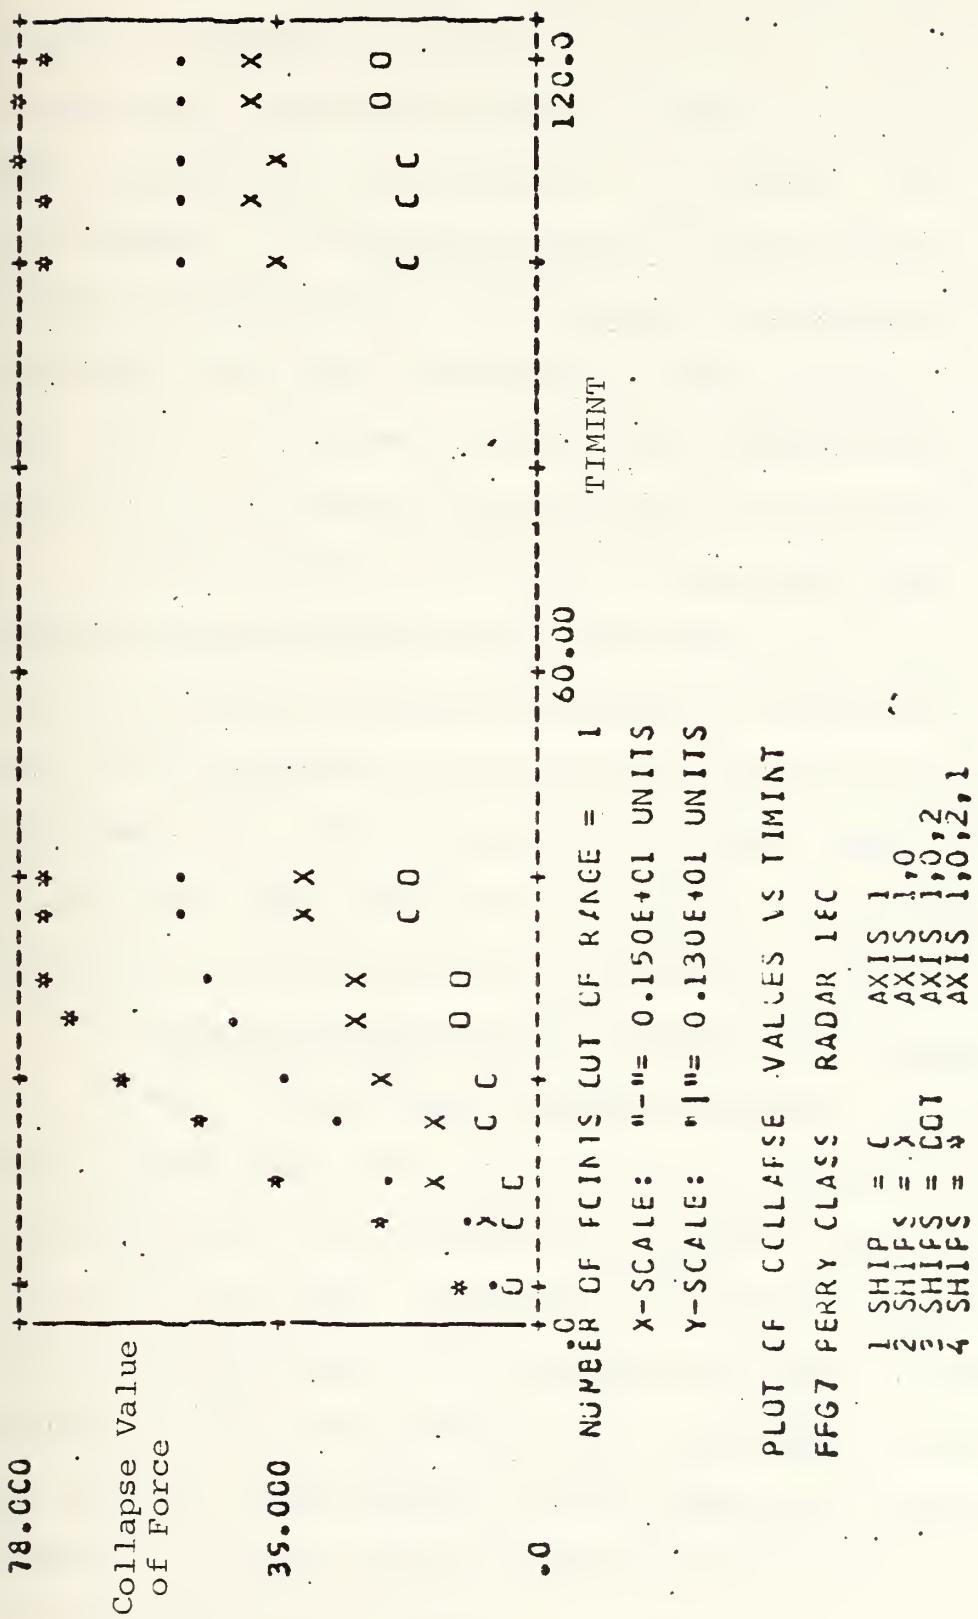


Fig. 20

The change in capacity and collapse values with respect to TIMINT is modeled as consisting of two values: a threshold value below which no change is evident, and an upper value where full potential is reached, with a straight-line between. To determine where the ship falls on this curve, a standard curve with standard inflection points is determined, and the "equivalent" TIMINT is used. The equivalent TIMINT is defined as the actual TIMINT divided by the number of area defense ships present in the engagement.

The numerical value of the upper and lower inflection points will be dependent upon the amount of time it takes for the various ship's defensive systems to complete an engagement. They will be dependent upon cycle time of the weapon system, assessment time, and velocity of the SAM. The values used in the final model should be considered as only approximations consistent with the particular parameters used in LASMADS.

2. Variables Affecting Area Defense Performance

As an introductory example, consider a hypothetical case of a SAM ship with only one area defense battery, no point defenses, and vulnerable to complete destruction when hit by only one ASCM. Consider that the ship has an infinite supply of ammunition, and that the P-K of the defending missile is 1.0, a guaranteed kill. The ASCMs arrive at a time interval wide enough to allow each to be engaged by the SAM ship. In this case the SAM ship will be able to destroy an infinite number of ASCMs.

For the example, let us define the "value" of the ship as the number of ASCMs it would destroy before the ship itself is destroyed. In this example the value of the ship would be infinite.

However, if the size of the magazine was limited to 100 rounds, then the defensive value of that ship would be 100, and the 101st missile would penetrate and destroy the ship.

Now consider the ship with the 100 round magazine, and now supply the ship with a SAM with a P-K of 0.90. Run a large number of the engagements. The value of the ship would not be 90 as might be expected by multiplying the number of rounds by the P-K, but only approximately 10. Since each ASCM has a 10% chance of survival, on average every 10th missile will penetrate the ship's defenses, destroying it and the remaining rounds in the magazine.

Now consider the same ship, same SAM, but install a CIWS system which has the capability to destroy the first ASCM to penetrate the SAM defenses. Run the engagements and the value of the ship will be discovered to have increased to 20. Every 10th missile on average penetrated the SAM defenses still, but in this case the first one was destroyed by the CIWS system. When the second penetrator arrived, the CIWS was out of ammunition, so on average the 20th missile would destroy the ship.

This simple example demonstrates two important points:

First, that there is a need for a balance between area and point defenses in a ship's defensive suite. Providing a ship with a large number of missiles with a very high P-K is futile if the ship does not have the point defense capability to handle ASCMs that leak past the SAM defenses. Area defense systems will destroy more ASCMs only if they survive long enough to engage additional targets.

Second, that there is an interactive nature to the problem. The variables are the P-K of the SAM, the number of opportunities it has to fire on each incoming ASCM (number of possible intercepts), and the point defenses on the ship.

a. Firing Doctrine

As stated before, the firing doctrine used in the LASMADS simulation was "shoot-look-shoot-shoot," or rather "shoot-look-salvo." However, from the example with the mythical ship, this may not be the optimum firing doctrine. When the ship was fitted with the 0.9 P-K SAM and did not have the CIWS, it effectively had 90 rounds destroyed in the magazine by the leaking ASCM. If the ship, instead of firing only one SAM per ASCM had fired two, the P-K per ASCM would have increased to .99, the expected leaker would have been the 100th ASCM, the ship would have run out of ammunition as the limiting factor, and the value would thus have approached

50. Thus firing doctrine can have an important effect on ship survivability.

To illustrate this, two scenarios were run using the LASMADS simulation. In the first, two DDG 2 class ships defended against a cruise missile attack using a "salvo-look-salvo" doctrine against Class 2 ASCM at 10.0 seconds. In the other run, the same scenario was used with a "shoot-look-salvo" doctrine.

Tables 11 and 12 illustrate the results. The scenario using "salvo-look-salvo" increased both the capacity and collapse values of the group, and shot down approximately 10% more ASCM. In a similar test using only one DDG 2 with the range reduced to allow only one intercept, the ship using the salvo doctrine shot down 18% more ASCMs than the ship firing single SAMs.

The DDG 2 class vessel was particularly chosen because of the weakness of its point defense systems. A similar test using CGN 38 class vessels (with full CIWS/ECM mod equipment installed) yielded no effective difference between the two doctrines. The point is that there is no one optimum firing doctrine for every situation and every ship. Gains can be made in ship performance by tailoring its doctrine to its defensive capabilities and the situation. However, the adjustment of firing doctrine to match the characteristics of the actual battle would be very tricky to accomplish. As such, a uniform policy would probably be

TABLE 11

ATTACK STATISTICS		DEFENSE STATISTICS					
NUMBER OF ATTACKING AIRCRAFT	100	NUMBER OF DEFENDING SHIPS	2				
NUMBER OF MISSILES	10.0	NUMBER OF AREA DEFENSE SHIPS	2				
SECONDS BETWEEN WAVES	1	NUMBER OF AREA DEFENSE BATTERIES	4				
NUMBER OF TARGETING PERCENT	0.0	NUMBER OF SELF DEFENSE BATTERIES	4				
FU% TARGETING PERCENT	0.0	NUMBER OF AREA DEFENSE RND'S INIT	EO				
RESULT OF THE ENGAGEMENT OVER 500 REPLICATIONS	24.0	RADAR RANGE					
AVERAGE TOTAL MISSILES	86.08	ECM CYCLE TIME					
AVERAGE TOTAL SHIPS IN AREA DEF	86.00						
BATTERIES REMAINING	0.00						
SSELF DEF BATTERIES REMAINING	0.00						
AREA DEF ROUNDS REMAINING	0.00						
AREA DEF DESTROYED	51.50						
	0.644						
INDIVIDUAL SHIP STATISTICS		SYSTEM PERFORMANCE OF INDIVIDUAL DEFENSES					
NUMBER	CLASS	TYPE POSITION	AXIS	KILLS	RDS EXP	# SINGLE	# SALVO
1	C	C.00	1	0	0.0	0.0	0.0
2	C	C.10	1	0	0.0	0.0	0.0
SHIP	#1 BATS	#2 BATS	#PC SAM	#PC GUN	#CCWS	#MECM	
1	2	2	C	2	0	0	
2	C	C	C	2	0	0	
SHIP	# TARGETED	# KILLS	RDS REM				
1	6.31	44.65	0.0				
2	45.69	42.75	0.0				
			0.0				

TABLE 12

ATTACK STATISTICS

	RESULT OF THE ENGAGEMENT OVER 500 REPLICATIONS			DEFENSE STATISTICS	
NUMBER OF ATTACKING ASW CLASSIFICATIONS	100	NUMBER OF DESTROYED SHIPS	2	NUMBER OF AREA DEFENSE SHIPS	2
AVERAGE MISSILE BETWEEN MISSILES	10.0	NUMBER OF AREA DEFENSE BATTERIES	2	NUMBER OF AREA DEFENSE BATTERIES	4
AVERAGE OF WAVES	1	NUMBER OF SELF DEFENSE BATTERIES	4	NUMBER OF SELF DEFENSE BATTERIES	4
PVI TARGETING	0	NUMBER OF AREA DEFENSE RADS INIT	80	NUMBER OF AREA DEFENSE RADS INIT	80
PERCENT PVI TARGETING	0.0	RADAR RANGE	24.0	RADAR RANGE	24.0
AUGMENT PERCENTAGE	0.0	ECH CYCLE TIME		ECH CYCLE TIME	

INDIVIDUAL SHIP STATISTICS

	NUMBER	CLASS	TYPE	POSITION	AXIS
1	2	2	APC	C.C.	1
2	5	2	SAM	C.10	1
SHIP	#1	BATS	#2	HAILS	APC SAM
1	0		2	0	2
2	C		C	0	0
SHIP	#1	MARSHAL	#2	HILLS	APC GUN
1	23	23	11	78	0
2	45.77	45.77	44.14	6.21	0

SYSTEM PERFORMANCE OF INDIVIDUAL DEFENSES

	KILLS	RDS EXP.	# SINGLE	# SALVO
LONG RANGE AIR DEFENSE SAM	0.0	0.0	0.0	0.0
INT RANGE AIR DEFENSE SAM	10.68	23.56	6.08	6.08
FLINT DEFENSE SAM	0.0	0.0	0.0	0.0
MEDIUM CALIBER GUN	0.41	4.45	0.41	4.45
CLAW GUN	0.0	0.0	0.0	0.0
ELECTRONIC COUNTERMEASURES	0.0	0.0	0.0	0.0
SATURATION	4	COLLAPSE	9	

established by higher authority as a matter of doctrine. Given that, it was decided use exclusively the "shoot-look-salvo" doctrine for area defense batteries and accept any distortion of results that might result in individual cases.

The situation for point defense missile systems was slightly different. In the Endgame routine, each layer of defense was given one opportunity to engage the incoming ASCM. Originally, a P-K of 0.5 was assigned to PD SAM systems, and it was assumed that only one round was fired. However, after some experimentation it was discovered that the units fitted with PD SAM systems were being destroyed by leakers before the ship had fired half of the available magazine loads of missiles. Consequently, it was decided to assume that the firing doctrine for PD SAM was "salvo"; adjustments were made in the simulation by increasing the P-K to 0.75 and reducing the magazine load 50%. The effectiveness of the ships using this system increased as a result. Thus, a "RND EXP" in the summary table for the PD SAM system represents one engagement where two missiles were fired.

b. SAM Probability of Kill

The base case scenario, against Class 2 ASCMs, assigned the area defense missiles a P-K of 0.7. This P-K yielded the values determined in the 0.1 and 1000.0 TIMINT simulation runs. As in the hypothetical example discussed

above, any change in the missile P-K will require an adjustment of the value of the ship. There are two factors to be included in this adjustment:

First, the actual direct reduction of effectiveness of the defenses due to the reduced P-K of the SAM;

Second, the reduction due to the reduced survivability of the platform due to the increased number of leakers.

These were determined by using the LASMADS simulation. A base case scenario was run on all the ships available in the program with the only variance being the P-K assigned to the area defense missiles. P-Ks of 0.1 to 0.9 were run, sequencing by 0.1. Because some of the capacity and collapse values are very small and thus not very sensitive to change (the program generates integer capacity and collapse values), the measure of effectiveness was the total number of ASCMs destroyed by the ship's area defense batteries.

With these numbers it was determined that the results were generally independent of the nationality of the vessel. There was variance in the results, most of which could be attributed to the quality of the point defense systems installed on the ships. However, those cases were few. Thus an aggregated result was used, instead of attempting to assign individual values for each ship class.

The aggregate figures were normalized to the base case and averaged over the universe of ship classes. The two effects were separated by dividing the resulting value by (P-K/0.7).

The results are shown in Table 13. The "effectiveness factor" is defined as the change in capacity and collapse values directly due to the change in effectiveness of the SAM (i.e., the change in the P-K). The "survivability factor" is defined as the change in the capacity and collapse values attributable to battle damage resulting from the changed number of leaking ASCM caused by the change in the P-K of the SAM. These are multiplicative factors.

As an example, consider the calculation of the capacity value for the CG 26 class cruiser in the 1000.0 TIMINT case. The tabulated value of this ship from Table 10 is 27. Suppose the SAM missile on this ship is assigned the P-K value of 0.4. To obtain the corrected capacity value, the tabulated value is multiplied by the effectiveness factor (0.4/0.7) and multiplied by the survivability factor (0.88), both factors obtained from Table 13. The result (13.58) is the corrected capacity value for the cruiser in the 1000.0 TIMINT case when a missile with a P-K of 0.4 is carried.

c. Degradation Factor due to Reduced Detection (Radar) Range

One of the advantages of a longer range radar and a longer range SAM is that multiple engagements of a

TABLE 13

EFFECTIVENESS FACTOR OF SAM VS P-K

P-K	.1	.2	.3	.4	.5	.6	.7	.8	.9
Effect	.1/.7	.2/.7	.3/.7	.4/.7	.5/.7	.6/.7	1	.8/.7	.9/.7

SURVIVABILITY OF SHIP FACTOR VS P-K

P-K	.1	.2	.3	.4	.5	.6	.7	.8	.9
Survivability	.61	.71	.82	.88	.94	.98	1.0	1.02	1.03

single incoming ASCM are possible. If the first round fired misses, there remains sufficient range to fire another SAM to intercept outside the minimum range of the SAM system.

The number of intercepts possible will be determined by the radar range, the time required to establish a firm track, the speed of the ASCM and the SAM, and the assessment time. Figure 21 shows a plot of radar range vs ASCM speed--the lines on the plot show the thresholds between two different possible numbers of intercepts. The assessment times and tracking time were those of the base case scenario with the SAM velocity set at mach 2.0.

One thing to note is the step nature of this plot. For example, if you detected a mach 3.0 ASCM at 100 nm, you would have the opportunity for three intercepts. If you detected that missile at 175 nm, you still would get only three intercepts. The width of this detection plateau suggests that the correction factor to account for the range of detection effect should be a step function based on the number of intercepts achievable.

Table 14 is a theoretical look at the problem based on combining the effects of the P-K of the missile, the missile loadout, and the number of intercepts possible, and determining the extent of the point defense system needed. The firing doctrine is the base case doctrine.

Number of Possible Intercepts

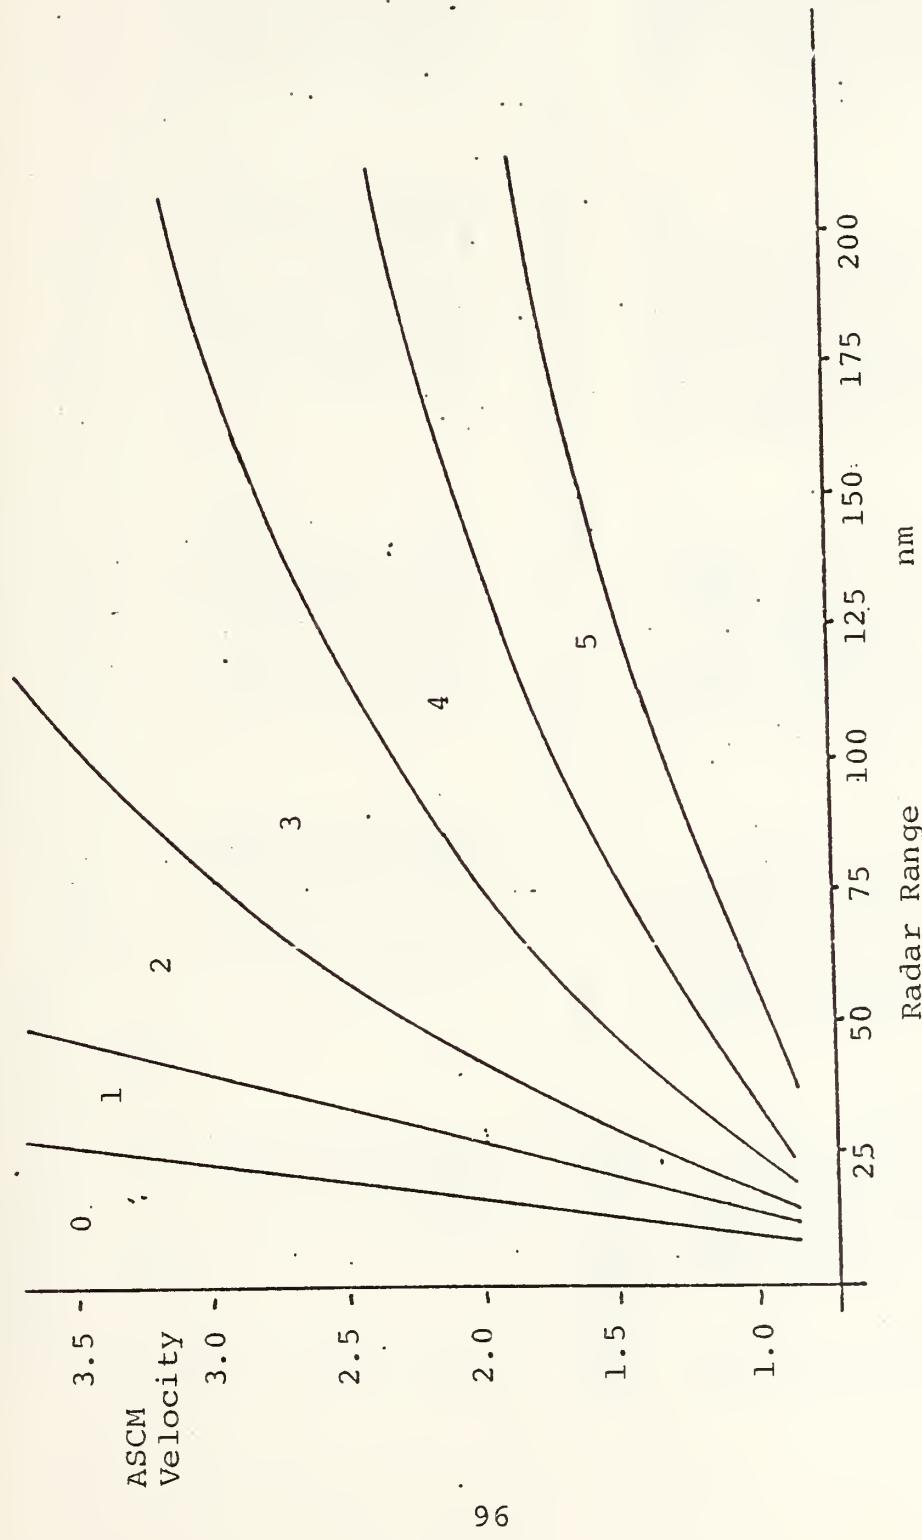


Fig. 21

TABLE 14

Intercepts
Intercepts/Doctrine

P_K	RDS EXP/LEAK	1 (2)	2 (1-2)	3 (1-1-2)	4 (1-1-1-2)	5 (1-1-1-1-2)
.9	2/.01	1.2/.001	1.12/.0001	1.112/ 10^{-5}	1.112/ 10^{-6}	1.112/ 10^{-5}
.8	2/.04	1.4/.008	1.28/.00016	1.256/3.2x10 $^{-4}$	1.2483/6x10 $^{-5}$	1.2483/6x10 $^{-5}$
.7	2/.09	1.6/.027	1.48/.0081	1.444/.0024	1.433/.0007	1.433/.0007
.6	2/.16	1.8/.064	1.72/.0256	1.688/.0102	1.6752/.0041	1.6752/.0041
.5	2/.25	2.0/.125	2.0/.0625	2.0/.0312	2.0/.0156	2.0/.0156
.4	2/.36	2.2/.216	2.32/.1296	2.392/.0778	2.435/.0467	2.435/.0467
.3	2/.49	2.4/.343	2.68/.24	2.876/.168	3.013/.1176	3.013/.1176
.2	2/.64	2.6/.512	3.08/.4096	3.464/.3277	3.7712/.2621	3.7712/.2621
.1	2/.81	2.8/.729	3.52/.6561	4.168/.5905	4.7512/.5314	4.7512/.5314

Expected Missile First Penetrator/RND Expended to First Penetrator
RND #/SAM EXP

.9	100/200	1000/1200	10000/11200	1000000/1111200
.8	25/50	125/175	6250/8000	3125/3925
.7	11.1/22.2	37.04/59.26	123.5/182.7	416.7/601.7
.6	6.25/12.5	15.63/28.13	39.06/67.19	98.04/165.49
.5	4.0/8.0	8.0/16.0	16.0/32.0	32.0/64.0
.4	2.78/5.56	4.63/10.19	7.72/17.90	12.85/30.75
.3	2.04/4.08	2.92/7.01	4.17/11.17	5.95/17.12
.2	1.56/3.12	1.95/5.07	2.44/7.52	3.05/10.57
.1	1.23/2.46	1.37/3.84	1.52/5.37	1.69/7.058

In the upper section, the P-K of the missile is one input and the number of interceptions the other. The body of the table gives the expected number of SAMs fired by the ship at each ASCM and the expected leakage percentage. For example, a ship with a SAM with a P-K of 0.4 with 3 intercept opportunities would be expected to fire 2.32 missiles at each ASCM and have a resulting leakage rate of 0.1296.

The lower section translates this information into the expected number of ASCMs destroyed before the first leaker and the number of SAM missiles expended to that point. Continuing the above example the ship would expect a leaker for every 7.72 ASCM and would have expended 17.90 SAM missiles up to that ASCM. If the ship had a magazine containing, say, 80 missiles, and had no point defenses, about 18 SAM missiles would be expected to have been fired when the 19th ASCM penetrated and destroyed the remaining SAM missiles in the magazine. However, if the ship's point defenses can destroy the leakers, the SAM missiles in the magazine would have an opportunity to be used. In this case the point defenses would have to destroy almost five missiles (80/17.9) in order to be properly "matched" with the magazine capacity of the ship.

This analysis to some extent explains why the Soviet ships are designed with smaller SAM magazines and greater point defenses than U.S. ship. With a smaller P-K SAM,

you store fewer missiles on board rather than more and require more point defense systems.

The question still remains whether the factor adjustment which accounts for the detection range of the incoming ASCM should be a step function based on number of intercepts or a smoother curve. The argument for the assignment of the smoother curve is that any range advantage of detection is useful because the number of intercepts should be considered for the entire attack and not just one ASCM. While one ASCM is being engaged, the others are inbound, so the additional range advantage might allow enough time after the destruction of the first ASCM to shift targets and engage another ASCM.

This question was investigated using the LASMADS simulation. The base case scenario was run for several class ships and several TIMINTs, and the resulting capacity and collapse values plotted vs range of detection. Figure 22 shows a typical plot, this one for the capacity values for CGN 38 class ships. Within the limits of some data scatter, the values show the expected step increase at the threshold range. Figure 23 is a similar case, this one for the collapse value of the FFG 7 class.

A numerical value was assigned to this adjustment by running the base case situation with the universe of ships, varying the ranges of detection to ranges just at the threshold of a lower number of interceptions. The capacity

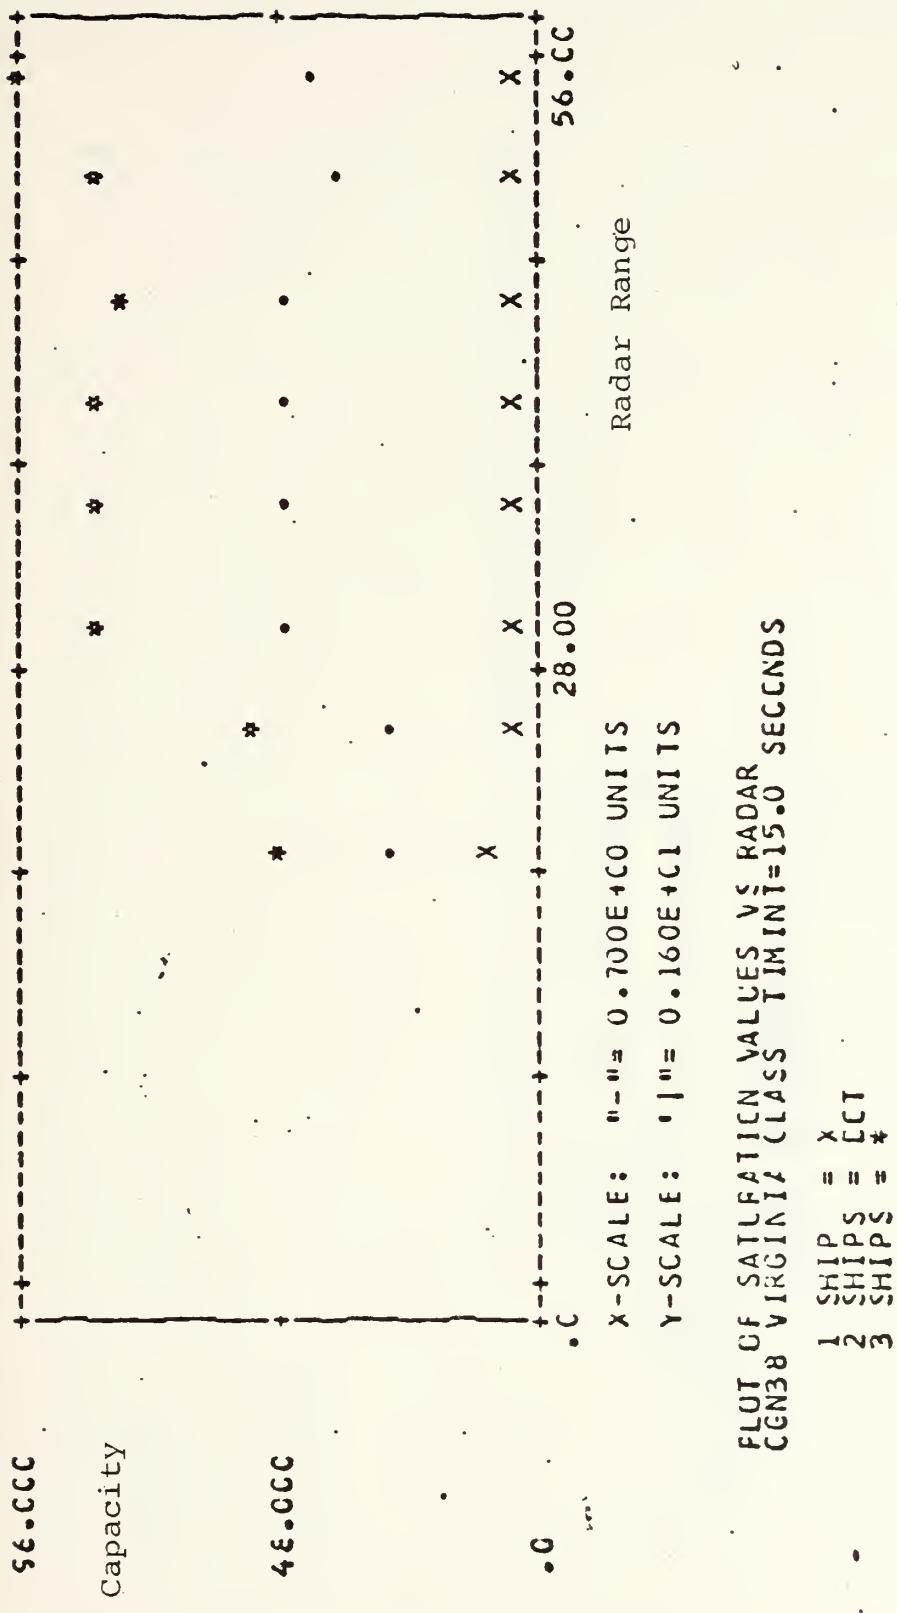


Fig. 22

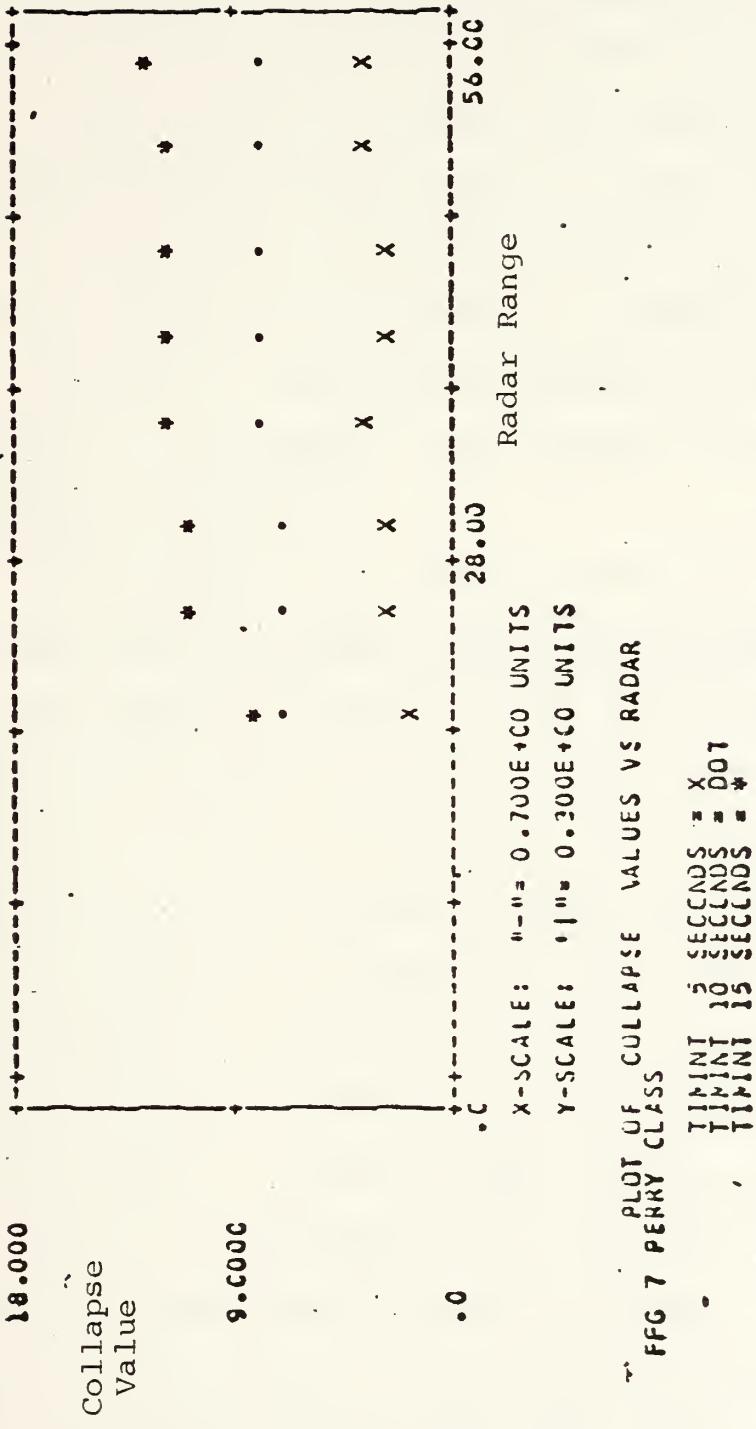


Fig. 23

and saturation values were sufficiently sensitive as to allow their use directly in calculating the results.

Analysis was made for differences attributable to the nationality of the ship. In this case, the Soviet ships were seen to have a consistently higher value. This is attributed to the better matching of the capabilities of the point defense and area defense systems on Soviet ships. Consequently, a separate tabulation was used for Soviet ships. In addition, there were sufficient differences in the behavior of the capacity and collapse values to warrant their separate calculation.

The results are shown in Table 15.

3. Additivity of Forces and Formation Effects

The tentative assumption made when approaching this question is that forces would prove to be additive or better than additive. The idea that, say, 8 air defense batteries would destroy twice the number of attacking ASCMs as 4 batteries is intuitively appealing. And, as discussed before, the adding of additional defenses would be expected to increase the value of the original batteries, because they would be able to survive longer and engage additional targets. In reality, there would be command-and-control considerations which would limit the effective size of any defending force; however, on the scale considered here, more units would certainly be more desirable than fewer. The

TABLE 15
FACTOR--NUMBER OF PRESENTATIONS

PRES	<u>U.S. SHIPS</u>		<u>SOVIET SHIPS</u>	
	FACTOR SATURATION	FACTOR COLLAPSE	FACTOR SATURATION	FACTOR COLLAPSE
1	.52	.70	.33	.72
2	.60	.90	.66	.92
3	1.00	1.00	1.00	1.00
4	1.23	1.07	1.36	1.09
5	1.26	1.09	1.39	1.11

question is how the effectiveness values (capacity and collapse) combine when multiple units are present.

After testing using the LASMADS model it was discovered that forces were less than directly additive. Three factors were isolated in this effect:

First was the "off axis" problem. Ships that were located to the left or right of the axis of attack were most often engaging ASCMs located in a different plane of attack, and thus their P-K was reduced by the Off-Axis Degradation (OAEG) factor. The analysis discussed above demonstrated the effect of varying the P-K on the defensive value of a ship.

Second was the "rear ship" problem. When the attack level neared the capacity of the formation, more and more ASCM intercepts were made at close range. In some cases a rear ship would fire on an ASCM which would impact on a front ship before the rear ship's SAM could intercept the ASCM. This has the effect of eliminating an intercept opportunity and occupying the fire control battery to no avail. Figure 24 illustrates this situation.

Third was the "dead ship" problem. In some situations where one ship is out further on the attack axis, it can be quickly overwhelmed by the attack. When its point defenses are destroyed, the following missiles targeted on that ship have a "free ride" to impact. This, coupled with the "rear ship" effect, can artificially inflate the hit



REAR SHIP PROBLEM: ASCM "A" is targeted against ship "B".
Ship "D" engages ASCM "A" with a computed
intercept point "C".
The ASCM hits the target before the
intercept is effected.

Fig. 24

percentage of the incoming attack. The total number of hits inflicted by the ASCM attack is greater but without any additional effect on the battle group as a whole. Indeed, the "dead ship" is contributing to the defense by serving as a decoy and absorbing hits from ASCMs which would be more profitably targeted on other surviving ships.

Another curious effect is that while the off-axis condition affected both the capacity and collapse values, the other two conditions only affected the capacity, and did not have a discernable effect on the collapse value.

In the final model, additional area defense ships over and above the first were considered to have their capacity and collapse values reduced to 80% of original values. Area defense ships located on the left or right plane of attack were considered to be carrying a SAM with a P-K reduced by the OAEG for all engagements, and ship values modified accordingly. These were rough estimates only. The combinatorial effects of multiple ship formations is an area which further fruitful work could be accomplished.

4. Factors Affecting the Leakage Value

Most of the above discussion deals with factors influencing the capacity and collapse values. Most of their effects were isolated from influencing the leakage value. The "base case" method involved keeping the P-K of the point defense systems constant as a control. Consequently, the behavior of the leakage value was not directly

investigated. A separate series of tests were required to determine the behavior of the leakage factor.

Three conditions were isolated as having first order effects on the behavior of the leakage factor:

The number of intercept opportunities available to the area defense batteries;

The "difficulty" of the ASCM;

The "layers" of the formation.

a. Intercepts Factor

For ships with area defense batteries the SAM batteries are an integral component of the process determining the leakage value before capacity. As shown in Table 14, a greater number of intercept opportunities translates into a smaller leakage rate through the area defenses and a greater interval between leakers, thus allowing point defense systems time to engage. The correction factor for number of intercepts was determined by comparing the leakage rates generated by the universe of AD ships during the range dependence tests. It was found that having intercept opportunities greater than three had a negligible effect on leakage; however, leakage at two intercepts was approximately twice that of three and leakage at one intercept was approximately three times that of three.

b. ASCM "Difficulty"

The point defenses of a ship characteristically consist of many different systems. The performance of point

defenses against different ASCMs is not uniform. For instance, a CIWS system performs best against sea-skimming missiles and has difficulty with mach 2.0 intermediate altitude ASCMs. However, most PD SAM systems perform best against the latter and have difficulty with the former. Consequently, there is no gradiation of cruise missiles from "easiest" to "difficult." The difficulty of a cruise missile is entirely dependent upon the composition of the point defenses it faces.

Consequently, the ASCM "difficulty" factor can only be determined by simulating that missile against those defenses. In the final model, that is a free variable assigned by the operator (CAP). By simulation using LASMADS, the factors were 1.0 for CMCLAS 2 (the base case, a mach 2.0 intermediate altitude ASCM); 1.5 for CMCLAS 3 (a 3.5 mach high altitude ASCM); and 1.2 for CMCLAS 1 (mach 0.8 sea-skimmer).

c. Layer Effect

In large formations, attacking ASCMs which are targeted against ships in the rear of the formation have several successive layers of ships (and AD batteries) to penetrate. For instance, it might be engaged by an outer screen ship with three intercept opportunities and then an inner screen ship with several intercept opportunities and then still have to run the point defenses of the target ship. These successive "screens" provide a serious attrition effect

for the first ASCMs in the attack stream, up until the capacity of the formation is reached.

Deterministically quantifying this is very difficult because of the number of formations and formation variables involved. It essentially becomes a "best fit" variable input at the discretion of the operator, using the experience of observing the effect in several simulation runs.

The "layer" factor thus is used to reduce the leakage value by dividing the leakage rate calculated from the above factors. As a rule of thumb, this factor should vary from 1.0 (single ships) to 3.0 (a conventional U.S. 6-ship battle group) to 6.0 (large battle groups of over 14 ships). This factor divides the leakage rate so a higher assigned number results in a lower leakage rate.

Overall, the model for the determination of the leakage factor is subject to interpretation and is an area where work to refine the model is needed.

D. COMBINED AND SECOND ORDER EFFECTS

There are several aspects of the air defense problem which can be combined with other effects, while retaining the significance of its influence on the problem. The following are some of these aspects.

1. Jamming

Jamming can be characterized under two general categories:

- * Jamming to reduce the effectiveness of search radar; and
- * Jamming to reduce the effectiveness of fire control radar.

The effect of jamming of search radar is to reduce the range of detection of the incoming ASCM. At a certain range which is dependent upon the power of the jamming and the capabilities of the radar, the radar will "burn through" the jamming noise. In terms of the LASMADS simulation this would be represented as a reduction of the cookie-cutter radar range. In terms of the model, this reduction in the range would equate to a reduction in the possible number of intercepts.

The effect of jamming the fire control radar is less clear-cut. As mentioned when discussing the ECM problem, some electronic countermeasures are all-or-nothing: either they work or they do not. For some, the countermeasure could be equated to a reduction in the probability of a kill by the SAM system. If the latter assumption is made, the jamming of fire control radars would reduce to, in terms of the LASMADS simulation and the final model, a reduction of the P-K of the SAM missile.

2. Reduction of the Effectiveness of Command and Control

As discussed before, the LASMADS simulation assumes perfect command and control. Missiles are engaged in the optimum fashion. A reduction of the effectiveness of command and control of the defending forces can be characterized in two ways:

- * As delays in the acquisition, tracking, handoff, and assessment times within each engagement; and
- * as errors which allow missiles to completely escape engagement by area defenses, even though fire control channels (i.e., capacity) are available to engage the ASCM.


To explore the first effect, the LASMADS simulation was run using the Command and Control Degradation option. It was discovered that use of this option had a steplike effect on performance in some cases and no effect on others. The controlling variable was the proximity of the detection range to the threshold dividing one number of possible intercepts from another. For example, when engaging a mach 2.0 missile, there was no difference in detecting the missile at 100 nm or 175 nm--you still received only three possible intercept opportunities. However, a detection at 175 nm allowed 75 nm of "error time"--time which could be wasted in command and control errors and still have no effect on the number of potential intercepts. In the case where detection was made at 100 nm, if only a small amount of time was consumed in errors,

the potential number of intercepts would drop from three to two. Consequently, this factor could be accounted for by reduction in the number of possible intercepts.

The second possibility is more difficult to characterize. In the LASMADS simulation, this situation is simulated using the Penetration option. As shown in Tables 7 and 8 and Figures 4 and 5, the use of the Penetration option affects both the leakage and the capacity and collapse values. The actual effect has dependencies on the battle group size, formation, layers, and possibly others. This option was not explored in any depth and could be the subject of further investigation.

3. Multiple Wave Attacks

Figure 25 shows the plot of probability of hit vs missile number for a large attack against a U.S. CVBG consisting of one CV, one CGN 36, one DDG 2, one DD 963, one FFG 7, and one FFG 1052. Figure 26 is a plot of the same situation with the exception that the attack has been divided into two waves. Figure 25 shows the characteristic curve behavior of a period of low leakage below the battle group's capacity figure; and inflection point at capacity; and the linear rise in the hit probability per additional missile. Figure 26 shows exactly the same pattern with the exception of a drop in the hit probability at the beginning of the second wave. The drop is attributed to the opportunity

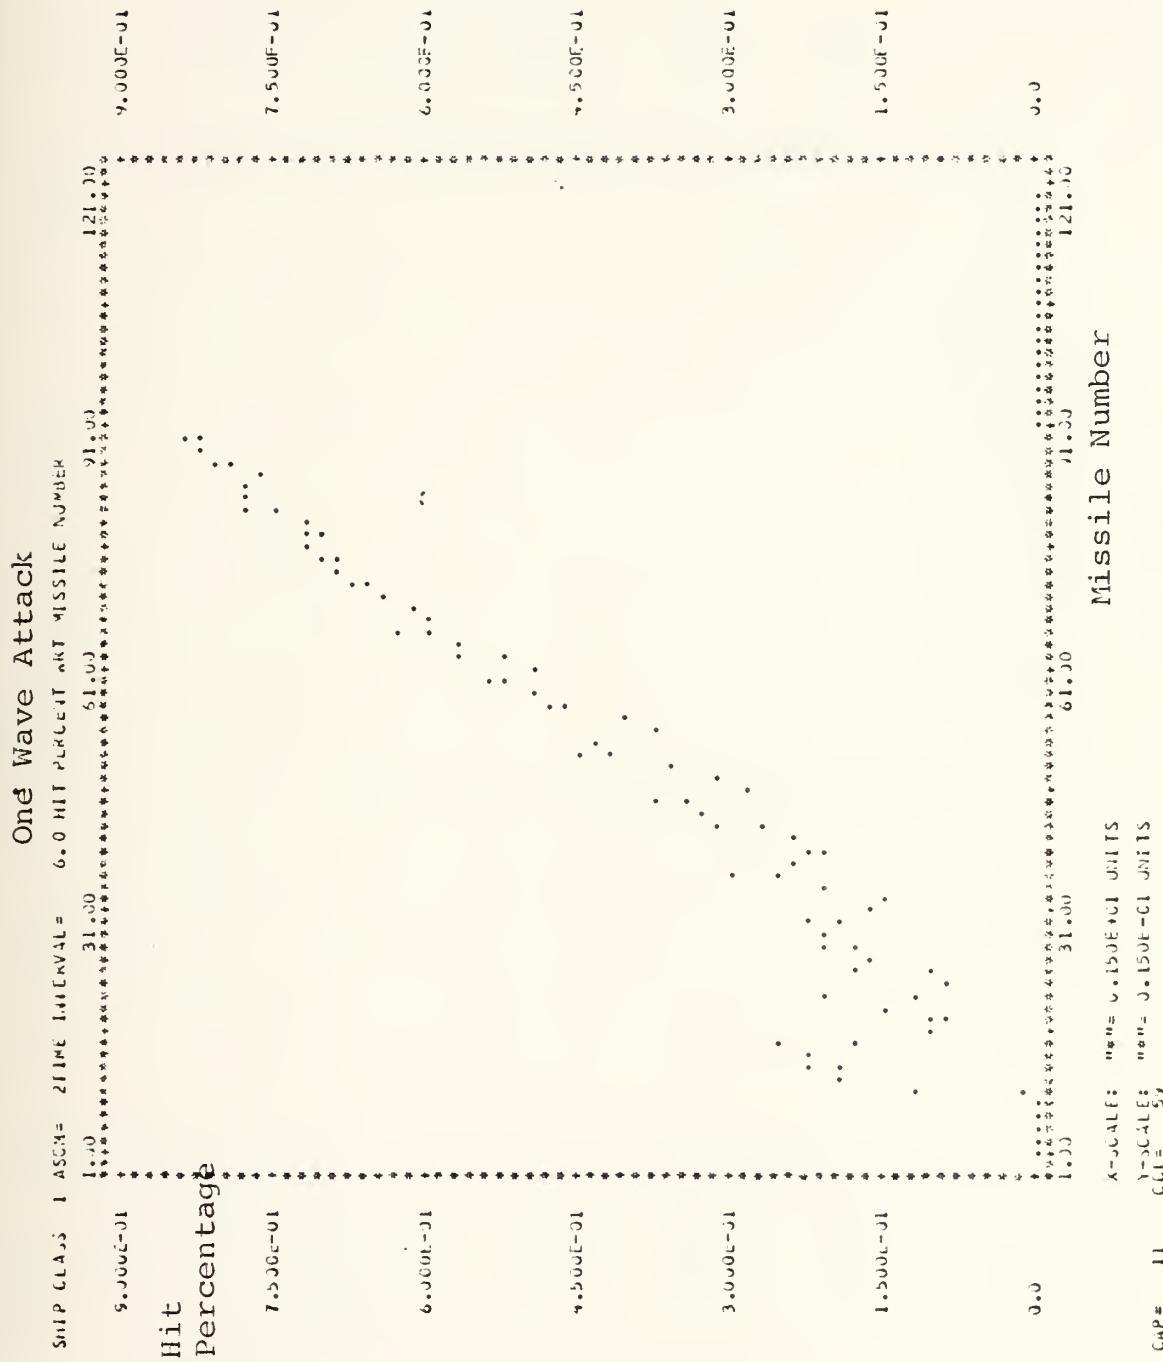

Two Wave Attack

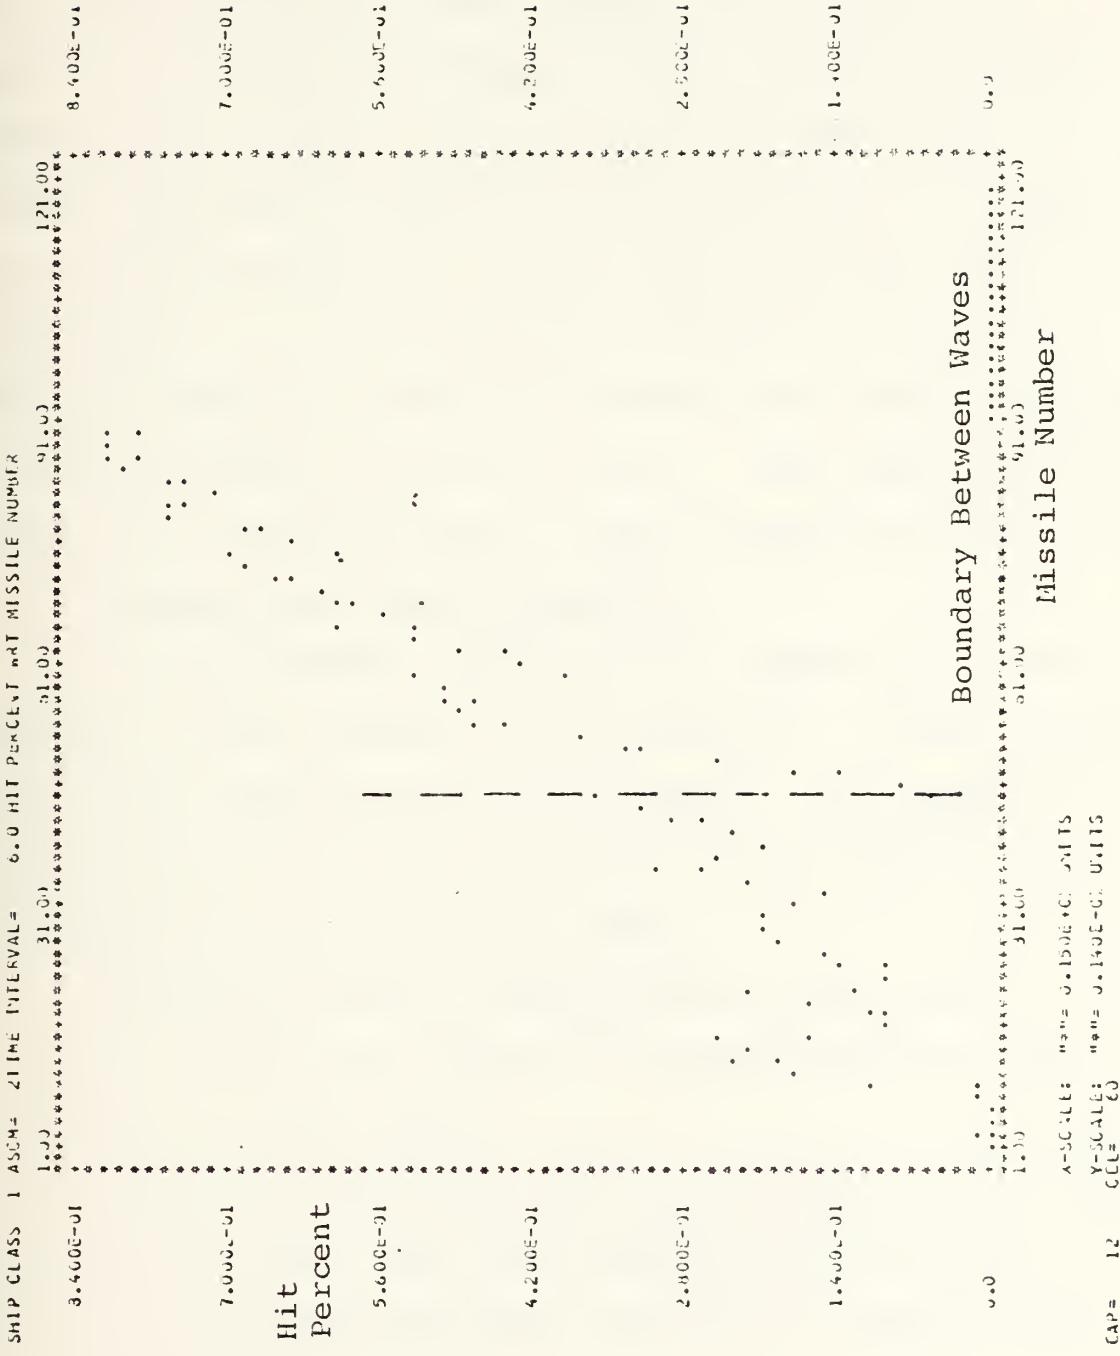


Fig. 26

provided to the defenders to complete their engagements and have all systems ready for the onset of the next wave.

Consequently, if the assumptions hold (i.e., that all the ships are afloat for the second wave and that no change in targeting method is used), then it can be seen that launching an attack in multiple waves is of no particular advantage. In addition, once the initial few missiles exceed the remaining capacity of the defenders, the probability of hit resumes the curve of the one wave attack. So, conceptually, once the remaining capacity is overcome in the second wave, the following missiles can just be considered as continuations of the first attack. This demonstrates the linear and cumulative nature of ASCM attacks on surface ships.

4. Decoys and Counter Targeting

In the LASMADS simulation, the operator has the option to include decoys in the formation. In the targeting phase, these decoys act just like ships: they possess a radar cross section and a priority in the targeting list and will be so targeted by the ASCMs.

There are several assumptions in this model:

- * That the decoys are indistinguishable from other ships;
- * That the decoys are close enough to the formations that ASCMs targeted against them are indistinguishable from other ASCM and thus

they are engaged in the same manner as the rest;

- * That when an ASCM reaches the position of the decoy, the ASCM "disappears" and does not pass on to target another ship;
- * That the decoy is unaffected by the ASCM.

Missiles which penetrate to the decoy are not recorded as "hits". Thus the result of including a decoy in the program is to reduce the number of hits and hit percentage of each missile by a factor approximately directly proportional to the decoy radar cross section divided by the total force radar cross section.

There is dependence on the location of the decoy in the formation. Decoys located well forward on the range axis (in the direction of the incoming attack) are the most effective and have an effect similar to the "dead ship" effect discussed above. They "absorb" and eliminate their targeted ASCMs early, thus eliminating them from potentially being fired on by rear ships. As a rule of thumb, a decoy located on the forward edge of the formation will be three times more relatively effective than a decoy located to the rear of the formation.

Beyond some simple experimentation, nothing further was done in the line of decoys/countertargeting, because some of the assumptions might be weak when compared to actual decoy performance. The lack of creditable, long-life

decoys in any fleet (with the exception of the helicopter, used extensively by the British in the Falklands as an anti-Exocet measure) precluded extensive work or inclusion of decoys in the final model. Given progress in this area, this might be a fruitful area for further work.

IV. THE AGGREGATE MODEL: SUMS

The final resulting model was automated in a program called SUMS. The name was simply suggested by the basic process: individual ship values were modified to account for the various circumstances of the attack, and then added together. The objective of the program was to generate the same net number of hits as the LASMADS simulation, using a much smaller and faster program.

The following discussion is likened to an algorithm: it is a step-by-step procedure, using the LASMADS simulation for determining numerical values.

A. DETERMINATION OF BASIC SHIP VALUES

STEP ONE: Run approximately 1000 replications of the ship against the base case ASCM type. In this study the mach 2.0 intermediate altitude ASCM should be used. To conform with the convention that these values generated should represent the best potential performance of the ship, the ASCM type chosen should be the type for which the defending weapon systems are the most effective in countering. The same type of ASCM is then used in evaluating all the ships. The detection range should be set to allow three intercept opportunities.

Perform one run at TIMINT = 0.0.

Perform one run at TIMINT = 1000.0.

From each of these runs extract the capacity, collapse and leakage values. These values are obtained from the printout which gives the hit percentage, cumulative hits, and cumulative hit percentage for each missile (for an example, see Table 4). The capacity value is the missile number where the hit percentage exceeds 10%. The leakage value is the cumulative hit percentage for the same missile. The collapse value is the missile number where the hit percentage exceeds 50%. The LASMADS simulation includes an output of the capacity and collapse values. At this point the values for the two different time intervals between attacking missiles remain segregated.

These five values are the "tabulated values" (or fire-power indices) of the ship.

STEP TWO: Determine the situational ship value.

The tabulated ship values for both TIMINT cases are multiplied by the following factors:

- * To account for any difference in P-K of the missile from the base case, multiply the capacity and collapse values by $(P-K/0.7)$.
- * To account for the difference in ship's survivability due to the different P-K, multiply by the survivability degradation factor.

Both of the above factors are tabulated in Table 13.

It should be noted that this calculation, accounting for P-K variations, includes any P-K variation due to the location of the ship on the left or right plane of attack. If the ship is located on one of these planes, the P-K of the SAM are considered to be reduced by the OAEG factor.

- * To account for the difference in detection range from the base case, multiply by the factor associated with the number of possible intercepts. This factor is tabulated in Table 15. Note that the number of intercepts allowed should take into account the range of the SAM. For instance, if the SAM has only sufficient range to allow two intercepts, it should use the two intercepts value for any detection range which allows two or more intercepts.

The values calculated above tailor the individual ship indices to the new circumstances. The next section calculates the combined values for the formation as a whole.

B. DETERMINATION OF AGGREGATE FORMATION VALUE

The capacity, collapse, and leakage values of the formation are treated separately.


1. Capacity Value

- * Add the 0.1 second values together. Add the 1000.0 second values together.
- * If there are more than one ship in the formation, multiply the values by the "formation factor." This


is the factor which accounts for "rear ship" and "dead ship" effects. For this model, an estimated formation factor of 0.8 was used. Thus the capacity value of each area defense ship over and above the first area defense ship was multiplied by this factor.

- * Divide the TIMINT curve inflection points by the number of area defense ships; enter the TIMINT of the attack to determine the percentage along the interval that the TIMINT falls; that percentage will be the percentage along the interval between the 0.1 second and the 1000.0 second values. This is the net capacity value.

Figure 27 shows an example of this procedure. The capacity of a four-ship formation has the 0.1 TIMINT value of 9 and the 100,0 TIMINT value of 24. All the ships are area defense ships. The TIMINT of the attack is 10.0 seconds. The TIMINT inflection points are at 20.0 seconds for the lower, and 80.0 for the upper point. (Note that as discussed before, these are only estimated values.) The original TIMINT inflection curve points (Drawing A) are divided by four to give the new TIMINT curve (Drawing B). These new points are 5.0 seconds for the lower, and 20.0 seconds for the higher inflection point. The actual TIMINT of the attack, 10.0 seconds, is one third of the way between the two inflection points; thus the capacity value of the formation under

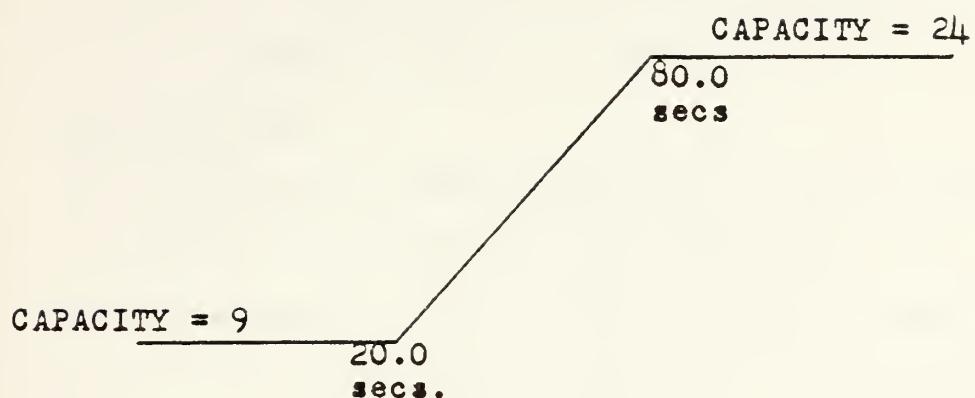

Drawing A

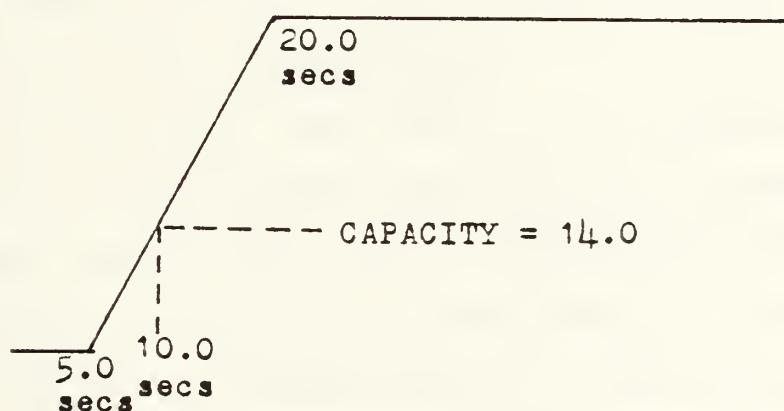

Drawing B

Fig. 27. Use of TIMINT and Inflection Points to Determine Capacity and Collapse Values.

this attack is one third of the way between the 0.1 second TIMINT value and the 1000.0 seconds TIMINT value or, in this case, one third between 9 and 24 is 14.0.

2. Collapse Value

The procedure for determining the collapse value is exactly the same as the procedure for determining the capacity value as described above. The inflection points used will be the inflection points specifically used for the collapse values. Note that these inflection points may not behave exactly in the same way as the capacity values. The exact behavior of these inflection points should be separately checked for the specific "real" data run.

3. Leakage Value

- * Average together the tabulated leakage values of all the area defense ships.
- * Next, multiply this value by the intercept factor. This factor corrects the leakage for reduced intercept possibilities due to reduced detection range.
- * Average together the leakage values for the ships without area defense systems. The correction for intercepts is not made to this group of ships.
- * Average together the leakage numbers from these two groups to obtain one leakage number. This should be a "weighted average:" if there are five times as many area defense ships as there are ships

without area defenses, the leakage value for area defense ships should be given five times the weight in this averaging process.

- * Multiply by the ASCM difficulty factor. This factor was discussed above and is the relative difficulty of destroying the particular type of ASCM by the composite defenses (point and area) of the defending force. This factor is estimated by the operator based on the P-K of the six of defensive systems mounted by the defending force.
- * Divide by the layer factor. This factor was discussed above and is the approximate number of layers of defending systems which the ASCM must penetrate. This factor is estimated by the operator based on the number of ships in the defending force and their formation.

4. Extracting Results

With the above values determined for the formation, the characteristic hit percentage curve per ASCM can be generated. With this curve, the hit percentage of every ASCM is known. The program SUMS simply takes the cumulative hits over each missile to generate the results.

For example, suppose the final values generated by the Sums process for the formation gives a leakage value of 5%, a capacity value of 9, and a collapse value of 19. For the first 9 ASCM, the number of hits would be the leakage

value multiplied by the number of ASCM; in this case, 0.45 hits.

For the 10th ASCM, the percentage jumps to the sloped section of the curve (on Figure 10, the sloped section C-D). The 10th missile would have a hit percentage of 10%, and would thus on average cause an additional 0.1 hits. If the attack consisted of 10 ASCMs, the total hits would then be $(0.45 + 0.10 = 0.55)$. If there was an 11th ASCM, the curve would indicate a hit percentage of 20% so it would be worth an additional 0.2 hits, bringing the total for 11 ASCMs to 0.75 hits. This procedure is repeated until the hits generated by all the missiles in the attack are summed.

Several other factors can be estimated from the number of ASCM in the attack and the number of hits.

ROUNDS EXPENDED: Area defense missile rounds fired can be estimated by multiplying the number of incoming ASCMs in the attack by the "rounds fired per missile" value in Table 14, using the P-K and number of intercepts in the attack.

ROUNDS DESTROYED: Area defense rounds destroyed may be estimated by determining the number of magazines destroyed per missile hit, assuming a uniform distribution of hits; and estimating the remaining average number of rounds in the magazines.

AREA DEFENSE BATTERIES REMAINING: Taking the total number of area defense batteries, and dividing them by the (number of ships times three) will give a serviceable estimate. A similar procedure can be used for self-defense batteries.

5. Testing

Table 16 demonstrates three test runs which compare the results of the LASMADS model to the results of the SUMS model. Case 1 is a six-ship U.S. CVBG; Case 2 is a ten-ship U.S. CVBG; Case 3 is a six-ship Soviet battle group. The correlation between LASMADS and SUMS is very good throughout the range of number of attacking ASCMs. This demonstrates that it is possible to approximate closely the results of a LASMADS run using the SUMS model and firepower indexing of ships. In addition, there were significant computer time savings; 1000 replications of each of the battle group series took approximately 10-50 seconds (depending on number of missiles in the attack) using LASMADS. SUMS ran the entire sequence of ten attacks in less than three seconds.

It should be emphasized that SUMS will run well only in "average" types of cases, i.e., cases that are consistent with the LASMADS model structure. Strange formations or other unusual initial conditions will yield anomalous result. The object of running SUMS was to demonstrate that the program could be successful under a given set of conditions. Since the numbers used are all estimates, there was no great effort

TABLE 16
TEST RESULTS: LASMADS vs SUMS

Case 1	NSHIPS = 6	1-2-2-7-8-9	TIMINT = 4.0
Case 2	NSHIPS = 10	1-2-3-4-5-6-7-8-9	TIMINT = 4.0
Case 3	NSHIPS = 6	17-18-18-16-21-22	TIMINT = 4.0

ATTACK	LASMADS	SUMS	1		2		3	
			L	S	L	S	L	S
10	.51	.53	.03	.09	.19	.21		
20	2.43	2.08	.10	.18	2.14	1.19		
30	4.86	4.57	1.38	.78	4.11	3.02		
40	7.95	7.50	2.47	2.07	6.64	5.53		
50	11.83	11.46	3.61	3.63	10.55	8.70		
60	16.69	16.25	5.53	5.47	14.68	12.55		
70	23.93	21.88	7.37	7.58	20.00	17.06		
80	31.96	28.35	9.78	9.97	23.39	22.24		
90	40.52	35.65	12.50	12.64	34.26	28.09		
100	49.21	43.78	16.27	15.58	40.15	34.61		

taken to verify some of the multiplicative factors or to pin down exactly some of the values used in the algorithms. In particular, the TIMINT inflection points and the ASCM difficulty factors should be worked out more precisely using classified data. A detailed determination of these factors would involve running several representative formations and single ships in base case scenarios, varying TIMINT, to verify the threshold-linear model estimated in this paper and to determine the inflection point values.

V. SINGLE VALUE FIREPOWER INDEXES AND LANCHESTER EQUATIONS

The final form of the values given for the ships is excellent for the purpose of a detailed model of the result behavior of the ship under an attack. However, it is not in a format conducive to Lanchester equation applications.

This can be rectified by some assumptions and mental gymnastics. First, the range of the values (the 0.1 - 1000.0 seconds TIMINT-specified values) could be eliminated by assuming a TIMINT based on the expected opposition. The TIMINT could be based on equipment capabilities leavened with command and control considerations. For example, open source literature gives the TIMINT of launch of the Harpoon in canister launcher at, say, 5.0 seconds. With an entire canister emptying at only 20 seconds, it would not be a broad assumption to assume that TIMINT would be maintained even if many ships were firing simultaneously, i.e., that one ship's launch would be tacked on to the end of the others. By pinning down a number for TIMINT, a capacity number can be determined for each ship.

The capacity number could alternately be treated as an estimate of the "life" of the ship, and subject to attrition. This idea is similar to the way that army firepower indexes are used. A given attack would then cause a given percentage degradation to the capacity of the ship. Or, the capacity

value might be considered as a threshold, below which tolerable damage is sustained (or, perhaps, insignificant damage), and above which progressively larger amounts of damage are sustained.

In any event, when tracking these "engagements" in such a firepower exchange model, ammunition must be accounted for. AAW ammunition is limited and subject to destruction, limiting the sustainability of any defensive force. ASCM ammunition is even more limited. A surface ship essentially disarms itself when it launches its SSM attack.

The application of firepower indexing to naval ships opens the way to the use of Lanchester equations which remain as a fruitful avenue of future work.

VI. CONCLUSIONS

The objectives of this research were to investigate the application of firepower indexes to naval units and to integrate these values into a deterministic model which could predict battle results. Within the limits of unclassified numerical inputs applied to generic systems, this aim was accomplished.

First, a method of determining a five valued AAW firepower index for all naval ships was developed. These numbers provide a potentially powerful operational tool. When confronted with a particular threat, an operational commander can make a reasonable estimate of the adequacy of his force to defeat that threat. If found to be inadequate, he can estimate the amount of additional firepower required for the situation. He can estimate the contribution made to his defenses by each vessel, and thus can better judge the risks involved in detaching ships from one duty to another. Consequently, the allocations of forces and campaign planning can proceed with a better foundation for balancing the line between concentration of force and economy of force.

Second, using these firepower indexes, a deterministic model (SUMS) was created which can provide rapid estimates of force losses and ammunition expended and destroyed when

a force is subjected to attack. This provides attrition estimates for the operational planner, the complement to firepower indexing in the planning process. Not only does the planner have an estimate of the firepower needed to meet an attack, he has an estimate of his resulting losses and an estimate of the remaining firepower of the force. Allowing for losses can ensure that the force will be sufficiently strong to sustain itself in the threat area for a sufficient time to carry out its mission. Such estimates must be incorporated into any planning process. The use of firepower indexes and the Sums model provides a powerful tool towards that end.

A serendipitous result of the investigation into firepower indexing was a better understanding of the aggregated dynamics of the air defense problem. Several things were learned: that there is a cooperative nature between area and point defense; that the installation of area and point defenses must be balanced for either one or the other to reach full potential; and that tailoring the firing doctrine to the individual ship can result in significant performance gains.

The discovery that U.S. ships cannot reach the full potential of their air defense systems for lack of point defenses is disturbing; the discovery that the Soviet ships have an almost optimal balance between area defense systems and point defense systems is equally disturbing, and indicates

that the Soviets have more successfully matched the actual design of their ships to analytical optimums.

This research has not provided the "final answer" to the question of naval use of firepower indexes. Indeed, it has only suggested a methodology, an approach to the problem. There is ample room for expansion on the theme, with the possibility of the gain of an important new analytical tool.

APPENDIX A
SUGGESTIONS FOR FURTHER WORK

As mentioned in several places in the paper, there are many areas remaining where fruitful work can be accomplished in the area of firepower indexing, and the use of firepower indexing. In addition, some of the tools used in the course of this research (the LASMADS simulation and the SUMS model) have room for improvement. The following are some suggested areas where work could be accomplished.

1. "REAL" VALUE DETERMINATION

The numbers generated in this study were generic estimates based on unclassified inputs. Consequently, effort was used on the models, and not on the numbers generated. Determination of firepower index values, inflection point values, ASCM difficulty factors, intercepts factors, and the entire range of figures used is an area for development and application.

2. INDEPENDENCE OF FIRST ORDER EFFECTS

The final model used in SUMS was a multiplicative model--a number is multiplied by another to reach a result. For example, in the "Leakage" calculation, the final leakage is determined by multiplying an intercepts factor, a "difficulty" factor, and a formation or "layers" factor.

The use of a multiplicative model assumes that these factors are independent, and that varying one will not affect the value of the other. There are several places where this type of model and assumption are used. This assumption could be investigated further.

3. COMPARISON OF THE RESULTS OF LASMADS WITH MORE DETAILED SIMULATIONS

To meet the objectives specified for LASMADS, several assumptions were made, such as the suppression of geometric effects, the effect of crossing shots on the value of a ship, and others. These assumptions were assumed to have a small effect on the actual combat results of the simulation. This assumption could be verified by comparing the results of the LASMADS simulation with larger, more detailed simulations, including war games.

4. REFINEMENT OF THE LASMADS MODELS

LASMADS includes a variety of smaller models within the simulation. For example, there is the targeting model, the point defense model, the damage model, and others. Adjustment of the LASMADS program to include an option which would allow defending ships to only engage ASCM targeted against ships in the same plane as the defending ship would improve the simulation results with regard to low altitude subsonic missiles. Throughout the simulation, the models were either simplified to an extreme, incorporated some

sweeping assumptions, or made "generic" to suppress individuality. There is room within each of these models for improvements. The establishment of better and more specific models would contribute to the accuracy of the process of determining the firepower index numbers.

5. COMBINATORIAL EFFECTS OF FORCES

Only basic work was performed in investigating the effects of adding forces together. It was shown that one plus one did not equal two: that there were factors of formation, weapons types, command and control, the others which impacted the net value of an aggregate of individual units. This would be an important field for further work.

6. DECOYS, COMMAND AND CONTROL, MISSILE PENETRATIONS, AND OTHERS

Within the LASMADS simulation, there were several additional options which could be invoked, such as the use of decoys, command and control problems, and others. The effect of using these options on the results of the engagement were not explored, and not incorporated in the final Sums model. Investigation of these factors and incorporation of them into the Sums model would be important for operational planning.

7. FIREPOWER DEGRADATION WITH DAMAGE

The final output of the Sums model is number of hits. The distribution of hits, and number of systems and ammunition destroyed, can be inferred. However, the net effect of

this damage on the power of the force was not explored, for lack of a better and more ship-specific damage model. One of the eventual outputs of SUMS should be not only hits but remaining firepower. This work would be an important addition to the SUMS model.

8. TAILORING INDIVIDUAL SHIPS

Throughout the study a certain level of performance was allowed for each system. It was assumed that the crew would operate to the efficiency of the systems.

However, as noted in the introduction, there are insufficient numbers on board a naval unit to use the law of large numbers as a rationale to average out the unit performance. Wide variation of unit capabilities will result from training, manning levels, and leadership differences. The effect of these differences on the firepower index of a ship would bear further study and be applied in realistic planning.

9. ASW AND ASuW FIREPOWER INDEXES

This study confines itself to determining firepower index for surface ships when under attack by anti-ship cruise missiles. As noted in the introduction, similar firepower indexes could be developed to represent the combat capability of a ship in the other warfare areas. In addition, the extension of the ASCM firepower index to attack by manned aircraft is needed.

LINEAR ANTI-SHIP MISSILE AREA DEFENSE MODEL
ONE DIMENSIONAL ANTI-SHIP MISSILE AREA DEFENSE MODEL
MODEL DESIGNED AS AN APPROXIMATION OF GROUPED DEFENSE VS
ASCM ATTACKS, TO DETERMINE VALUE OF TIME AND FORCE MAGNITUDE
AUGUST 1983 A.D. ZIMM LDDR USN
L.A.S.-A.A.D.S

L.A.S. • 11. A.D. 5

LINEAK ANTI-SHIP MISSILE AREA DEFENSE SIMULATION

MODERATELY DESIGNED AS AN APPROXIMATION OF THE GROUPED DELAYS VS
ASCM ATTACK, TO DETERMINE VALIDITY OF THE LMM FOR USE
AUGUST 1983 A. G. ZIMMERMANN

LIMELIGHTS CONTINUE

EXPLANATION OF TERMS IN THE PROGRAM:

FIGURE (210) THE PERCENTAGE OF THE MISSING AREA DUE TO THE ABSOLUTE BIAS IN THE MEASURED TIME FOR ASSESSING THE STABILITY OF A STACK OF ASSESSES AGAINST THE NUMBER OF ASSESSES IN THE STACK.

C3DGP PERCENTAGE OF HANDOFF EXPERIENCING CCC DEGRADATION
C3DPM MAX TIME OF CCC DEGRADATION
CCCDEF = 1. COMMAND AND CONTROL DEGRADATION OPTION SELECTED
CNCLAS AS PER PK
CMEATA(210,3) FOR I-TH MISSILE (MAXIMUM OF 210 MISSILES)

1,1 = INITIAL RANGE
1,2 = CURRENT RANGE
1,2 = IMPACT I-TH MISSILE
1,2 = RESULTS OF ATTACK FOR I-TH MISSILE
1,1 = WEAPON SYSTEM WHICH KILLED ASCM (0=MISSILE HIT)
1,2 = SHIP WHICH DESTROYED ASCM OR WAS HIT BY ASCM
1,2 = SHIP DESTROYED OR CYCLE TIME FOR CCM DEFENSE AD
1,1 = CURRENT ASCM POSITION
ASCMDV CUMULATIVE NUMBER OF MISSILES FIRED
CUMPC(210) COMPUTED NUMBER OF MISSILES FIRED
CYCLE(6) CYCLE TIME BETWEEN END OF ONE ENGAGEMENT TO BEGIN
FOR NEXT ENGAGEMENT, FOR I-TH WEAPON SYSTEM CODED
AS IN PK
DELAY DELAY OPTION SELECTED
DEIREF(6) NUMBER OF ROUNDS FIRED BY I-TH CLASS WEAPONS
DT COMPUTED HANDOFF TIME OF DAY
EXCS DECAY FOR EACH CROSS SECTION
ENVEL(2,3) FIRING RANGES FOR I-TH CLASS SAM (WIN, SALVU, MAX)
FCCN NUMBER DIVISION OF REPELLENTS
FCREF INTERNAL DIVISIONS FOR EIRECON (PERCENTAGE)
FILE NUMBER OF BEING FIRING BATTERY ON A SHIP
FIRCON(110,3) FIRE CONTROL DATA FOR I-TH BATTERY
FLAC(4,10,1) GEOPHASIC RANGE, FOR I-TH BATTERY
FLAC(4,10,2) SAME AS PREVIOUS, THIS BATTERY
FLAC(4,10,3) HAZARD LEVEL, THIS BATTERY
FIRE NUMBER OF MISSILES FIRED AT A TARGET, THIS VALUE = 12
FIRHO NUMBER OF MISSILES FIRED ON A TARGET, THIS PAKPUT TYPE
FIREV(20,2) FIRING RANGE OF SUPPORT SHIPS
FIRERS NUMBER OF SHIPS WITH AREA OF OFFENSE SYSTEMS
FLAG(4,10,1) NUMBER OF SHIPS VALID
FLITR FUEL FOR THIS UNIT SHIPS
FLIS(20) NUMBER OF HITS ON THE I-TH SHIP
FLTAT(20) NUMBER OF HITS ON THE I-TH SHIP
FVTPER PERCENTAGE OF MISSILES FIRED BY THIS SHIP
HVIVTL FACTOR OF VULNERABILITY OF SHIP
ISCTAF(20) SET NUMBER OF SHIPS FOR ULTRASOUND
MISSLE NUMBER OF MISSILES FIRED BY THE I-TH SHIP
PAGE(4) NUMBER OF ROUNDS FIRED BY THIS SHIP
PAGE(S) TOTAL AIR DEFENSE ROUNDS FIRED BY THIS SHIP

PACN	NUMBER OF	THE MAGAZINE SURVIVING THE ENGAGED BATTERY
PAGCP(40)	INITIATOR OF MAGAZINE OPERATIONAL STATUS OF THE 1-TH MAGAZINE	AD 00970
	=0, MAGAZINE DESTROYED OR EMPTY	AD 00980
	FARHT AIR DEFENSE ROUTINES REMAINING	AD 00990
PAGCM	FCTAL NUMBER OF MAGAZINES ENVOLUE	AD 01000
PAGEN	FARHT SHIP OF 1-TH MISSILE BATTERIES	AD 01010
PATRS	NUMBER OF AREA DEFENSE SAM SYSTEMS	AD 01020
NBAT	NUMBER OF SELF-DEFENSE SYSTEMS	AD 01030
NRSDS	NUMBER OF SHIPS IN THIS SCENARIO RUN	AD 01040
NSHIPS	OFF-XAXIS DEGRADATION OF PK OF AREA DEFENSE MISSILES	AD 01050
CADEG	NUMBER OF SINGLE SHIPS FOR AREA DEFENSE MISSILES	AD 01060
CNET(2)	=1, ALLOWS A DESIGNATED PLACEMENT OF ASCA TO PENETRATE AD 01070	
FEN	TO POINT DEFENSES WITHOUT AREA DEFENSE ENGAGEMENT	AD 01080
PENPER	PERCENTAGE OF MISSILES ALLOWED TO PENETRATE	AD 01090
PERI-6	INTERMEDIATE STORAGE FOR OUTPOST	AD 01100
PK(6,3)	PULPABILITY OF KILL (AEAPK,ASC) LOG RANGE AREA DEFENSE SAM	AD 01110
WEAPON=1	INITIAL RANGE RADAR AREA DEFENSE MISSILE	AD 01120
	=2 SHORT RANGEST DEFENSE MISSILE	AD 01130
	=3 MEDIUM CAL PER GUN	AD 01140
	=4 CLAS CON	AD 01150
	=5 CLAS CON	AD 01160
	=6 CLAS CON	AD 01170
A3G1	ELC IRONIC COMBINE MEASURE	AD 01180
	=1 LOW ALTITUDE ASCM SYSTEMIC	AD 01190
	=2 INTERMEDIATE ALTITUDE ASCM TRANSITIVE	AD 01200
	=3 HIGH ALTITUDE ASCM SUPERSONIC	AD 01210
RADAR	CCOK HE-CUTTER RADAR RANGE	AD 01220
RANGE(2,2)	SEQUENCING VARIABLE FOR RETRIEVING RADARATORS	AD 01230
RANDUM	MINIMUM AND MAXIMA INTEGRAL RANGE FOR 1-TH CLASS SAM	AD 01240
RANK	NUMBER OF SHIPS REACHING 1-TH SHIP	AD 01250
RCS(20)	CROSS SECTEN ARRAN TU KANONIY SELFCI MISSILI TARGET	AD 01260
RRKEM(20)	ALREADY SALVO OF MISSILES, TIME BETWEEN SHOTS	AD 01270
SALVO	WHEN FIRING SALVO OF MISSILES, TIME BETWEEN SHOTS	AD 01280
SDREF	SHIP NUMBER OF SELFCI BATTERIES MAINTAINING	AD 01290
SDFRE	BATTERY AVAILABILITY TOTAL FOR SELFCI SYSTEMS	AD 01300
SDTOT	TOTAL NUMBER OF SELFCI SYSTEMS	AD 01310
SELDFE(120,4)	DEGRADE SHIP ON SYSTEMS FOR 1-TH BATTERY	AD 01320
	1,1 = SHIP ON SYSTEMS FOR 1-TH BATTERY	AD 01330
	1,2 = WEAPONS TYPE CODE	AD 01340
	1,3 = AVAILABILITY CODE	AD 01350
	1,4 = NUMBER OF SELFCI SYSTEMS REMAINING	AD 01360
SUCLAS(20)	INPUT SHIP CLAS	AD 01370
	1,5 CARRIER	AD 01380
	1,6 CARRIER	AD 01390
	1,7 CARRIER	AD 01400
	1,8 CARRIER	AD 01410
	1,9 CARRIER	AD 01420
	1,10 CARRIER	AD 01430
	1,11 CARRIER	AD 01440
	1,12 CARRIER	AD 01450
	1,13 CARRIER	AD 01460
	1,14 CARRIER	AD 01470
	1,15 CARRIER	AD 01480
	1,16 CARRIER	AD 01490
	1,17 CARRIER	AD 01500
	1,18 CARRIER	AD 01510
	1,19 CARRIER	AD 01520
	1,20 CARRIER	AD 01530
	1,21 KIPPOV AND	AD 01540
	1,22 KIPPOV AND	AD 01550
	1,23 KIPPOV AND	AD 01560
	1,24 KIPPOV AND	AD 01570
	1,25 KIPPOV AND	AD 01580
	1,26 KIPPOV AND	AD 01590
	1,27 KIPPOV AND	AD 01600
	1,28 KIPPOV AND	AD 01610
	1,29 KIPPOV AND	AD 01620
	1,30 KIPPOV AND	AD 01630
	1,31 KIPPOV AND	AD 01640
	1,32 KIPPOV AND	AD 01650
	1,33 KIPPOV AND	AD 01660
	1,34 KIPPOV AND	AD 01670
	1,35 KIPPOV AND	AD 01680
	1,36 KIPPOV AND	AD 01690
	1,37 KIPPOV AND	AD 01700
	1,38 KIPPOV AND	AD 01710
	1,39 KIPPOV AND	AD 01720
	1,40 KIPPOV AND	AD 01730
	1,41 KIPPOV AND	AD 01740
	1,42 KIPPOV AND	AD 01750
	1,43 KIPPOV AND	AD 01760
	1,44 KIPPOV AND	AD 01770
	1,45 KIPPOV AND	AD 01780
	1,46 KIPPOV AND	AD 01790
	1,47 KIPPOV AND	AD 01800
	1,48 KIPPOV AND	AD 01810
	1,49 KIPPOV AND	AD 01820
	1,50 KIPPOV AND	AD 01830
	1,51 KIPPOV AND	AD 01840
	1,52 KIPPOV AND	AD 01850
	1,53 KIPPOV AND	AD 01860
	1,54 KIPPOV AND	AD 01870
	1,55 KIPPOV AND	AD 01880
	1,56 KIPPOV AND	AD 01890
	1,57 KIPPOV AND	AD 01900
	1,58 KIPPOV AND	AD 01910
	1,59 KIPPOV AND	AD 01920
	1,60 KIPPOV AND	AD 01930
	1,61 KIPPOV AND	AD 01940
	1,62 KIPPOV AND	AD 01950
	1,63 KIPPOV AND	AD 01960
	1,64 KIPPOV AND	AD 01970
	1,65 KIPPOV AND	AD 01980
	1,66 KIPPOV AND	AD 01990
	1,67 KIPPOV AND	AD 02000
	1,68 KIPPOV AND	AD 02010
	1,69 KIPPOV AND	AD 02020
	1,70 KIPPOV AND	AD 02030
	1,71 KIPPOV AND	AD 02040
	1,72 KIPPOV AND	AD 02050
	1,73 KIPPOV AND	AD 02060
	1,74 KIPPOV AND	AD 02070
	1,75 KIPPOV AND	AD 02080
	1,76 KIPPOV AND	AD 02090
	1,77 KIPPOV AND	AD 02100
	1,78 KIPPOV AND	AD 02110
	1,79 KIPPOV AND	AD 02120
	1,80 KIPPOV AND	AD 02130
	1,81 KIPPOV AND	AD 02140
	1,82 KIPPOV AND	AD 02150
	1,83 KIPPOV AND	AD 02160
	1,84 KIPPOV AND	AD 02170
	1,85 KIPPOV AND	AD 02180
	1,86 KIPPOV AND	AD 02190
	1,87 KIPPOV AND	AD 02200
	1,88 KIPPOV AND	AD 02210
	1,89 KIPPOV AND	AD 02220
	1,90 KIPPOV AND	AD 02230
	1,91 KIPPOV AND	AD 02240
	1,92 KIPPOV AND	AD 02250
	1,93 KIPPOV AND	AD 02260
	1,94 KIPPOV AND	AD 02270
	1,95 KIPPOV AND	AD 02280
	1,96 KIPPOV AND	AD 02290
	1,97 KIPPOV AND	AD 02300
	1,98 KIPPOV AND	AD 02310
	1,99 KIPPOV AND	AD 02320
	2,00 KIPPOV AND	AD 02330
	2,01 KIPPOV AND	AD 02340
	2,02 KIPPOV AND	AD 02350
	2,03 KIPPOV AND	AD 02360
	2,04 KIPPOV AND	AD 02370
	2,05 KIPPOV AND	AD 02380
	2,06 KIPPOV AND	AD 02390
	2,07 KIPPOV AND	AD 02400
	2,08 KIPPOV AND	AD 02410
	2,09 KIPPOV AND	AD 02420
	2,10 KIPPOV AND	AD 02430
	2,11 KIPPOV AND	AD 02440
	2,12 KIPPOV AND	AD 02450
	2,13 KIPPOV AND	AD 02460
	2,14 KIPPOV AND	AD 02470
	2,15 KIPPOV AND	AD 02480
	2,16 KIPPOV AND	AD 02490
	2,17 KIPPOV AND	AD 02500
	2,18 KIPPOV AND	AD 02510
	2,19 KIPPOV AND	AD 02520
	2,20 KIPPOV AND	AD 02530
	2,21 KIPPOV AND	AD 02540
	2,22 KIPPOV AND	AD 02550
	2,23 KIPPOV AND	AD 02560
	2,24 KIPPOV AND	AD 02570
	2,25 KIPPOV AND	AD 02580
	2,26 KIPPOV AND	AD 02590
	2,27 KIPPOV AND	AD 02600
	2,28 KIPPOV AND	AD 02610
	2,29 KIPPOV AND	AD 02620
	2,30 KIPPOV AND	AD 02630
	2,31 KIPPOV AND	AD 02640
	2,32 KIPPOV AND	AD 02650
	2,33 KIPPOV AND	AD 02660
	2,34 KIPPOV AND	AD 02670
	2,35 KIPPOV AND	AD 02680
	2,36 KIPPOV AND	AD 02690
	2,37 KIPPOV AND	AD 02700
	2,38 KIPPOV AND	AD 02710
	2,39 KIPPOV AND	AD 02720
	2,40 KIPPOV AND	AD 02730
	2,41 KIPPOV AND	AD 02740
	2,42 KIPPOV AND	AD 02750
	2,43 KIPPOV AND	AD 02760
	2,44 KIPPOV AND	AD 02770
	2,45 KIPPOV AND	AD 02780
	2,46 KIPPOV AND	AD 02790
	2,47 KIPPOV AND	AD 02800
	2,48 KIPPOV AND	AD 02810
	2,49 KIPPOV AND	AD 02820
	2,50 KIPPOV AND	AD 02830
	2,51 KIPPOV AND	AD 02840
	2,52 KIPPOV AND	AD 02850
	2,53 KIPPOV AND	AD 02860
	2,54 KIPPOV AND	AD 02870
	2,55 KIPPOV AND	AD 02880
	2,56 KIPPOV AND	AD 02890
	2,57 KIPPOV AND	AD 02900
	2,58 KIPPOV AND	AD 02910
	2,59 KIPPOV AND	AD 02920
	2,60 KIPPOV AND	AD 02930
	2,61 KIPPOV AND	AD 02940
	2,62 KIPPOV AND	AD 02950
	2,63 KIPPOV AND	AD 02960
	2,64 KIPPOV AND	AD 02970
	2,65 KIPPOV AND	AD 02980
	2,66 KIPPOV AND	AD 02990
	2,67 KIPPOV AND	AD 03000
	2,68 KIPPOV AND	AD 03010
	2,69 KIPPOV AND	AD 03020
	2,70 KIPPOV AND	AD 03030
	2,71 KIPPOV AND	AD 03040
	2,72 KIPPOV AND	AD 03050
	2,73 KIPPOV AND	AD 03060
	2,74 KIPPOV AND	AD 03070
	2,75 KIPPOV AND	AD 03080
	2,76 KIPPOV AND	AD 03090
	2,77 KIPPOV AND	AD 03100
	2,78 KIPPOV AND	AD 03110
	2,79 KIPPOV AND	AD 03120
	2,80 KIPPOV AND	AD 03130
	2,81 KIPPOV AND	AD 03140
	2,82 KIPPOV AND	AD 03150
	2,83 KIPPOV AND	AD 03160
	2,84 KIPPOV AND	AD 03170
	2,85 KIPPOV AND	AD 03180
	2,86 KIPPOV AND	AD 03190
	2,87 KIPPOV AND	AD 03200
	2,88 KIPPOV AND	AD 03210
	2,89 KIPPOV AND	AD 03220
	2,90 KIPPOV AND	AD 03230
	2,91 KIPPOV AND	AD 03240
	2,92 KIPPOV AND	AD 03250
	2,93 KIPPOV AND	AD 03260
	2,94 KIPPOV AND	AD 03270
	2,95 KIPPOV AND	AD 03280
	2,96 KIPPOV AND	AD 03290
	2,97 KIPPOV AND	AD 03300
	2,98 KIPPOV AND	AD 03310
	2,99 KIPPOV AND	AD 03320
	2,00 KIPPOV AND	AD 03330
	2,01 KIPPOV AND	AD 03340
	2,02 KIPPOV AND	AD 03350
	2,03 KIPPOV AND	AD 03360
	2,04 KIPPOV AND	AD 03370
	2,05 KIPPOV AND	AD 03380
	2,06 KIPPOV AND	AD 03390
	2,07 KIPPOV AND	AD 03400
	2,08 KIPPOV AND	AD 03410
	2,09 KIPPOV AND	AD 03420
	2,10 KIPPOV AND	AD 03430
	2,11 KIPPOV AND	AD 03440
	2,12 KIPPOV AND	AD 03450
	2,13 KIPPOV AND	AD 03460
	2,14 KIPPOV AND	AD 03470
	2,15 KIPPOV AND	AD 03480
	2,16 KIPPOV AND	AD 03490
	2,17 KIPPOV AND	AD 03500
	2,18 KIPPOV AND	AD 03510
	2,19 KIPPOV AND	AD 03520
	2,20 KIPPOV AND	AD 03530
	2,21 KIPPOV AND	AD 03540
	2,22 KIPPOV AND	AD 03550
	2,23 KIPPOV AND	AD 03560
	2,24 KIPPOV AND	AD 03570
	2,25 KIPPOV AND	AD 03580
	2,26 KIPPOV AND	AD 03590
	2,27 KIPPOV AND	AD 03600
	2,28 KIPPOV AND	AD 03610
	2,29 KIPPOV AND	AD 03620
	2,30 KIPPOV AND	AD 03630
	2,31 KIPPOV AND	AD 03640
	2,32 KIPPOV AND	AD 03650
	2,33 KIPPOV AND	AD 03660
	2,34 KIPPOV AND	AD 03670
	2,35 KIPPOV AND	AD 03680
	2,36 KIPPOV AND	AD 03690
	2,37 KIPPOV AND	AD 03700
	2,38 KIPPOV AND	AD 03710
	2,39 KIPPOV AND	AD 03720
	2,40 KIPPOV AND	AD 03730
	2,41 KIPPOV AND	AD 03740
	2,42 KIPPOV AND	AD 03750
	2,43 KIPPOV AND	AD 03760
	2,44 KIPPOV AND	AD 03770
	2,45 KIPPOV AND	AD 03780
	2,46 KIPPOV AND	AD 03790
	2,47 KIPPOV AND	AD 03800
	2,48 KIPPOV AND	AD 03810
	2,49 KIPPOV AND	AD 03820
	2,50 KIPPOV AND	AD 03830
	2,51 KIPPOV AND	AD 03840
	2,52 KIPPOV AND	AD 03850
	2,53 KIPPOV AND	AD 03860
	2,54 KIPPOV AND	AD 03870
	2,55 KIPPOV AND	AD 03880
	2,56 KIPPOV AND	AD 03890
	2,57 KIPPOV AND	AD 03900
	2,58 KIPPOV AND	AD 03910
	2,59 KIPPOV AND	AD 03920
	2,60 KIPPOV AND	AD 03930
	2,61 KIPPOV AND	AD 03940
	2,62 KIPPOV AND	AD 03950
	2,63 KIPPOV AND	AD 03960
	2,64 KIPPOV AND	AD 03970
	2,65 KIPPOV AND	AD 03980
	2,66 KIPPOV AND	AD 03990
	2,67 KIPPOV AND	AD 04000

5 302 2 L⁹ BLACK CLOUD 1 • 22 KRIVAK
 6 DDG 37 15 SUVRMENNY • 23 AUXILIARY W/ PU
 7 DOD 963 16 OJALOVY
 8 FFG 7 17 MUSKOVA
 9 FFG 1052 18 KARA
 9 DECCY 19 KRISSA II
 SHENY(20,3) FOR THE I-TH SHIP
 1,1 = MINIMUM RANGE TO FIRE AREA DEFENSE SAM
 1,2 = RANGE FIRE SHOULD TO FIRE AREA SALVOES SAM
 1,3 = MAXIMUM RANGE TO FIRE AREA DEFENSE SAM
 NUMBER OF SHIPS PERIODICALLY SYSTEMS AVAILABLE TO I-TH SHIP
 NUMBER OF SHIPS EXPERIMENTING FIREPOWER KILL
 INVENTORY OF WEAPONS, (SHIP, WEAPONS TYPE)
 PRINT POSITION SELECTOR
 SLRBAI(140,3) SAM LONG RANGE SAM PIKE INFRASTRUCTURE FOR I-TH BATTERY
 1,1 = NUMBER OF SAM PIKE CONTRACT UNITS (I.E. FNGAGE)
 1,2 = NUMBER OF SAM PIKE CONTRACT UNITS (I.E. FNGAGE)
 1,3 = NR OF SAM PIKE CONTRACT UNITS SERVING AU BATTERIES
 INDICATOR OF NATIONALITY OF SHIPS 1=SOVIET, 2=OTHER=U.S.
 GEOGRAPHIC POSITION OF THE I-TH SHIP OR
 FOR I-TH SHIP, TYPE OF WEAPONS ONLY
 0 = SELF DEFENSE WEAPONS ONLY
 1 = LONG RANGE SAM
 2 = INTERCRAFT RANGE SAM
 3 = DECOY
 SYSKIR(6) NUMBER OF KILLS BY I-TH CLASS WEAPON
 CURRENT TIME
 TARGET 1 CURRENT SHIP NUMBER
 TARGET(20) INITIAL MISSILES LAUNCHED ON I-TH SHIP
 TIMER TIME INTERVAL BETWEEN ASCA
 INTFR TIME WHILE THE ASCA WILL ENTER THE NEXT WEAPON CYCLE
 TRACK TIME REQUIRED FROM INITIAL DETECTION TO FIRST
 TACT(2) NUMBER OF SALVOES FOR AREA DEFENSE MEDIUM
 AVSEP FIRST SEPARATION BETWEEN FIRST AND SECOND SALVO
 XCST(20) SHIP RADAR CROSS SECTION IN METERS
 ON HIGH VALUE OUTS

REMAINING VALUES ARE LENGTHS AND STAKAGE VALUES ARE VALUES
 STORED IN SPECIFIC INTEGER OR REAL VALUES *
 ** REMAINING VALUES ARE LENGTHS AND STAKAGE VALUES ARE VALUES
 STORED IN SPECIFIC INTEGER OR REAL VALUES *

REAL XUS(20), RUS(20), GAVL(20), PBL(20), MAXV(20), TVAL(20), TVAL(20), ASSV(20)
 REAL SAMV(20), TIPV(20), ZPVS(20), MAXV(20), TVAL(20), TVAL(20), ASSV(20)


```

REAL SALVO, INIT, SDT1, L(120), RANK, CMVCL, C3DGP, JADEG
REAL DCGS, ADTML(180), YY, HVYPER, HVYVUL, C3DTM, DT
REAL F, TOTAF(20), TARTOF(20), KTOTALF(20), HITUF, SHKLF
REAL FCFF, SURGE, DIAFFET(6), ASCMF(210), PENCER
REAL MACREM, MACODES, RADAR, TACK, UNE(12), INOT(2)
REAL PERI, PER2, PER3, PER4, PER5, PER6, RESUTL(3,12)
REAL NRESC(3,15), CUM(210), CUMP(210), WAVSEP, YYY, SKEF(20)

REAL#4 RAND(1000), GRES1(80), GUOA(120), GRES2(60), GRES3(120)
DO 3 I=1,120
  A(I)=1*I
3 CONTINUE
DO 4 I=1,3
  S(I)=1
4 CONTINUE
ROTATION OF INPUT & OUTPUT LINE 2477
DO 7 AA=1,2
  TA=AA
7 CONTINUE
DO 5 SS=1,5
  TI=5
5 INITIALIZATION OF INPUT STREAM ARRAYS
HITUF=0
HCREM=0
SDRIM=0
ADFRIC=C
SFRIC=C
SHKLF=0
AUREM=0
TWT(1)=C..J

```



```

I WU(I(2))=C•0
UNE(I(1))=C•0
UNE(I(2))=C•0
MAGRT=0
MAGERT=C

C      DO 10 I=1,20
      H101AL(I)=0
      KTOTAL(I)=0
      TARIC(I)=0
      RNDREW(I)=0
      KREP(I)=0•C
      MAG(I)=0
      MAG(I+20)=0
      CUNTINU
      DO 20 I=1,10
      SYSKIL(I)=0
      DF-IR(I)(I)=0
      CONTINUE
      DO 30 I=1,21)
      AS(CMH(I))=0
      NUM(I)=1
      CUMP(I)=J•0
      CUMP(I)=J•0
      CONTINUE
      C      INITIALIZE STEADY AND RANDOM NUMBERS
      C      IXT=1
      C      RAN=1
      CALL RUT(6,AN,RAND,IXT)
      C      USERS INPUT THE INFORMATION FOR THE INITIALIZATION
      C      OF FLUIDS (INPUTS)
      C      DU 45 R=1,REPS
      C      INDICATE NUMBER OF REPLICATES OF STREAM
      REPS=500
      F=FLUID(1,REPS)
      C

```


* IF DEFENDING SHIPS ARE SOVIET, ENTER 1; OTHERWISE ENTER 0
 IF AA.GT.2)SOVIET=1
 * INPUT NUMBER OF SHIPS AND DECKS (TOTAL) USED IN THIS RUN
 NSHIPS = 5
 * ENTER THE NUMBER OF ATTACKING SHIPS
 ATTACK = 100
 ATTACK = 100 * FLUO(AA)
 IF (AA.GT.1) ATTACK=45
 * ENTER THE CLASS OF THE ATTACKING ASCEA
 CMCLAS = 2
 * ENTER THE TIME INTERVAL BETWEEN BATTLES IN CLOUDS
 TMIN = 0.1
 TFA(AA.GT.1) TMIN=1000.0
 TFA(GT.1) = (3.0 * (FLUO(GT.1))) - 300
 TFA(GT.2) = (3.0 * (FLUO(GT.2))) - 300
 TFA(GT.2) TMIN=1000.0
 * TO INVOKE RAND ACTIVATING DELAY, SET OUTDAY=1; OTHERWISE OUTDAY=0
 DELAY = 0
 * IF OUTDAY=1, INDICATE DELAY TIME
 DT=0.0
 * TO INVOKE CO DETECTION, ASSEMBLANT AND FIRING AND OFF DUTAYS
 SET C(COG=1; CETHERIAL
 CGCGD=0
 * IF CGCGD=1, ENTER DECIMAL OF INTERACTIONS INFLUENCE
 CGCGD=0.0
 * COUNT OF DELAY WHILE BT A UNIFORM RANDOM NUMBER FOR USE IN COMPUTATION OF SECS AD
 CDTIM=0.0
 * TO ALLOW PENETRATION OF AREA DEFENSES WITHOUT STATEMENTS,
 PEN = 1
 PENPERK=1.0
 * INDICATE PERCENTAGE OF MINEFIELDS ESTABLISHED ON EACH
 PCTMINE=100
 * TWO NAVY ATTACKS, ENTER 2; ONE NAVY ATTACK ENTER 1
 NAVY = 1


```

WAVE = 1
* IF TWO WAVE ATTACK IS USED, ENTER TIME OF SEPARATION, SECONDS
WAVSEP = 00.00
* ENTER PERCENTAGE OF MISSILES WITH POSS SPECIFIC FOR TARGETTING
HVIPER = 1.00
* ENTER DEGREE OF AUGMENTATION OF PRECENT UP POSS IN TARGET LIST
HVIVOL = 1.00
* ENTER 1 IF MULTIPLE SIMULTANEOUS ECM ENGAGEMENTS POSS; ELSE 0
COSRO = 0
* ENTER CLOCK RATE OF RADAR RANGING IF RADAR DEACTIVATED;
* IF ECM ENVIRONMENT, ENTER BIAS THROUGH RANGE;
* IF CLEAR ENVIRONMENT, ENTER SUCCESS FOR CLASS 1 USE 22.0
RADAR = 1.00
IF(SS.EQ.2) RADAR=170.0
IF(SS.EQ.3) RADAR=180.0
IF(AA.EQ.2) RADAR=10.00
IF(AA.EQ.3) RADAR=18.00
* ENTER INITIAL TRACKING TIME, WHICH CAN BE UNITS OF
* TRACK IN SECOND S
TRACK=30.0
* ENTER CLASS OF EACH SUE POSITION - IN ORDER OF VALUE (HIGH-TO-LOW)
SHCLAS(1)=9
SHCLAS(2)=9
IF(AA.EQ.2) SHCLAS(1)=3
IF(AA.EQ.3) SHCLAS(1)=4
SHCLAS(3)=9
SHCLAS(4)=9
SHCLAS(5)=9
SHCLAS(6)=16
SHCLAS(7)=17
SHCLAS(8)=18
SHCLAS(9)=19
SHCLAS(10)=20
SHCLAS(11)=21
SHCLAS(12)=22
SHCLAS(13)=23
SHCLAS(14)=24

```


SHCLAS(15) = 0
SHCLAS(16) = 0
SHCLAS(17) = 0
SHCLAS(18) = 0
SHCLAS(19) = 0
SHCLAS(20) = 0

* * * ENTER POSITION OF EACH SHIP DECOY, IN MILES, > 0.0
** TWO SHIPS CAN NOT OCCUPY THE SAME LOCATION
** MISSILE MAX RANGE ENVELOPES SHOULD NOT COINCIDE

POSI(1) = 15.0
POSI(2) = 15.1
POSI(3) = 15.12
POSI(4) = 11.0
POSI(5) = 16.0
POSI(6) = 14.0
POSI(7) = 12.0
POSI(8) = 10.0
POSI(9) = 7.5
POSI(10) = 4.0
POSI(11) = 7.0
POSI(12) = 15.0
POSI(13) = 21.0
POSI(14) = 22.5
POSI(15) = 33.0
POSI(16) = 0.0
POSI(17) = 0.0
POSI(18) = 0.0
POSI(19) = 0.0
POSI(20) = 0.0

IF THE SHIP IS TO THE LEFT OF AXIS, EITHER 0
IF THE SHIP IS ON THE BACK AXIS, USE 1
IF THE SHIP IS TO THE RIGHT OF AXIS, EITHER 2
NOTE: HVF IS ALWAYS ON THE AXIS

* * *
* IF AXI(S(1)) = 1
AXI(S(2)) = 1
IF (AA+EE+2)AXI(S(2)) = 1
IF (AA+EE+3)AXI(S(2)) = 1
AXI(S(3)) = 0
AXI(S(4)) = 0
AXI(S(5)) = 0
AXI(S(6)) = 0
AXI(S(7)) = 0
AXI(S(8)) = 0
AXI(S(9)) = 0
AXI(S(10)) = 0

IF THE SHIP IS IN THE SAME LOCATION, EITHER 0
IF THE SHIP IS ON THE BACK AXIS, USE 1
IF THE SHIP IS ON THE BACK AXIS, USE 2
IF THE SHIP IS ON THE BACK AXIS, USE 3
IF THE SHIP IS ON THE BACK AXIS, USE 4
IF THE SHIP IS ON THE BACK AXIS, USE 5
IF THE SHIP IS ON THE BACK AXIS, USE 6
IF THE SHIP IS ON THE BACK AXIS, USE 7
IF THE SHIP IS ON THE BACK AXIS, USE 8
IF THE SHIP IS ON THE BACK AXIS, USE 9
IF THE SHIP IS ON THE BACK AXIS, USE 10

CCCC

C

CCCC

C

**** OUTPUT UTILITY SELECTION ****
 **** IF SUMMARY RESULTS ARE DESIRED, SET SKIP=1
 **** IF SUMMARY RESULTS AND INDIVIDUAL MISSING VALUES ARE DESIRED,
 **** IF SUMMARY RESULTS AND INDIVIDUAL MISSING VALUES ARE DESIRED,
 **** UNITS OF INPUT AND MISSING VALUES,
 **** SKIP=1
 **** FOLLOWING LINES ARE STANDARD SET-UP PARAMETERS WHICH
 MAY BE VARIED IF DESIRED
 CAVEL(1) = 10
 CAVEL(2) = 378
 CAVEL(3) = 662
 CMVAL = CMVAL(CMULAS)
 SAMVAL = 3738
 LI(SAMPLE) = 1) SAMPLE = .333
 PK(1,1) = 1.0 - (.1 * LOAD(1))
 PK(1,2) = .7
 PK(1,3) = .4
 PK(2,1) = .52
 PK(2,2) = .7
 PK(2,3) = .4
 PK(3,1) = .31
 PK(3,2) = .75
 PK(3,3) = .5
 **** END OF UTILITY SECTION ****

SELDEF(SL+1, 2) = 3
 SELDEF(SL+1, 2) = 2
 SELDEF(SC+3, 2) = 5
 SELDEF(SC+4, 2) = 6
 SELDEF(SD+1, 4) = 4
 SELDEF(SD+1, 4) = 4
 SELDEF(SD+2, 4) = 3
 SELDEF(SD+3, 4) = 3
 SELDEF(SD+4, 4) = 999
 SD = SD + 5

SHWEP(1, 1) = 0
 SHWEP(1, 2) = 0
 SHWEP(1, 3) = 2
 SHWEP(1, 4) = 0
 SHWEP(1, 5) = 2
 SHWEP(1, 6) = 1

DU TO 50

**** CCh 36 CLASS

CONTINU
 LF(SHCLASS(1) • NL • 2) GU 10 70
 XCS(1) = 2550.8
 STYPE(1) = 2
 SHIPID(1, 1) = 4
 SHIPID(1, 2) = 50
 DU 65 J=14
 SELBLR(SD+J-1, 1) = 1
 SELBLR(SD+J-1, 3) = 1
 SELBLR(SD+J-1) = 0.0

CONTINU
 SELBLF(SL+1, 2) = 4
 SELDEF(SC+1, 2) = 4
 SELDEF(SD+1, 2) = 6
 SELDEF(SE+1, 1) = 4
 SELDEF(SD+1, 4) = 4
 SELDEF(SD+2, 4) = 3
 SELDEF(SD+3, 0) = 999
 SD = SD + 4

SELRBAI(1, 1) = 2
 SELRBAI(1, 2) = 2
 SELRBAI(1, 3) = 0
 SELRBAI(1, 4) = 0
 SELRBAI(1, 5) = 0

CLOS(FC+1, 3) = 0.7
 CLOS(FC+1, 4) = 0.7
 CLOS(FC+1, 5) = 0.7
 CLOS(FC+1, 6) = 0.7

$M^2 = \frac{M^2}{74} + 1$
 DO 74 $F_{CLN}(FC + J - 1, 1) = 1$
 $F_{CLN}(FC + J - 1, 2) = 1$
 $ANTIME(FC + J - 1) = 0.0$
 CONFNUF
 FICKERS = FICKERS + 1
 $FC = FC + 2$

$SHWEP(S(1,1) = 2$
 $SHWEP(S(1,2) = 0$
 $SHWEP(S(1,3) = 0$
 $SHWEP(S(1,4) = 1$
 $SHWEP(S(1,5) = 1$
 $SHWEP(S(1,6) = 1$

GO TO 50
 **** * CG TO CLASS

CONTINUE
 IF (SHGCLASS(1) .NE. 4) GO TO 90
 $XCS(1) = \frac{239}{239 + 3}$
 $S TYPE(1) = 1$
 $S TYPE(1) = 1$
 $S TYPE(1) = 2$
 $S TYPE(1) = 2$
 DO 85 $J = 1, 2$
 $S LDF(SD + J - 1, 1) = 1$
 $S LDF(SD + J - 1, 2) = 1$
 $S D1 INT(SD + J - 1) = 0.0$
 CONTINUE
 $S LDF(SD, 2) = 5$
 $S LDF(SE + 1, 2) = 0$
 $S LDF(SE + 1, 4) = 3$
 $SD = SD + 2$
 $SLRBAI(1, 1) = 4$
 $SLRBAI(1, 2) = 2$
 $SLRBAI(1, 3) = 4$
 $FCUN(FC + 1, 1) = 4Z$
 $FCUN(FC + 1, 3) = 4Z + 1$
 $FCUN(FC + 2, 3) = 4Z + 1$
 $FCUN(FC + 3, 2) = 4Z + 1$
 $4AB(1, 2) = 4$
 $4AB(1, 2 + 1) = 0$
 $Z = 4Z + 2$
 DO 84 $J = 1, 4$

$F_{CUN}(F_C + J - 1, 1) = 1$
 $F_{CUN}(F_C + J - 1, 2) = 1$
 $ADT_{IM}(F_C + J - 1) = 0.0$
 CONTINUE
 $FIRFRS = FIRERS + 1$
 $FC = FC + 4$

$SHWEP(S(1,1)) = 7$
 $SHWEP(S(1,2)) = 0$
 $SHWEP(S(1,3)) = 0$
 $SHWEP(S(1,4)) = 0$
 $SHWEP(S(1,5)) = 1$
 $SHWEP(S(1,6)) = 1$

GO TO 50

***** DDS 2 CLASS

CONTINUE
 $IF(SAGLAD(1) \cdot NL .5) GO TO 100$
 $XCS(I) = 1436.4$
 $S1YPE(I) = 2$
 $SHPID(I,1) = 2$
 $SHPID(I,2) = SD$
 DO 95 J=1,2
 $SETDEF(SD+J-1,1) = 1$
 $SETDEF(SD+J-1,2) = 1$
 $SETDEF(SD+J-1,3) = 1$
 $SETDEF(SD+J-1) = 0.0$
 CONTINUE
 $SETBLF(SD+2) = 4$
 $SETBLF(SD+1,2) = 4$
 $SETBLF(SD+1,3) = 4$
 $SETBLF(SC+1,4) = 4$
 $SD = SD + 2$
 $SLRBAI(1,1) = ?$
 $SLRBAI(1,2) = ?$
 $SLRBAI(1,3) = ?$
 $FCONT(FC+1,2) = MZ$
 $FCONT(FC+1,3) = AZ$
 $MAB(MZ) = 40$
 $MZ = MZ + 1$
 DO 94 J=1,2
 $FCA(F_C + J - 1, 1) = 1$
 $FCA(F_C + J - 1, 2) = 1$
 $ADT_{IM}(F_C + J - 1) = 0.0$
 END OF UNIT

FIRERS=F FIRERS+1
FC=FC+2

SHWEP S(1,1)=0
SHWEP S(1,2)=2
SHWEP S(1,3)=0
SHWEP S(1,4)=2
SHWEP S(1,5)=0
SHWEP S(1,6)=0

GU IN 5 C

*****DD6 37 CLASS

C 100

CONTINUE
IF (SHCLAS(1),NE.6) GO TO 10
XCS(1)=1713.3
STYPE(1)=1
SHIPD(1,1)=2
SHIPD(1,2)=SD
DO 90 J=1,2
SELDEF(SD+J-1,3)=1
SELDEF(SD+J-1)=0.J
CONTINUE
SELDEF(SD,'2')=4
SELDEF(SD+1,'2')=2
SELDEF(SD+1,'4')=4
SD=SD+2
SLRBAT(1,1)=2
SERBAT(1,2)=1
SERBAT(1,3)=FC
FCUT(FC+1,3)=MZ
FLAG(MZ)=40
MZ=MZ+1
DO 57 J=1,2
FCUN((FC+J-1,1)=1
FCUN((FC+J-1,2)=1
ADJN(J)
CONTINUE
FIRERS=1 CLASS+1
FC=FC+2
SHWEP S(1,1)=0

57

SHWEP S(1,1)=2

**SHHEPSS(1,2)=0
SHHEPSS(1,3)=0
SHHEPSS(1,4)=1
SHHEPSS(1,5)=1
SHHEPSS(1,6)=0**

GU 10 5 C

卷之三

CONTINUATION
IF (SHCLAS(1) .NE. 7) GO TO 120
XCS(1) = 2213.0

CONTINUE
 SSELDEF(SL+1,2)=3
 SSELDEF(SL+1,2)=4
 SSELDEF(SL+2,2)=4
 SSELDEF(SL+3,2)=5
 SSELDEF(SL+4,2)=6
 SSELDEF(SL+1,4)=4
 SSELDEF(SL+2,4)=4
 SSELDEF(SL+3,4)=5
 SSELDEF(SL+4,4)=5

EPS (1, 1, -1)
 EPS (1, 2, -1)
 EPS (1, 3, -1)
 EPS (1, 4, -1)
 EPS (1, 5, -1)
 EPS (1, 6, -1)
 EPS (1, 7, -1)
 EPS (1, 8, -1)
 EPS (1, 9, -1)
 EPS (1, 10, -1)
 EPS (1, 11, -1)
 EPS (1, 12, -1)
 EPS (1, 13, -1)
 EPS (1, 14, -1)
 EPS (1, 15, -1)
 EPS (1, 16, -1)
 EPS (1, 17, -1)
 EPS (1, 18, -1)
 EPS (1, 19, -1)
 EPS (1, 20, -1)
 EPS (1, 21, -1)
 EPS (1, 22, -1)
 EPS (1, 23, -1)
 EPS (1, 24, -1)
 EPS (1, 25, -1)
 EPS (1, 26, -1)
 EPS (1, 27, -1)
 EPS (1, 28, -1)
 EPS (1, 29, -1)
 EPS (1, 30, -1)
 EPS (1, 31, -1)
 EPS (1, 32, -1)
 EPS (1, 33, -1)
 EPS (1, 34, -1)
 EPS (1, 35, -1)
 EPS (1, 36, -1)
 EPS (1, 37, -1)
 EPS (1, 38, -1)
 EPS (1, 39, -1)
 EPS (1, 40, -1)
 EPS (1, 41, -1)
 EPS (1, 42, -1)
 EPS (1, 43, -1)
 EPS (1, 44, -1)
 EPS (1, 45, -1)
 EPS (1, 46, -1)
 EPS (1, 47, -1)
 EPS (1, 48, -1)
 EPS (1, 49, -1)
 EPS (1, 50, -1)
 EPS (1, 51, -1)
 EPS (1, 52, -1)
 EPS (1, 53, -1)
 EPS (1, 54, -1)
 EPS (1, 55, -1)
 EPS (1, 56, -1)
 EPS (1, 57, -1)
 EPS (1, 58, -1)
 EPS (1, 59, -1)
 EPS (1, 60, -1)
 EPS (1, 61, -1)
 EPS (1, 62, -1)
 EPS (1, 63, -1)
 EPS (1, 64, -1)
 EPS (1, 65, -1)
 EPS (1, 66, -1)
 EPS (1, 67, -1)
 EPS (1, 68, -1)
 EPS (1, 69, -1)
 EPS (1, 70, -1)
 EPS (1, 71, -1)
 EPS (1, 72, -1)
 EPS (1, 73, -1)
 EPS (1, 74, -1)
 EPS (1, 75, -1)
 EPS (1, 76, -1)
 EPS (1, 77, -1)
 EPS (1, 78, -1)
 EPS (1, 79, -1)
 EPS (1, 80, -1)
 EPS (1, 81, -1)
 EPS (1, 82, -1)
 EPS (1, 83, -1)
 EPS (1, 84, -1)
 EPS (1, 85, -1)
 EPS (1, 86, -1)
 EPS (1, 87, -1)
 EPS (1, 88, -1)
 EPS (1, 89, -1)
 EPS (1, 90, -1)
 EPS (1, 91, -1)
 EPS (1, 92, -1)
 EPS (1, 93, -1)
 EPS (1, 94, -1)
 EPS (1, 95, -1)
 EPS (1, 96, -1)
 EPS (1, 97, -1)
 EPS (1, 98, -1)
 EPS (1, 99, -1)
 EPS (1, 100, -1)

卷之三

卷之三

11

6

5

تاریخ پاکستان

CONINUE IF (SHCLAS(1).NE.7) GO TO 120

CONTINUE
 SSELDEF(SL+1,2)=3
 SSELDEF(SL+1,2)=4
 SSELDEF(SL+2,2)=4
 SSELDEF(SL+3,2)=5
 SSELDEF(SL+4,2)=6
 SSELDEF(SL+4,4)=4
 SSELDEF(SL+1,4)=4
 SSELDEF(SL+2,4)=4
 SSELDEF(SL+3,4)=3
 SSELDEF(SL+4,4)=5

EPS (1, 1, -1)
EPS (1, 2, -1)
EPS (1, 3, -1)
EPS (1, 4, -1)
EPS (1, 5, -1)
EPS (1, 6, -1)
EPS (1, 7, -1)
EPS (1, 8, -1)
EPS (1, 9, -1)
EPS (1, 10, -1)
EPS (1, 11, -1)
EPS (1, 12, -1)
EPS (1, 13, -1)
EPS (1, 14, -1)
EPS (1, 15, -1)
EPS (1, 16, -1)
EPS (1, 17, -1)
EPS (1, 18, -1)
EPS (1, 19, -1)
EPS (1, 20, -1)
EPS (1, 21, -1)
EPS (1, 22, -1)
EPS (1, 23, -1)
EPS (1, 24, -1)
EPS (1, 25, -1)
EPS (1, 26, -1)
EPS (1, 27, -1)
EPS (1, 28, -1)
EPS (1, 29, -1)
EPS (1, 30, -1)
EPS (1, 31, -1)
EPS (1, 32, -1)
EPS (1, 33, -1)
EPS (1, 34, -1)
EPS (1, 35, -1)
EPS (1, 36, -1)
EPS (1, 37, -1)
EPS (1, 38, -1)
EPS (1, 39, -1)
EPS (1, 40, -1)
EPS (1, 41, -1)
EPS (1, 42, -1)
EPS (1, 43, -1)
EPS (1, 44, -1)
EPS (1, 45, -1)
EPS (1, 46, -1)
EPS (1, 47, -1)
EPS (1, 48, -1)
EPS (1, 49, -1)
EPS (1, 50, -1)
EPS (1, 51, -1)
EPS (1, 52, -1)
EPS (1, 53, -1)
EPS (1, 54, -1)
EPS (1, 55, -1)
EPS (1, 56, -1)
EPS (1, 57, -1)
EPS (1, 58, -1)
EPS (1, 59, -1)
EPS (1, 60, -1)
EPS (1, 61, -1)
EPS (1, 62, -1)
EPS (1, 63, -1)
EPS (1, 64, -1)
EPS (1, 65, -1)
EPS (1, 66, -1)
EPS (1, 67, -1)
EPS (1, 68, -1)
EPS (1, 69, -1)
EPS (1, 70, -1)
EPS (1, 71, -1)
EPS (1, 72, -1)
EPS (1, 73, -1)
EPS (1, 74, -1)
EPS (1, 75, -1)
EPS (1, 76, -1)
EPS (1, 77, -1)
EPS (1, 78, -1)
EPS (1, 79, -1)
EPS (1, 80, -1)
EPS (1, 81, -1)
EPS (1, 82, -1)
EPS (1, 83, -1)
EPS (1, 84, -1)
EPS (1, 85, -1)
EPS (1, 86, -1)
EPS (1, 87, -1)
EPS (1, 88, -1)
EPS (1, 89, -1)
EPS (1, 90, -1)
EPS (1, 91, -1)
EPS (1, 92, -1)
EPS (1, 93, -1)
EPS (1, 94, -1)
EPS (1, 95, -1)
EPS (1, 96, -1)
EPS (1, 97, -1)
EPS (1, 98, -1)
EPS (1, 99, -1)
EPS (1, 100, -1)

卷之三

卷之三

CONTINUE
IF (SHC14S(1) * NT * 6) GO TO 130

XCS(1) = 1334.2

STYPE(1) = 2

SHIPFD(1,1) = 3

SHIPID(1,2) = SD

DO 99 SELDEF(SD+J-1,1) = 1

SELDEF(SD+J-1,3) = 1

SOTIME(SD+J-1) = 0.0

CONTINUE

SELDEF(SL+1,2) = 4

SELDEF(SL+1,2) = 5

SELDEF(SL+2,2) = 0

SELDEF(SL+2,4) = 4

SELDEF(SL+1,4) = 3

SELDEF(SL+2,4) = 999

SD = SD + 3

SLRBAT(1,1) = 1

SLRBAT(1,2) = 1

SLRBAT(1,3) = FC

FC = FC(FC,3) = MZ

MAG(MZ) = 30

MZ = MZ + 1

FCN(FC,1) = 1

FCN(FC,2) = 1

AUTIME(FC,C) = 0.0

FLKERS = FLKERS + 1

FC = FC + 1

SHWEPS(1,1) = 0

SHWEPS(1,2) = 1

SHWEPS(1,3) = 0

SHWEPS(1,4) = 1

SHWEPS(1,5) = 1

SHWEPS(1,6) = 1

SHWEPS(1,7) = 1

SHWEPS(1,8) = 1

SHWEPS(1,9) = 1

SHWEPS(1,10) = 1

SHWEPS(1,11) = 1

SHWEPS(1,12) = 1

SHWEPS(1,13) = 1

SHWEPS(1,14) = 1

SHWEPS(1,15) = 1

SHWEPS(1,16) = 1

SHWEPS(1,17) = 1

SHWEPS(1,18) = 1

SHWEPS(1,19) = 1

SHWEPS(1,20) = 1

SHWEPS(1,21) = 1

SHWEPS(1,22) = 1

SHWEPS(1,23) = 1

SHWEPS(1,24) = 1

SHWEPS(1,25) = 1

SHWEPS(1,26) = 1

SHWEPS(1,27) = 1

SHWEPS(1,28) = 1

SHWEPS(1,29) = 1

SHWEPS(1,30) = 1

SHWEPS(1,31) = 1

SHWEPS(1,32) = 1

SHWEPS(1,33) = 1

SHWEPS(1,34) = 1

SHWEPS(1,35) = 1

SHWEPS(1,36) = 1

SHWEPS(1,37) = 1

SHWEPS(1,38) = 1

SHWEPS(1,39) = 1

SHWEPS(1,40) = 1

SHWEPS(1,41) = 1

SHWEPS(1,42) = 1

SHWEPS(1,43) = 1

SHWEPS(1,44) = 1

SHWEPS(1,45) = 1

SHWEPS(1,46) = 1

SHWEPS(1,47) = 1

SHWEPS(1,48) = 1

SHWEPS(1,49) = 1

SHWEPS(1,50) = 1

SHWEPS(1,51) = 1

SHWEPS(1,52) = 1

SHWEPS(1,53) = 1

SHWEPS(1,54) = 1

SHWEPS(1,55) = 1

SHWEPS(1,56) = 1

SHWEPS(1,57) = 1

SHWEPS(1,58) = 1

SHWEPS(1,59) = 1

SHWEPS(1,60) = 1

SHWEPS(1,61) = 1

SHWEPS(1,62) = 1

SHWEPS(1,63) = 1

SHWEPS(1,64) = 1

SHWEPS(1,65) = 1

SHWEPS(1,66) = 1

SHWEPS(1,67) = 1

SHWEPS(1,68) = 1

SHWEPS(1,69) = 1

SHWEPS(1,70) = 1

SHWEPS(1,71) = 1

SHWEPS(1,72) = 1

SHWEPS(1,73) = 1

SHWEPS(1,74) = 1

SHWEPS(1,75) = 1

SHWEPS(1,76) = 1

SHWEPS(1,77) = 1

SHWEPS(1,78) = 1

SHWEPS(1,79) = 1

SHWEPS(1,80) = 1

SHWEPS(1,81) = 1

SHWEPS(1,82) = 1

SHWEPS(1,83) = 1

SHWEPS(1,84) = 1

SHWEPS(1,85) = 1

SHWEPS(1,86) = 1

SHWEPS(1,87) = 1

SHWEPS(1,88) = 1

SHWEPS(1,89) = 1

SHWEPS(1,90) = 1

SHWEPS(1,91) = 1

SHWEPS(1,92) = 1

SHWEPS(1,93) = 1

SHWEPS(1,94) = 1

SHWEPS(1,95) = 1

SHWEPS(1,96) = 1

SHWEPS(1,97) = 1

SHWEPS(1,98) = 1

SHWEPS(1,99) = 1

SHWEPS(1,100) = 1

SHWEPS(1,101) = 1

SHWEPS(1,102) = 1

SHWEPS(1,103) = 1

SHWEPS(1,104) = 1

SHWEPS(1,105) = 1

SHWEPS(1,106) = 1

SHWEPS(1,107) = 1

SHWEPS(1,108) = 1

SHWEPS(1,109) = 1

SHWEPS(1,110) = 1

SHWEPS(1,111) = 1

SHWEPS(1,112) = 1

SHWEPS(1,113) = 1

SHWEPS(1,114) = 1

SHWEPS(1,115) = 1

SHWEPS(1,116) = 1

SHWEPS(1,117) = 1

SHWEPS(1,118) = 1

SHWEPS(1,119) = 1

SHWEPS(1,120) = 1

SHWEPS(1,121) = 1

SHWEPS(1,122) = 1

SHWEPS(1,123) = 1

SHWEPS(1,124) = 1

SHWEPS(1,125) = 1

SHWEPS(1,126) = 1

SHWEPS(1,127) = 1

SHWEPS(1,128) = 1

SHWEPS(1,129) = 1

SHWEPS(1,130) = 1

SHWEPS(1,131) = 1

SHWEPS(1,132) = 1

SHWEPS(1,133) = 1

SHWEPS(1,134) = 1

SHWEPS(1,135) = 1

SHWEPS(1,136) = 1

SHWEPS(1,137) = 1

SHWEPS(1,138) = 1

SHWEPS(1,139) = 1

SHWEPS(1,140) = 1

SHWEPS(1,141) = 1

SHWEPS(1,142) = 1

SHWEPS(1,143) = 1

SHWEPS(1,144) = 1

SHWEPS(1,145) = 1

SHWEPS(1,146) = 1

SHWEPS(1,147) = 1

SHWEPS(1,148) = 1

SHWEPS(1,149) = 1

SHWEPS(1,150) = 1

SHWEPS(1,151) = 1

SHWEPS(1,152) = 1

SHWEPS(1,153) = 1

SHWEPS(1,154) = 1

SHWEPS(1,155) = 1

SHWEPS(1,156) = 1

SHWEPS(1,157) = 1

SHWEPS(1,158) = 1

SHWEPS(1,159) = 1

SHWEPS(1,160) = 1

SHWEPS(1,161) = 1

SHWEPS(1,162) = 1

SHWEPS(1,163) = 1

SHWEPS(1,164) = 1

SHWEPS(1,165) = 1

SHWEPS(1,166) = 1

SHWEPS(1,167) = 1

SHWEPS(1,168) = 1

SHWEPS(1,169) = 1

SHWEPS(1,170) = 1

SHWEPS(1,171) = 1

SHWEPS(1,172) = 1

SHWEPS(1,173) = 1

SHWEPS(1,174) = 1

SHWEPS(1,175) = 1

SHWEPS(1,176) = 1

SHWEPS(1,177) = 1

SHWEPS(1,178) = 1

SHWEPS(1,179) = 1

SHWEPS(1,180) = 1

SHWEPS(1,181) = 1

SHWEPS(1,182) = 1

SHWEPS(1,183) = 1

SHWEPS(1,184) = 1

SHWEPS(1,185) = 1

SHWEPS(1,186) = 1

SHWEPS(1,187) = 1

SHWEPS(1,188) = 1

SHWEPS(1,189) = 1

SHWEPS(1,190) = 1

SHWEPS(1,191) = 1

SHWEPS(1,192) = 1

SHWEPS(1,193) = 1

SHWEPS(1,194) = 1

SHWEPS(1,195) = 1

SHWEPS(1,196) = 1

SHWEPS(1,197) = 1

SHWEPS(1,198) = 1

SHWEPS(1,199) = 1

SHWEPS(1,200) = 1

SHWEPS(1,201) = 1

SHWEPS(1,202) = 1

SHWEPS(1,203) = 1

SHWEPS(1,204) = 1

SHWEPS(1,205) = 1

SHWEPS(1,206) = 1

SHWEPS(1,207) = 1

SHWEPS(1,208) = 1

SHWEPS(1,209) = 1

SHWEPS(1,210) = 1

SHWEPS(1,211) = 1

SHWEPS(1,212) = 1

SHWEPS(1,213) = 1

SHWEPS(1,214) = 1

SHWEPS(1,215) = 1

SHWEPS(1,216) = 1

SHWEPS(1,217) = 1

SHWEPS(1,218) = 1

SHWEPS(1,219) = 1

SHWEPS(1,220) = 1

SHWEPS(1,221) = 1

SHWEPS(1,222) = 1


```

SHIPTD(1,2)=SD
DO 87 J=1,3
SELDEF(SD+J-1,1)=1
SELDEF(SD+J-1,3)=1
SELTIME(SD+J-1)=0.3
CONTINUE
SELDEF(SC+1,2)=3
SELDEF(SC+2,2)=4
SELDEF(SC+2,4)=5
SELDEF(SC+4,4)=6
SELDEF(SC+1,4)=4
SELDEF(SC+2,4)=4
SELDEF(SC+2,4)=4.99
SD=SD+3

```

140

AD 09610
 AD 09620
 AD 09630
 AD 09640
 AD 09650
 AD 09660
 AD 09670
 AD 09680
 AD 09690
 AD 09700
 AD 09710
 AD 09720
 AD 09730
 AD 09740
 AD 09750
 AD 09760
 AD 09770
 AD 09780
 AD 09790
 AD 09800
 AD 09810
 AD 09820
 AD 09830
 AD 09840
 AD 09850
 AD 09860
 AD 09870
 AD 09880
 AD 09890
 AD 09900
 AD 09910
 AD 09920
 AD 09930
 AD 09940
 AD 09950
 AD 09960
 AD 09970
 AD 09980
 AD 09990
 AD 09999
 FC(FC+1,3)=MZ
 FC(FC+2,3)=MZ
 FC(FC+3,3)=MZ
 FC(FC+4,3)=MZ
 FC(FC+5,3)=MZ
 FC(FC+6,3)=MZ
 FC(FC+7,3)=MZ
 FC(FC+8,3)=MZ
 FC(FC+9,3)=MZ
 FC(FC+10,3)=MZ
 FC(FC+11,3)=MZ
 FC(FC+12,3)=MZ
 FC(FC+13,3)=MZ
 FC(FC+14,3)=MZ
 FC(FC+15,3)=MZ
 FC(FC+16,3)=MZ
 FC(FC+17,3)=MZ
 MAC(MZ)=50
 MAC(MZ+1)=50
 MZ=MZ+2
 DO 60 J=1,16
 FC(J,(J-1,1)=1
 FC(J,(J-1,2)=1
 ADD(J,(J-1,3)=0,J
 COUNT(J)
 FC=FC+1
 FIRER5=FIRERS+1
 SHWEP5((1,1)=0
 SHWEP5((1,2)=18
 SHWEP5((1,3)=0
 SHWEP5((1,4)=2
 SHWEP5((1,5)=1
 SHWEP5((1,6)=1
 COUNT5
 COUNT5
 **** * BUDGET SOVIET SHIP 5
 **** * KURSK CLASS
 **** *
 FC((SHC1AS(1,1),M1,11)60,10,61)
 XCS((1)=33000
 SYPE((1)=1
 SHIPD((1,1)=7
 SHIPD((1,2)=50
 DO 609 J=1,7
 35116((20+J-1,1)=1

$\text{SELDEF}(SD+j-1,3)=1$
 $\text{SETIME}(SD+j-1)=0.0$

CONTINUE
 $\text{SELDEF}(SD,2)=3$
 $\text{SELDEF}(SD+1,2)=3$
 $\text{SELDEF}(SD+2,2)=4$
 $\text{SELDEF}(SD+3,2)=4$
 $\text{SELDEF}(SD+4,2)=5$
 $\text{SELDEF}(SD+5,2)=5$
 $\text{SELDEF}(SD+6,2)=5$
 $\text{SELDEF}(SD+7,2)=9$
 $\text{SELDEF}(SD+8,4)=10$
 $\text{SELDEF}(SD+9,4)=4$
 $\text{SELDEF}(SD+10,4)=4$
 $\text{SELDEF}(SD+11,4)=3$
 $\text{SELDEF}(SD+12,4)=3$
 $\text{SELDEF}(SLt_0,4)=999$

$SU=SD+7$
 $SLRBAT(1,1)=12$
 $SLRBAT(1,2)=1$
 $SLRBAT(1,3)=FC$
 $FCON(FC+1,3)=MZ$
 $FCON(FC+2,3)=MZ$
 $FCON(FC+3,3)=MZ$
 $FCON(FC+4,3)=MZ$
 $FCON(FC+5,3)=MZ$
 $FCON(FC+6,3)=MZ$
 $FCON(FC+7,3)=MZ$
 $FCON(FC+8,3)=MZ$
 $FCON(FC+9,3)=MZ$
 $FCON(FC+10,3)=MZ$
 $FCON(FC+11,3)=MZ$
 $MAG=MZ+1$

D9 607 $j=1,12$
 $\text{FCUN}(FC+j-1,1)=1$
 $\text{FCUN}(FC+j-1,2)=1$
 $\text{ADLT}(FC+j-1)=0.0$
 $SU=NU_5$
 $FC=FC+1$
 $\text{FIKRS}=FIREKS+1$
 $SHWEP(1,1)=12$
 $SHWEP(1,2)=0$
 $SHWEP(1,3)=2$
 $SHWLP(1,4)=2$
 $SHWLP(1,5)=2$
 $SHWEP(1,6)=1$

GO TO 50
 CONTINUE
 C
 C *** KIROV CLASS (MUD 1 PD SAM INSTALLED)
 C
 C

```

IF (SHC(I)=1) .NE. 12) GO TO 620
XCS(I)=1
SFTYPE(I)=1
SHIPD(I,I)=10
SHIPD(I,I,2)=SD
DO 61 I=1,10
  SELDEF( SD+J-1,I )=1
  SELDEF( SD+J-1,3 )=1
  SELTIME( SD+J-1 )=0.0
CONTINUE
  
```

```

SELDEF( SD+1,I )=3
SELDEF( SD+1,I,2 )=3
SELDEF( SD+2,I )=3
SELDEF( SD+2,I,2 )=3
SELDEF( SD+3,I )=3
SELDEF( SD+3,I,2 )=3
SELDEF( SD+4,I )=3
SELDEF( SD+4,I,2 )=3
SELDEF( SD+5,I )=3
SELDEF( SD+5,I,2 )=3
SELDEF( SD+6,I )=4
SELDEF( SD+6,I,2 )=4
SELDEF( SD+7,I )=5
SELDEF( SD+7,I,2 )=5
SELDEF( SD+8,I )=6
SELDEF( SD+8,I,2 )=6
SELDEF( SD+9,I )=6
SELDEF( SD+9,I,2 )=6
SELDEF( SD+10,I )=7
SELDEF( SD+10,I,2 )=7
SELDEF( SD+11,I )=8
SELDEF( SD+11,I,2 )=8
SELDEF( SD+12,I )=9
SELDEF( SD+12,I,2 )=9
SELDEF( SD+13,I )=10
SELDEF( SD+13,I,2 )=10
SELDEF( SD+14,I )=11
SELDEF( SD+14,I,2 )=11
SELDEF( SD+15,I )=12
SELDEF( SD+15,I,2 )=12
SELDEF( SD+16,I )=13
SELDEF( SD+16,I,2 )=13
SELDEF( SD+17,I )=14
SELDEF( SD+17,I,2 )=14
SELDEF( SD+18,I )=15
SELDEF( SD+18,I,2 )=15
SELDEF( SD+19,I )=16
SELDEF( SD+19,I,2 )=16
SELDEF( SD+20,I )=17
SELDEF( SD+20,I,2 )=17
SELDEF( SD+21,I )=18
SELDEF( SD+21,I,2 )=18
SELDEF( SD+22,I )=19
SELDEF( SD+22,I,2 )=19
SELDEF( SD+23,I )=20
SELDEF( SD+23,I,2 )=20
SELDEF( SD+24,I )=21
SELDEF( SD+24,I,2 )=21
SELDEF( SD+25,I )=22
SELDEF( SD+25,I,2 )=22
SELDEF( SD+26,I )=23
SELDEF( SD+26,I,2 )=23
SELDEF( SD+27,I )=24
SELDEF( SD+27,I,2 )=24
SELDEF( SD+28,I )=25
SELDEF( SD+28,I,2 )=25
SELDEF( SD+29,I )=26
SELDEF( SD+29,I,2 )=26
SELDEF( SD+30,I )=27
SELDEF( SD+30,I,2 )=27
SELDEF( SD+31,I )=28
SELDEF( SD+31,I,2 )=28
SELDEF( SD+32,I )=29
SELDEF( SD+32,I,2 )=29
SELDEF( SD+33,I )=30
SELDEF( SD+33,I,2 )=30
  
```

611

```

LURAT(I,I,I)=12
SLRBAT(I,I,I)=1
SLRBAT(I,I,3)=1
FC04(FC+I,I,I)=M2
FC04(FC+I,I,3)=M2
FC04(FC+I,3,I)=M2
FC04(FC+I,3,3)=M2
FC04(FC+I,I,I,I)=M2
FC04(FC+I,I,I,3)=M2
FC04(FC+I,I,3,I)=M2
FC04(FC+I,I,3,3)=M2
FC04(FC+I,3,I,I)=M2
FC04(FC+I,3,I,3)=M2
FC04(FC+I,3,3,I)=M2
FC04(FC+I,3,3,3)=M2
AD 19576
AD 19580
AD 19590
AD 19600
AD 19610
AD 19620
AD 19630
AD 19640
AD 19650
AD 19660
AD 19670
AD 19680
AD 19690
AD 19700
AD 19710
AD 19720
AD 19730
AD 19740
AD 19750
AD 19760
AD 19770
AD 19780
AD 19790
AD 19800
AD 19810
AD 19820
AD 19830
AD 19840
AD 19850
AD 19860
AD 19870
AD 19880
AD 19890
AD 19900
AD 19910
AD 19920
AD 19930
AD 19940
AD 19950
AD 19960
AD 19970
AD 19980
AD 19990
AD 19995
  
```


F-CONT(F_i+F_j, 3) = M_Z
 F-CONT(F_i+F_j, 3) = M_Z
 F-CONT(F_i+10, 3) = P_Z
 F-CONT(F_i+11, 3) = M_Z
 HAB(M_Z) = S_O
 H_Z = M_Z+1
 DU H_Z J=1, 12
 F-CONT(F_i+F_j, -1),
 F-CONT(F_i+F_j, -1),
 CONTINUE
 FC=FC+12
 F-FRERS=F-FRS+1
 SHWEP(S(1,1))=12
 SHWEP(S(1,2))=0
 SHWEP(S(1,3))=0
 SHWEP(S(1,4))=1
 SHWEP(S(1,5))=2
 SHWEP(S(1,6))=1
 DU 10 5C
 CONTINUE
 C 20
 C 5
 C 0

***** KTCV CLASS

```

IF (SHCCLAS(1) = 1300) GO TO 999
KCS(1) = 455.0
TYPE(1) = 2
SHIPID(1,1) = 0
SHIPID(1,2) = 0
D621 = 1
SFLDFR(SD + J - 1, 1) = 1
SFLDFR(SD + J - 1, 3) = 1
SFLDFR(SD + J - 1, 5) = 0.J
GNDNDEF(SD + J, 1) = 1
GNDNDEF(SD + J, 2) = 1
GNDNDEF(SD + J, 3) = 4
GNDNDEF(SD + J, 4) = 4
GNDNDEF(SD + J, 5) = 5
GNDNDEF(SD + J, 6) = 6
GNDNDEF(SD + J, 7) = 7
GNDNDEF(SD + J, 8) = 8
GNDNDEF(SD + J, 9) = 9
GNDNDEF(SD + J, 10) = 10
GNDNDEF(SD + J, 11) = 11
GNDNDEF(SD + J, 12) = 12
GNDNDEF(SD + J, 13) = 13
GNDNDEF(SD + J, 14) = 14
GNDNDEF(SD + J, 15) = 15
GNDNDEF(SD + J, 16) = 16
GNDNDEF(SD + J, 17) = 17
GNDNDEF(SD + J, 18) = 18
GNDNDEF(SD + J, 19) = 19
GNDNDEF(SD + J, 20) = 20

```



```

SLRBAT(1,1)=0
SLRBAT(1,2)=1
FCUN(FC,1)=M2
FCUN(FC+1,2)=M2
FCUN(FC+2,3)=M2
FCUN(FC+3,3)=M2
FCUN(FC+4,3)=M2
FCUN(FC+5,3)=M2
MAC(MZ)=C4
MZ=MZ+1
DO 632 J=1,6
FCUR(FC+J-1,1)=1
FCUR(FC+J-1,2)=1
ADTIME(FC+j-1)=0.0
CONTINUE
FC=FC+6
FAKEKS=(1KTFS+1
SHNEPS(1,1)=2
SHNEPS(1,2)=0
SHNEPS(1,3)=2
SHNEPS(1,4)=1
SHNEPS(1,5)=1
SHNEPS(1,6)=1
SOUTU(5,0)
CONTINUE
635
* * * * * STUDY CLASS
1F (SHGCLB(1,1),NL,15)00 10 0.0
XUS(1)=225.0.
SYPT(1)=2
SH1P(D(1,1))=2
SH1P(D(1,2))=4
DQ 639 S=1,4
SLIBF(SD+J-1,1)=1
SLIBF(SD+J-1,3)=1
SD1mt(SD+J-1)=0.0
CONTINUE
636
SELBF(SB,1,2)=4
SELBF(SB+1,1,2)=4
SELBF(SB+1,2,2)=5
SELBF(SL+3,1,2)=0
SELBF(SL+1,1,4)=4
SELBF(SL+1,2,4)=4
SELBF(SL+3,2,4)=3
SELDef(SL+3,4)=555

```



```

SD = SD + 4
SLRBAT(1,1,1) = 1
SLRBAT(1,1,2) = 1
SLRBAT(1,1,3) = FC
FCON(FC,1,3) = MZ
FCON(FC+1,1,3) = MZ
FCON(FC+2,1,3) = MZ
MAC(MZ) = 44
MZ = MZ + 1
DO 63 7 J=1,3
      FCN(FC+J-1,1,1) = 1
      FCN(FC+J-1,2,2) = 1
      ADT14c(FC+J-1) = 0.0
CONTINUE
FC = FC + 3
FIRKS = FIRKS + 1
SHWEP(1,1) = 0
SHWEP(1,2) = 3
SHWEP(1,3) = 0
SHWEP(1,4) = 2
SHWEP(1,5) = 1
SHWEP(1,6) = 1
SU TO 5
CONTINUE

```

```

IF (SINC(1) .NE. 16) GO TO 64
XCS(1) = 1900.0
STYPT(1) = 0
SHIPD(1,1) = 0
SHIPD(1,2) = 50
DO 64 1 J=1,6
      SELDEF(SD+J-1,1,1) = 1
      SELDEF(SD+J-1,3) = 1
      SELDEF(SD+J-1) = 0.0
CONTINUE

```

```

641

```

```

C C C

```


SELDEF(SC+4, 4) = 3

SELDEF(SL+5, 4) = 999

SD=SD+6

SHWEP(S(1, 1)=0

SHWEP(S(1, 2)=0

SHWEP(S(1, 3)=2

SHWEP(S(1, 4)=2

SHWEP(S(1, 5)=1

SHWEP(S(1, 6)=1

GOTO 50

CONTINUE

***** MUSKVA CLASS

IF (SHCLASS(1, 0) = 17) GO TO 50

XCS(1) = 3060.0

STYPE(1) = ?

SHIPD(1, 1) = 4

SHIPD(1, 2) = SD

DJ 647 SELDEF(SD+j-1, 1) = 1

SELDEF(SD+j-1, 3) = 1

SELDEF(SD+j-1) = 0.0

CONTINUE

SELDEF(SC, 2) = 2

SELDEF(SD+1, 2) = 3

SELDEF(SC+2, 2) = 4

SELDEF(SD+3, 2) = 6

SELDEF(SC, 4) = 11

SELDEF(SC+1, 4) = 11

SELDEF(SC+2, 4) = 4

SELDEF(SC+3, 4) = 999

SD=SD+5

SLRBAF(1, 1) = 2

SLRBAF(1, 2) = 1

SLRBAF(1, 3) = 1

FCUN(FC, 3) = 12

FCUN(FC+1, 3) = 12

FCUN(FC+2, 3) = 12

FCUN(FC+3, 3) = 12

MZ=MZ+1

DJ 648 J=1, 2

FCUN(FC+j-1, 1) = 1

FCUN(FC+j-1, 2) = 1

ADJLINE(C, j-1) = 0.0

CONTINUE

FC=FC+2

C C C

645

647

FLICKERS = FIREERS + 1

SHWEP S(1,1) = 0

SHWEP S(1,2) = 2

SHWEP S(1,3) = 2

SHWEP S(1,4) = 1

SHWEP S(1,5) = 0

SHWEP S(1,6) = 1

GU TU 50

CONTINUE

650

***** KARA CLASS

IF (SHCLAS(1) • NE • 18) GU TU 655

XCS(1) = 2200.0

SITYPE(1) = 2

SHIPID(1,1) = 4

SHIPID(1,2) = 50

DO 653 J=1,6

SELLDEF(SD+j-1,1) = 1

SELLDEF(SD+j-1,3) = 1

SELLDEF(SD+j-1) = 0.0

653

CONTINUE

SELLDEF(SD+1,2) = 3

SELLDEF(SD+2,2) = 5

SELLDEF(SD+3,2) = 9

SELLDEF(SD+4,2) = 10

SELLDEF(SD+5,2) = 4

SELLDEF(SD+6,2) = 2

SELLDEF(SD+7,2) = 0.0

SD = SD+5

SLRBAT(1,1) = 2

SLRBAT(1,2) = 2

SLRBAT(1,3) = 4

FCON(FC,1,3) = 4Z

FCON(FC+1,3) = 4Z+1

MAG(MZ) = 22

MAG(MZ+1) = 22

MZ = MZ+2

DO 651 J=1,2

FCIN(FC+j-1,1) = 1

FCIN(FC+j-1,2) = 1

AD1 = FC+j-1

CONTINUE

FC = FC+2

FIRCRS = FIRCRS + 1

SHWEP S(1,1) = 0

651

CONTINUE

SHWEP S(1,2) = 0

SHWEP S(1,3) = 0

MEPS (1,2)=1
MEPS (1,3)=1
MEPS (1,4)=1
MEPS (1,5)=1
MEPS (1,6)=1
TO 50

CLASS KESTA II CLASS

```

IF (SHCLAS(1) .NE. 19) GO TO 100

```

SHIPIB(1,2)=50
SHIPIB(1,3)=50
SHIPIB(2,3)=50

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60

$$\begin{aligned}
 & S = 3U + 2 \\
 & SUKAHAT((1,1),1) = 2 \\
 & SUKBAHAT((1,2),2) = 2 \\
 & SUKBAHAT((1,3),3) = 4 \\
 & SERUNGEC((1,1),1) = 4 \\
 & SERUNGEC((1,2),2) = 2 \\
 & MAS((1,1),1) = 2 \\
 & MAS((1,2),2) = 2 \\
 & MAS((1,3),3) = 4
 \end{aligned}$$

56

167

SHWEPS(1,6)=1
GU TO 5C
CONTINUE

*** ** KYNDA CLASS

IF (SHCLAS(1) .NE. 20) GO TO 60
XCS(1)=1350.0

SHTYPE(1)=2

SHIPD(1,1)=2

SHIPD(1,2)=SD

DO 604 J=1,2

SETDEF(SD+J-1,1)=1

SETDEF(SD+J-1,3)=1

SETTIME(SD+J-1)=0.0

CONTDEF(SE,SD+1,2)=4

SELDEF(SE,SD+1,2)=4

SELDEF(SE,SD+1,3)=4

SELDEF(SE,SD+1,4)=4

SD=SD+2

SLRBAI(1,1)=1

SLRBAI(1,2)=1

SLRBAI(1,3)=t1C

FCON(FC,3)=t1Z

MAG(4Z)=22

MAG(4Z+1)=30

NZ=NZ+2

DO 602 J=1,3

FCN(C,J-1,1)=1

FCN(C,J-1,2)=1

ADT(1,4*(C+J-1))=0.0

CONTDEF

FC=FC+1

FIRTS=1

SHWLPS(1,1)=0

SHWFPS(1,2)=1

SHWEPS(1,3)=1

SHWEP(S(1,4)=1

SHWEP(S(1,5)=1

SHWEP(S(1,6)=1

SHWEP(S(1,7)=1

SHWEP(S(1,8)=1

SHWEP(S(1,9)=1

SHWEP(S(1,10)=1

SHWEP(S(1,11)=1

SHWEP(S(1,12)=1

SHWEP(S(1,13)=1

SHWEP(S(1,14)=1

SHWEP(S(1,15)=1

SHWEP(S(1,16)=1

602

602

603

1110 TWO GIGANTIC TUMORS

卷之三

676

IF ((SHCLAS(1) • NF • 23)60	DU 600
ACS(1)=2000.0	
STYPE(1)=0	
SHIPDC(1,1)=1	
SHIPDC(1,2)=SD	
DU 67 J=1,1	
SELBF(SD+J-1,1)=1	
SELBF(SD+J-1,3)=1	
SELBF(SD+J-1)=0..0	
SELBF(SL,1)=3	
SELBF(SD,4)=4	
SL=SD+1	
SL=SD	
SELBF(SL,1)=3	
SELBF(SD,4)=4	
SELBF(SL,5)=5	
SELBF(SD,6)=6	

611

GO TO 50
CONTINUE

CC
CC
CC

* * * * * CALIFORNIA CLASS

IF (SHCLASS(1) = 2000.0)
TYPE(1) = 2

SHPID(1,1) = 4
SHPID(1,2) = SD
DO 606 J=1,4

SELDEF(SD+J-1,1)=1
SELDEF(SD+J-1,3)=1

SELDEF(SD+J-1)=0.0

END

SELDEF(SC,2)=4
SELDEF(SC+1,2)=4

SELDEF(SC+2,2)=5
SELDEF(SC+3,2)=6

SELDEF(SC,4)=4
SELDEF(SC+1,4)=4

SELDEF(SC+2,4)=3
SELDEF(SC+3,4)=999

SD=SD+4
SLRBAI(1,1)=4
SLRBAI(1,2)=2

SLRBAI(1,3)=FC
FCON(FC,1)=MZ

FCON(FC+1,2)=MZ
FCON(FC+2,3)=MZ+1

FCON(FC+3,3)=AZ+1
MAC(MZ)=40

MAC(MZ+1)=+0
MZ=MZ+2

DO 607 J=1,4

FCN(FC+J-1,1)=1
FCN(FC+J-1,2)=1

ADTML((C+J-1))=0.0

CONTINUE

FC=FC+4
FIRSTRS=FIR-RS+1

SWIPS(1,1)=1
SWIPS(1,2)=+1
SWIPS(1,3)=0
SWIPS(1,4)=?
SWIPS(1,5)=1

SWIPS(1,6)=1
SWIPS(1,7)=1
SWIPS(1,8)=1
SWIPS(1,9)=1
SWIPS(1,10)=1

SWIPS(1,11)=1
SWIPS(1,12)=1
SWIPS(1,13)=1
SWIPS(1,14)=1
SWIPS(1,15)=1
SWIPS(1,16)=1

END

50 TO 50
 CONTINUE
 CCCCCC INSERT POINT ABOVE
 XCS(1) = DCS
 STYPE(1) = 3
 C
 SHWEP((1,1)=0
 SHWEP((1,2)=0
 SHWEP((1,3)=0
 SHWEP((1,4)=0
 SHWEP((1,5)=0
 SHWEP((1,6)=0
 CONTINUE
 C 50
 INITIAL ACTUAL OF AD BATTERIES, SD BATTERIES, MAGAZINES
 MACIG=FC-1
 SDIGI=SD-1
 ONE(1)=C
 ONE(2)=0
 TWO(1)=0
 TWO(2)=0
 MAGCAP=C
 IF(MAGCAP=1) GO TO 153
 DO 149 I=1, MAGCAP
 MAGUP(I)=1
 MAGCAP=MAGCAP-1
 149
 CONTINUE
 DO 152 I=1, PDA
 PDA(I)=PDA(I)+REDUCE(I,3)
 152
 CONTINUE
 C
 ARIEL INVENTORY MISSING DATA, RADAR CROSS SECTION
 RCS(1)=XCS(1)
 IF(XSHIP>0.6) RCS(1)=0
 RCS(1)=1.0
 SUM=1.0
 DO 150 I=2, NSHIP
 RCS(I)=XCS(I)+RCS(I-1)
 150
 CONTINUE
 C 52

00 160 1=1, MSHIPS
 RCS(1)=RCS(1)/RCS(1)HSHIP₃
 HIS(1)=0
 TARG(1)=0
 CONTINUE
 C
 D0 162 I=1, ATTACK
 CMRFS(1,1)=0
 DO 163 J=1, NSHIPS
 IF(RAN(1)=J
 MTRG(1)=J
 CKEST(1,2)=J
 GOTO 170
 CONTINUE
 RAN=RAN+1
 IF(RAN>61,990)CALL RETL
 C
 165 CONTINUE
 C
 166 IF(HNU TARGETING POSSIBLE, AUG
 D0 167 I=1,ATTACK
 FAJ=RAN+1
 IF((RAN+1-990)>ALL
 RAJ=RAN+1
 IF((RAN+1-990)<ALL
 MTRG(1)=MTRG(1)-1
 IF(MTRG(1)=0,LT.1)GOTO
 RAJ=RAN+1
 IF((RAN+1-990)<ALL
 CONTINUE
 D0 168 I=1,ATTACK
 TARGET(MTRG(1))=TARGET(MTRG
 CONTINUE
 C
 169 CALCULATION OF THE ENVIRONMENT
 ENV(1,1)=RADAR(1,1)+((RADAR(1,1)
 ENV(2,1)=RADAR(2,1)+((RADAR(2,1)
 ENV(1,2)=RADAR(1,2)+((RADAR(1,2)
 ENV(2,2)=RADAR(2,2)+((RADAR(2,2)
 Y=RADAR-(ENV(1,1)+ENV(2,2))
 IF(ENV(1,1)>3,ENV(1,1)-3)
 IF(ENV(2,2)>3,ENV(2,2)-3)
 ***ENV(1,1)=ENV(1,1)+ASIN((
 ENV(1,2)+ENV(2,1))/SQR(1+(ENV(1,1)
 C


```

6      ENVEL((ENVEL(1,1)+(ENVOL*ASSES))//SAMVUL)*CAVOL
6      ((ENVEL(2,1)+(ENVOL*(2,1)*(CAVOL*(ASSELS)+)+)+)+)+*CAVOL
6      DO 177 I=1,20
6      FIRENV(I,1)=0.0
6      FIRENV(I,2)=0.0
6      SHENV(I,1)=0.0
6      SHENV(I,2)=0.0
6      SHENV(I,3)=0.0
6      CONTINUEN
6      DO 180 I=1,NSHIPS
6      IF(SYPE(I,1)*INF.O) AND ((SYPE(1,1)*NL+3)*6C TO 185
6      FIRENV(I,1)=FLOAT(I)
6      GO TO 180
6      CONTINUE
6
6      FIRENV(1,1)=+FLOAT(1)
6      FIRENV(1,2)=+LEVEL(SYPE(1,1),3)+SPROS(1)
6      SHENV(1,1)=LEVEL(SYPE(1,1),1)+SPROS(1)
6      SHENV(1,2)=LEVEL(SYPE(1,1),2)+SPROS(1)
6      SHENV(1,3)=LEVEL(SYPE(1,1),3)+SPROS(1)
6      CONTINUEN
6      WRITE(6,181)SHENV(1,1),SHENV(1,2),SHENV(1,3)
6      FORMAT(1X,3F7.2)
6
6      SORT ENVIRONMENT IN GEOGRAPHIC ORDER HIGH TO LOW LIST
6
6      IF(NSHIPS.EQ.1) GO TO 187
6      NS=NSHIPS-1
6      FLAG=1
6      CONTINUE
6      IF(CLAS.EQ.0)
6      DO 195 I=1,NS
6      IF(FIRENV(I,K)=I,K=I,K)
6      X(K)=FIRENV(I,K)
6      FIRENV(I,K)=FIRENV(I,I)
6      FIRENV(I,I)=X(K)
6
6      195   FLAB=1
6      CONTINUE
6      CONTINUE
6
6      SORT FIRENV IN INVERSE ORDER AND PRINT RANK

```



```

C
C IF (NBAT,I,1) GE 10 DO 202
C   NBAT,I=1,NSHIPS
C   P=1/F1X(F1KTNV(1,1))
C   DO 202 I=1,NBAT
C     J=1,FIRCON(N,1)*NE,P) GO TO 305
C     FIRCON(N,1)=P
C     FIRCON(N,2)=99999
C     FIRCON(N,3)=FCCN(J,3)
C
C   CONTINUE
C   N=N+1
C
C   ESTABLISH A SUM INITIAL PARTIAL REC
C
C   MAXENV=FIRCON(1,1)
C   DO 203 I=1,NSHIPS
C     IF (SPUS(I).GT.MAXENV) MAXENV=SPUS(I)
C
C   CONTINUE
C
C   DO 310 I=1,NBAT
C     YY=FIRCON(1,1)=MAXENV+(YY*INITIAL*CMVAL)
C     CMATA(I,1)=CMDATA(I,1)
C     CMATA(I,2)=CMDATA(I,1)
C     CMATA(I,3)=(CMDATA(I,1)-SPUS(MTARG(I)))/CMVAL
C     CMRES(I,1)=0
C     CMRES(I,2)=0
C
C   CONTINUE
C
C   IF (WAVE>0.1667E-3) GO TO 309
C   IF (ATTACK*I/2) GO TO 10 509
C   DO 308 I=1,NBAT
C     CMATA(I,1)=CMDATA(I,1), (CMVAL*CMVAL)
C     CMATA(I,2)=CMDATA(I,1)
C     CMATA(I,3)=CMDATA(I,1)+CMVAL
C
C   CONTINUE
C
C   DO 307 I=1,NSHIPS
C     CURNR(I)=FCCN(I)
C
C   CONTINUE
C
C   DO 308 I=1,NSHIPS
C     CURNR(I)=FCCN(I)

```


CHECK FOR MASSIVE IMPACT

卷之三

IF(1,GE:CMDATA(1A,3)) GO TO 150

SIELETTI ERIC BATTERY NILES MISSISSIPPI LIVES AGAIN

```

FLAG=0      I=1,INBA=FIRCON(1,1),3).LT.CNODATA(M,2))GO TO 10 350
00 350    IF(SHENV(FIRCON(1,1),3).LT.CNODATA(M,2))GO TO 350
1F(ADTIME(I).GT.1)60 350
1F(IFLOAT(FIRCON(1,2))60)TO 350
1F(IFLOAT(FIRCON(1,1))1)OF.CNODATA(M,2))50 350
1F(SHENV(FIRCON(1,1))1)OF.CNODATA(M,2))50 350
1F(WAS(FIRCON(1,3))1)1)OF.CNODATA(M,2))50 350
1F(IFLOAT(FIRCON(1,2)).LT.OPTIM(1))GO TO 350

```

CONTINUOUS

260

177

Finally, we can use the `get()` method to retrieve the value of a specific key from the `Map` object:

NE & T
D 11
350

AI
DOLCE
?)
TU
KREIS
ZIRK
))
DOL

DRIVES
A(M, 2)
350
TA(M,
50
)GC
(), 1)
(), 2)

THE ANNUAL TRADE SHOW FOR THE INDUSTRY OF
MANUFACTURED HABITAT.

IMPAA
D.D. G
ERY
ON (1
G) in
COUN
(1) 3
UN (1
CFTD
) 44
TUS
, 3)
) C 2
• L .
OH
SHEN
RY, L
) SO
Site !
NKR) —

IRIN
=1, IN
SPEL
AOI
T, O, T
(SBE
PAG
LUA
UG=1
RY=1
TO 3
1118
112.0
SAAZ 1
R+1
K(UN
DAK
N(CBA
HUA
A(G)
FIRE
A(4)
A(4),
W(4)
W(4)
C
C
W(4)
C

33 3 33333 33 333 33 3

IF FIRE(N)=TRUE(N)+FIRE

CALCULATE INTERSECTION, CHECK FOR PRIOR MISMATCH
OR BARRIER DESTRUCION, PRIORITY TO INTERCEPT

IF (MATERIAL(M,1)=GLASS) THEN
IF (MATERIAL(M,2)=STAINER) GO TO 403
IF (MATERIAL(FIRE(1),2)=STAINER) GO TO 403
ADJUST(BATRY)=CHDATA(A,3)+CYCLE(1)+ASSLS

GO TO 700

END

IMPACT

IF (MATERIAL(FIRE(1),2)=STAINER) THEN
IF (MATERIAL(FIRE(1),1)=GLASS) THEN
ADJUST(BATRY)=CHDATA(A,3)+CYCLE(1)+ASSLS

GO TO 700

END

19210

19220

19230

19240

19250

19260

19270

19280

19290

19300

19310

19320

19330

19340

19350

19360

19370

19380

19390

19400

19410

19420

19430

19440

19450

19460

19470

19480

19490

19500

19510

19520

19530

19540

19550

19560

19570

19580

19590

19600

19610

19620

19630

19640

19650

19660

19670

19680

19690

19700

19710

19720

19730

19740

19750

19760

19770

19780

19790

19800

19810

19820

19830

19840

IMPACT

IF (MATERIAL(FIRE(1),2)=STAINER) THEN
IF (MATERIAL(FIRE(1),1)=GLASS) THEN
ADJUST(BATRY)=CHDATA(A,3)+CYCLE(1)+ASSLS

GO TO 700

END


```

      WRITE(6,301) IRL,CMUDATA(M,2),FLAG
      FORMAT(1X,I2,3X,F7.2,3X,I2)
      IF(FLAG.EQ.0) GC=I2
      CARESSM(1)=N
      CARESSM(2)=IRCON(DAILY)
      DAUTIME(BAIFY)=TINER+ASSES+CYCLE(N)
      GU TO 777

```

NON-HAMOTHE DOCUMENTS WHICH SURVIVED THE OUTBREAK

```

UNLINE
CMDATA(M,2)=CLDATA(M,1)+(CMVAL*(LIMT+ASSUS))
I=1,INTER+ASSES+1
I=F(LIST(CMDATA(M,3)))+1 TO 410
I=F(CMDATA(M,2)*LI+1) SHEN(FIRCON(HAIRY,1),1)+1) )6C
I=F(MAG(MAGR)*LI+1) GO TO 430
I=F(CLFLU(CLFLU(HAIRY,2)*LF+1)) TO 430
ADTIME(BATRY)=1
GOTO 44C

```

Now cover the case with a thin sheet of paper.

CONTINUOUS ADDITIVE FUNCTION = CYCLE (N)

```

C:\PUS-C\MAIL\4,2
FLAG=0
DU 500 i=1,500 P5
IF (FIRJW(1,i)*i>1.5*R5) THEN I=1
INT=(C1*IAT(i)-1)+1 IF (I>500) GOTO 500
FLAG=1
END

```



```

C IF(SHEEN(F1K, C1N(1,1), 1, 1) .LT. CAMPUS1GO TO 520
C IF(FL0AT(F1R, C1N(1,2), 1, 1) .LT. AD1H(1) GO TO 520
C IF(MAC(F1R, C1N(1,3), 1, 1) .LT. 1) GO TO 520
C BARY=1
C I=AD1IP(1)
C IF(RAN>1) THEN
C   T=RAN*0.1*0.1*RAND(RAN)*STC3DGP() GO TO 520
C CONTINUE
C DATA(2,N,2)=CADATA(1,1)-(CHVLT*T)
C POS=CHDATA(N,2)
C GOTO 460
C CONTINUE
C CONTINUE
C I=1
C IF((CCCDFN(1,1)+1)*UR*RAND(RAN)+0.1*CH3DEGP() GO TO 535
C   T=1+RAND(RAN)*C3DT(1)
C   IF(RAN.GT.0.99)CALL RAN(RAN,RAN,1)
C   CONTINUE
C DATA(2,N,2)=CADATA(1,1)-(CHVLT*T)+0.01
C POS=CNPDATA(1,1)
C GOTO 311
C ****CUMULATIVE NAME = RESULTS OF POINT DEVIATE SYSTEM
I00  CINIT=NUL
      LARGE=NAP(1)
      IF(SYPE(LARGE)>NE*NS) GO TO 703
      NS=INT(S(P)+1)
      GO TO 777
703  CINIT=NUL
      FILE=SHIPLOAD(L1,2)
      NS=SHIP(L1,N-1)
      D=FILE+NS-1
      NS=0
      DO 705  I=1,L1
        IF(CPDATA(1,2,3)+SUBR(1)) GO TO 705
        IF(SLDR(1,3)*E(2,3)*GUT(1,1)) GO TO 705
        IF(KS*L1*SLDR(1,4)*L1*1) GO TO 705
        IF(SLDR(1,4)*SLDR(1,2)*L1*1) GO TO 705
        FIRST(SLDR(1,2))=FIRST(SLDR(1,2))+1
        SDR(SLDR(1,1))=CADATA(1,3)+FILE*(SLDR(1,1)*(1,2))
        KS=RAN+1
        IF(FAN.GT.0.99)CALL RAN(RAN,RAN,1)

```


IF (RAN>1) .G1 .PROJECTOR(1,2),MCAS) GO TO 101

RAN=RAN+1
IF(RAN>5) GOTO CALL ROLL(RAN,RAN,1X1)
CALL(SA,2)=TARGET

164

CONTINUE
IF(RAN>1) GOTO CALL ROLL(RAN,RAN,1X1)

CONTINUE

165 C ***
C

COMMENT LAMAG ASSISTANT PRINT OUT OF PROGRAM

P=M1ARG(N)
IF (S1(P)=1) S1(P)=Q+1 GO TO 605
IF ((SHGLAS(P))>NE-1) AND ((Q1(P)+G1(P))>GU-1), 777
IF ((STYPL(P))>Q-1) AND ((Q1(P)+G1(P))>GU-1), 777
IF ((STYPL(P))>Q-2) AND ((Q1(P)+G1(P))>GU-1), 777
PC=SLRBA(P,3)
PS=SLRBA(P,1)
PK=SLRBA(P,2)
YM=PIRCNT(C,3)
II=IF IX(CMOATA(M,2))
Y=RAND(RAN)

KANE=RAN+1
IF (RAH.C1>90) CALL ROLL(RAN,RAN,1X1)

IF (Y.L1>1.5) GO TO 801

IF (Y.L1>6.5) GO TO 301

IF (Y.L1>6.5) GO TO 822

166

C

C

C

C

C

C

C

C

C

C

C

C

C

C

C

C

C

C

C

C

C

C

C

C

C

C

C

C

C

C

C

C

C

CONTINUE

IF ((FILE(1,1),1),1).EQ.P).AND.(FLIRCN(1,2).EQ.FLIRCN(1,1))FLIRCN(1,2)=11

CONTINUE

CONTINUE

DO 10 XY=1,0

CONTINUE

DO 10 YY=1,3

CONTINUE

DO 10 ZZ=1,2

CONTINUE

NS=SHIPTC(P,1)

DO 101 NS

Y=RAND(FAN)

RAN=RAN+1

IF (RAN.GT.99) CALL RULTR(1,81)

IF (Y.LT.YY) SELDEF(SHIFT(P,2)+1-1,3)=0

IF (SPECIAS(P).EQ.1) GO TO 1000

IF (THISCP).GE.3) SETDEF(SHIFT(P,2)+1-1,3)=0

CONTINUE

END OF LOOP ON MISSES TABLE 111

CONTINUE

DATA PRESERVATION

DO 102 1=1,NEA1

IF (FLIRCN(1,1)).GT.3) DATAFLIRCN(1,3)=0

CONTINUE

DO 103 1=1,NEA2

IF (FLIRCN(1,1)).GT.3) DATAFLIRCN(1,2)=0

CONTINUE

DO 104 1=1,NEA3

IF (FLIRCN(1,1)).GT.3) DATAFLIRCN(1,1)=0

CONTINUE

DO 105 1=1,NEA4

IF (FLIRCN(1,1)).GT.3) DATAFLIRCN(1,4)=0

CONTINUE

DO 106 1=1,NEA5

IF (FLIRCN(1,1)).GT.3) DATAFLIRCN(1,5)=0

CONTINUE

DO 107 1=1,NEA6

IF (FLIRCN(1,1)).GT.3) DATAFLIRCN(1,6)=0

CONTINUE

DO 108 1=1,NEA7

IF (FLIRCN(1,1)).GT.3) DATAFLIRCN(1,7)=0

CONTINUE

DO 109 1=1,NEA8

IF (FLIRCN(1,1)).GT.3) DATAFLIRCN(1,8)=0

CONTINUE

DO 110 1=1,NEA9

IF (FLIRCN(1,1)).GT.3) DATAFLIRCN(1,9)=0

CONTINUE

DO 111 1=1,NEA10

IF (FLIRCN(1,1)).GT.3) DATAFLIRCN(1,10)=0

CONTINUE

DO 112 1=1,NEA11

IF (FLIRCN(1,1)).GT.3) DATAFLIRCN(1,11)=0

CONTINUE

CUNNINGHAM

- 5 -


```

PER=0.0
1T(HIT)T+0.0)GO TO 972
CONTINUE
IF(SHIFT)T+0.0)GO TO 973
PER2=SHIP
CONTINUE
IF(NBAT)T+0.0)GO TO 974
PER3=FCRT/FLOAT(NBAT)
CONTINUE
IF(SORT)T+0.0)GO TO 975
PER4=SORT/FCT(SORT)
CONTINUE
IF(MAGR)T+0.0)GO TO 976
IF(MAGCAP)T+0.0)GO TO 976
PER5=MAGR/MAGCAP
CONTINUE
IF(MAGCT)T+0.0)GO TO 977
IF(MAGCCAP)T+0.0)GO TO 977
PER6=MAGC/MAGCAP
CONTINUE
C***PRINT SECTION
IF(UNIT)SECTION
FORMAT(6,1)
FORMAT(6,2)
FORMAT(1A)
WRITE(6,205)
FORMAT(1X,12), *-* L.A.S.D.A.J.O.S. INPUT ***)
205 WRITE(6,210)
FORMAT(1X,17), *-* L.A.S.D.A.J.O.S. OUTPUT ***)
210 WRITE(6,211)
FORMAT(1X,17), *-* L.A.S.D.A.J.O.S. UNIT ***)
211 6,1,DECODE(SHIPS,T70,I3)
C
220 6,1,FORMAT(6,225)NIGHTS
FORMAT(1X,17), *-* L.A.S.D.A.J.O.S. NIGHTS
6,1,AKLA(6,170,13)
C
225 6,1,X,FORMAT(6,225)MILITARY
FORMAT(1X,17), *-* L.A.S.D.A.J.O.S. MILITARY
6,1,OFFICE(6,170,13)

```



```

AD 23050
AD 23060
AD 23070
AD 23080
AD 23090
AD 23100
AD 23110
AD 23120
AD 23130
AD 23140
AD 23150
AD 23160
AD 23170
AD 23180
AD 23190
AD 23200
AD 23210
AD 23220
AD 23230
AD 23240
AD 23250
AD 23260
AD 23270
AD 23280
AD 23290
AD 23300
AD 23310
AD 23320
AD 23330
AD 23340
AD 23350
AD 23360
AD 23370
AD 23380
AD 23390
AD 23400
AD 23410
AD 23420
AD 23430
AD 23440
AD 23450
AD 23460
AD 23470
AD 23480
AD 23490
AD 23500
AD 23510
AD 23520
AD 23530
AD 23540
AD 23550
AD 23560
AD 23570
AD 23580
AD 23590
AD 23600
AD 23610
AD 23620
AD 23630
AD 23640
AD 23650
AD 23660
AD 23670
AD 23680
AD 23690
AD 23700
AD 23710
AD 23720
AD 23730
AD 23740
AD 23750
AD 23760
AD 23770
AD 23780
AD 23790
AD 23800
AD 23810
AD 23820
AD 23830
AD 23840
AD 23850
AD 23860
AD 23870
AD 23880
AD 23890
AD 23900
AD 23910
AD 23920
AD 23930
AD 23940
AD 23950
AD 23960
AD 23970
AD 23980
AD 23990
AD 24000

```



```

245      FORMAT(1X,14,110,13,11,123,10,2,104,12)
CONTINUE
C
C      WRITE(6,2)
C
243      E
      WRITE(6,243)
      FORMAT(1X,'SHIP #1 BAIS #2 BAIS #PD SAM #AC GUN #CLWS ',AD
      '#FCM')
      DO 241 I=1,NSHIPS
      WRITE(6,242)NUM(I),(SHIPS(I,J),J=1,6)
CONTINUE
C
      WRITE(6,2)
C
240      E
      WRITE(6,240)
      FORMAT(1X,'SHIP #TAKE TIME #ILLS #ILLS #ILLS #ILLS #ILLS ')
      DO 247 I=1,NSHIPS
      WRITE(6,248)NUM(I),TAKETIME(I),ILLS(I),ILLS(I),ILLS(I),
      TAKETIME(I),ILLS(I),ILLS(I),ILLS(I)
CONTINUE
      WRITE(6,252)
      FORMAT(1X,/)
C
253      E
      WRITE(6,253)
      FORMAT(1X,'SYSTIM PERTURBATION OF INDIVIDUAL LINESSES //')
      WRITE(6,254)
      FORMAT(1X,10,10,'ILLS',T3,T3,T3,T3,T3,T3,T3,T3,T3,T3)
      T160, #SATVOL,/
C
254      E
      WRITE(6,254)
      FORMAT(1X,'SYSTIM PERTURBATION OF INDIVIDUAL LINESSES //')
      T160, #SATVOL,/
C
260      E
      WRITE(6,260)
      FORMAT(1X,10,10,'ILLS',T3,T3,T3,T3,T3,T3,T3,T3,T3,T3)
      T160, #SATVOL,/
C
261      E
      WRITE(6,261)
      FORMAT(1X,10,10,'ILLS',T3,T3,T3,T3,T3,T3,T3,T3,T3,T3)
      T160, #SATVOL,/
C
262      E
      WRITE(6,262)
      FORMAT(1X,'SYSTIM PERTURBATION OF INDIVIDUAL LINESSES //')
      T160, #SATVOL,/
C
263      E
      WRITE(6,263)
      FORMAT(1X,10,10,'ILLS',T3,T3,T3,T3,T3,T3,T3,T3,T3,T3)
      T160, #SATVOL,/
C
264      E
      WRITE(6,264)
      FORMAT(1X,10,10,'ILLS',T3,T3,T3,T3,T3,T3,T3,T3,T3,T3)
      T160, #SATVOL,/

```



```

***** SUMM000100
***** SUMM000200
***** SUMM000300
***** SUMM000400
***** SUMM000500
***** SUMM000600
***** SUMM000700
***** SUMM000800
***** SUMM000900
***** SUMM001000
***** SUMM001100
***** SUMM001200
***** SUMM001300
***** SUMM001400
***** SUMM001500
***** SUMM001600
***** SUMM001700
***** SUMM001800
***** SUMM001900
***** SUMM002000
***** SUMM002100
***** SUMM002200
***** SUMM002300
***** SUMM002400
***** SUMM002500
***** SUMM002600
***** SUMM002700
***** SUMM002800
***** SUMM002900
***** SUMM003000
***** SUMM003100
***** SUMM003200
***** SUMM003300
***** SUMM003400
***** SUMM003500
***** SUMM003600
***** SUMM003700
***** SUMM003800
***** SUMM003900
***** SUMM004000
***** SUMM004100
***** SUMM004200
***** SUMM004300
***** SUMM004400
***** SUMM004500
***** SUMM004600
***** SUMM004700
***** SUMM004800

      SUMS
      *
      * A DETERMINISTIC MODEL USING AAW FIREPOWER INDICES
      * FOR DETERMINING THE RESULTS OF AASC ENGAGEMENTS
      * ALAN D. ZIMM LCDR USN 1 SEPTEMBER 1983
      *****
      REAL LEAK! PKSATL$ATJ, TMINIT, OADEG, SHIP(24,7), CAP
      REAL FILE(24,7) PRES(5,4), PKV(9), COLL, CCLO, INFSL, INTERC(5)
      REAL INFSU, INFCL, INFCL, INFCL, INFCL, INFCL, INFCL, INFCL
      REAL LEAK, SAT, COL, HITS, AA, LA, YER
      *****
      INTEGER ATTACK, NSHIPS, SHCLAS(20), AXIS(20), INIER, NATION
      INTEGER I,J,AR,ASHIPS

      DO 900 R=1,10
      * ENTER NUMBER OF SHIPS, INTEGER
      NSHIPS = 6
      * ENTER CLASS OF SHIPS, INTEGER
      SHCLAS(1)=17
      SHCLAS(2)=18
      SHCLAS(3)=18
      SHCLAS(4)=16
      SHCLAS(5)=21
      SHCLAS(6)=22
      SHCLAS(7)=7
      SHCLAS(8)=8
      SHCLAS(9)=9
      SHCLAS(10)=9
      SHCLAS(11)=1
      SHCLAS(12)=1
      SHCLAS(13)=1
      SHCLAS(14)=1
      SHCLAS(15)=1
      SHCLAS(16)=1
      SHCLAS(17)=1
      SHCLAS(18)=1
      SHCLAS(19)=1
      SHCLAS(20)=1
      *****

```



```

SUM00490
SUM00500
SUM00510
SUM00520
SUM00530
SUM00540
SUM00550
SUM00560
SUM00570
SUM00580
SUM00590
SUM00600
SUM00610
SUM00620
SUM00630
SUM00640
SUM00650
SUM00660
SUM00670
SUM00680
SUM00690
SUM00700
SUM00710
SUM00720
SUM00730
SUM00740
SUM00750
SUM00760
SUM00770
SUM00780
SUM00790
SUM00800
SUM00810
SUM00820
SUM00830
SUM00840
SUM00850
SUM00860
SUM00870
SUM00880
SUM00890
SUM00900
SUM00910
SUM00920
SUM00930
SUM00940
SUM00950
SUM00960

ENTER AXIS (ON=0, OFF=1)
AXIS(1)=0
AXIS(2)=0
AXIS(3)=1
AXIS(4)=0
AXIS(5)=0
AXIS(6)=1
AXIS(7)=1
AXIS(8)=0
AXIS(9)=1
AXIS(10)=0
AXIS(11)=0
AXIS(12)=0
AXIS(13)=0
AXIS(14)=0
AXIS(15)=0
AXIS(16)=0
AXIS(17)=0
AXIS(18)=0
AXIS(19)=0
AXIS(20)=0

ENTER NUMBER OF LAYERS OF SHIPS COMPOSING THE DEFENSE
LAYER=3.0

* ENTER P-K OF DEFINING AREA DEFENSE SAM
PK=.7

ENTER NATIONALITY (U.S. = 1, SOVIET = 2)
NATION=2

* ENTER NUMBER OF INTERCEPTS (1-5, INTEGER)
INTER=5

* ENTER NUMBER OF MISSILES, INTEGER
ATTACK=10**R

* ENTER TIME INTERVAL BETWEEN ASCM, REAL, SECONDS
TIME=2.0

* ENTER CAPABILITY OF ATTACKING ASCM ("DIFFICULTY")
CAP=1.0

***** END INPUT SECTION ****

```


START INITIALIZATION SECTION

۸

SUMO1450
 SUMO1460
 SUMO1470
 SUMO1480
 SUMO1490
 SUMO1500
 SUMO1510
 SUMO1520
 SUMO1530
 SUMO1540
 SUMO1550
 SUMO1560
 SUMO1570
 SUMO1580
 SUMO1590
 SUMO1600
 SUMO1610
 SUMO1620
 SUMO1630
 SUMO1640
 SUMO1650
 SUMO1660
 SUMO1670
 SUMO1680
 SUMO1690
 SUMO1700
 SUMO1710
 SUMO1720
 SUMO1730
 SUMO1740
 SUMO1750
 SUMO1760
 SUMO1770
 SUMO1780
 SUMO1790
 SUMO1800
 SUMO1810
 SUMO1820
 SUMO1830
 SUMO1840
 SUMO1850
 SUMO1860
 SUMO1870
 SUMO1880
 SUMO1890
 SUMO1900
 SUMO1910
 SUMO1920

SHIP(23,2)=0
 SHIP(24,2)=0
 SHIP(1,2)=0
 SHIP(2,3)=0
 SHIP(3,3)=0
 SHIP(4,3)=0
 SHIP(5,3)=0
 SHIP(6,3)=0
 SHIP(7,3)=0
 SHIP(8,3)=0
 SHIP(9,3)=0
 SHIP(10,3)=0
 SHIP(11,3)=0
 SHIP(12,3)=0
 SHIP(13,3)=0
 SHIP(14,3)=0
 SHIP(15,3)=0
 SHIP(16,3)=0
 SHIP(17,3)=0
 SHIP(18,3)=0
 SHIP(19,3)=0
 SHIP(20,3)=0
 SHIP(21,3)=0
 SHIP(22,3)=0
 SHIP(23,3)=0
 SHIP(24,3)=0
 SHIP(25,3)=0
 SHIP(26,3)=0
 SHIP(27,3)=0
 SHIP(28,3)=0
 SHIP(29,3)=0
 SHIP(30,3)=0
 SHIP(31,3)=0
 SHIP(32,3)=0
 SHIP(33,3)=0
 SHIP(34,3)=0
 SHIP(35,3)=0
 SHIP(36,3)=0
 SHIP(37,3)=0
 SHIP(38,3)=0
 SHIP(39,3)=0
 SHIP(40,3)=0
 SHIP(41,3)=0
 SHIP(42,3)=0
 SHIP(43,3)=0
 SHIP(44,3)=0
 SHIP(45,3)=0
 SHIP(46,3)=0
 SHIP(47,3)=0
 SHIP(48,3)=0
 SHIP(49,3)=0
 SHIP(50,3)=0
 SHIP(1,4)=0
 SHIP(2,4)=0
 SHIP(3,4)=0
 SHIP(4,4)=0
 SHIP(5,4)=0
 SHIP(6,4)=0
 SHIP(7,4)=0
 SHIP(8,4)=0
 SHIP(9,4)=0
 SHIP(10,4)=0
 SHIP(11,4)=0
 SHIP(12,4)=0
 SHIP(13,4)=0
 SHIP(14,4)=0
 SHIP(15,4)=0
 SHIP(16,4)=0
 SHIP(17,4)=0
 SHIP(18,4)=0
 SHIP(19,4)=0
 SHIP(20,4)=0
 SHIP(21,4)=0
 SHIP(22,4)=0

WMO1940 WMO1950 WMO1960 WMO1970 WMO1980 WMO1990 WMO2000 WMO2010 WMO2020 WMO2030 WMO2040 WMO2050 WMO2060 WMO2070 WMO2080 WMO2090 WMO2100 WMO2110 WMO2120 WMO2130 WMO2140 WMO2150 WMO2160 WMO2170 WMO2180 WMO2190 WMO2200 WMO2210 WMO2220 WMO2230 WMO2240 WMO2250 WMO2260 WMO2270 WMO2280 WMO2290 WMO2300 WMO2310 WMO2320 WMO2330 WMO2340 WMO2350 WMO2360 WMO2370 WMO2380 WMO2390


```

PRES(3,1)= 1.0
PRES(3,2)= 1.0
PRES(3,3)= 1.0
PRES(3,4)= 1.0
PRES(4,1)= 1.23
PRES(4,2)= 1.07
PRES(4,3)= 1.36
PRES(4,4)= 1.09
PRES(5,1)= 1.26
PRES(5,2)= 1.09
PRES(5,3)= 1.39
PRES(5,4)= 1.11

C
C CUMMENCE COMPUTATIONS
C
C ASHIPS=NSHIPS
C HITS=0.0

      DO 10 I=1,NSHIPS
        IF (SHIP(I,7).LT.J)ASHIPS=ASHIPS-1
        DO 20 J=1,7
          FILE(I,J)=SHIP(SHCLAS(I),J)
        CONTINUE
10      CONTINUE

      DO 30 I=1,NSHIPS
        DO 40 J=2,5
          FILE(I,J)=FILE(I,J)*PKV(IFIX(PK/O+1))*PK/.7
        CONTINUE
30      CONTINUE

      DO 50 I=1,NSHIPS
        DO 60 J=2,3
          IF(FILE(I,J).EQ.0)GO TO 60
          IF(NATION(EQ.2)GO TO 80
            IF(INTER.GE.3).AND.(FILE(I,7).EQ.2))60 73 60
              FILE(I,J)=FILE(I,J)*PRES(INTER,1)
              FILE(I,J+2)=FILE(I,J+2)*PRES(INTER,2)
              GO TO 60
            CONTINUE
50      CONTINUE
          IF((INTER.GE.3).AND.(FILE(I,7).EQ.2))60 70 60
            FILE(I,J)=FILE(I,J)*PRES(INTER,3)
            FILE(I,J+2)=FILE(I,J+2)*PRES(INTER,4)
          CONTINUE
60      CONTINUE
C

```



```

DO 100 I=1,NSHIPS
  DO 110 J=2,5
    IF(Axis(I).NE.0)FILE(I,J)=FILE(I,J)*.8
    CONTINUE
110
C     SATU=0.0
C     SATT=SATL+FILE(1,2)
C     SATU=SATT+FILE(1,3)
C     COLL=COLL+FILE(1,4)
C     COLU=COLU+FILE(1,5)
    CONTINUE
C     WRITE(6,205)SATT,SATU,COLL,COLU
C     FORMAT(IX,4(F7.2))
C     IF(NSHIPS.GT.1)SATU=SATU*.8
C     IF(NSHIPS.GT.1)SATT=SATT*.8
C     INFSL=20.0/FLOAT(NSHIPS)
C     INFSU=80.0/FLOAT(NSHIPS)
C     INFCL=10.0/FLOAT(NSHIPS)-(.5*0.0/FLOAT(NSHIPS))
C     INFCU=70.0/FLOAT(NSHIPS)-(10.0*0.0/FLOAT(NSHIPS))
C     WRITE(6,205)INFSL,INFSU,INFCU,INFCU
C     J=0
C     LEAK=0.0
C     DO 130 I=1,NSHIPS
      IF(FILE(I,7).EQ.0)GO TO 140
      J=J+1
      LEAK=LEAK+(FILE(I,1)*INTERC(INIER))/FLOAT(NSHIPS))
      GO TO 130
    CONTINUE
    LEAK=LEAK+(FILE(I,1))/FLOAT(NSHIPS))
    J=0
C     LEAK=(LEAK*CAP)/LAYER
C     IF(TIMINT.LT.1.1INFSL)GO TO 150
C     SATL=SATL+((TIMINT-INFSL)/(INFSU-INFSL))*(SATU-SATL)
    CONTINUE
    SAT=SATL
    CONTINUE
140
150
160

```



```

COL=COL
IF(TIMINT.LT.INFCOL)GO TO 170
COL=COL+((TIMINT-INFCL)/(INFCU-INFCL))*(COLU-COLL))
CONTINUE
170
IF(ATTACK.GT.IFIX(SAT))GO TO 180
IF(S=LEAK*FLOAT(ATTACK))
GO TU 190
CONTINUE
HITS=LEAK*SAT
A=(ATTACK-IFIX(SAT))+1
AA=0.1
DO 185 I=1,A
    AA=AA+(.*4/((COL-SAT)))
    IF(AA.GT.*1.0)AA=1.0
    HITS=HITS+AA
CONTINUE
CONTINUE
DO 185
    WRITE(6,200)ATTACK,TIMINT,SAT,COL,HITS,LEAK
    FORMAT(1X,'ATTACK= ',I3,' TIMINT= ',F6.2,' SAT= ',F6.2,
          ' COL= ',F6.2,' HITS= ',F7.2,' LEAK= ',F6.3)
CONTINUE
STOP
END
C
200   G
500

```


LIST OF REFERENCES

1. Taylor, J. G., Force-On-Force Attrition Modeling, Military Applications Section, Operations Research Society of America, 1981.
2. Dupuy, T. N., Numbers Predictions and War, Bobbs-Merrill, 1979.

INITIAL DISTRIBUTION LIST

	No. Copies
1. Defense Technical Information Center Cameron Station Alexandria, Virginia 22314	2
2. Library, Code 0142 Naval Postgraduate School Monterey, California 93943	2
3. OSWR Registry Central Intelligence Agency ATTN: Mr. Bob Gerber, OSWR/NSD/SSB Washington, DC 20505	1
4. Commanding Officer USS VINSON (CVN 70) ATTN: LCDR Alan Zimm Fleet Post Office San Francisco 96601	2
5. Commanding Officer Center for Wargaming ATTN: CDR Adams Newport, Rhode Island 02840	2
6. Commander G. R. Porter, Code 55PT Naval Postgraduate School Monterey, California 93943	1
7. Captain W. Hughes, Code 55HL Naval Postgraduate School Monterey, California 93943	2
8. Chief of Naval Operations OP 953 ATTN: CDR Dallas Bethea Washington, DC 20505	2
9. Commander, Second Fleet Norfolk, Virginia 23511	2
10. Commander, Third Fleet Pearl Harbor, Hawaii 96860	2

31 '374

Thesis
Z378 Zimm

c.1 AAW firepower indexing
for naval combatants.



thesZ378
AAW firepower indexing for Naval combata



3 2768 000 98792 9
DUDLEY KNOX LIBRARY