Thumb Instruction Programming

Copyright (c) 2024 - 2014 Young W. Lim.

Permission is granted to copy, distribute and/or modify this document under the terms of the GNU Free Documentation License, Version 1.2 or any later version published by the Free Software Foundation; with no Invariant Sections, no Front-Cover Texts, and no Back-Cover Texts. A copy of the license is included in the section entitled "GNU Free Documentation License".

Please send corrections (or suggestions) to youngwlim@hotmail.com.

This document was produced by using LibreOffice.

Based on

ARM System-on-Chip Architecture, 2nd ed, Steve Furber

Introduction to ARM Cortex-M Microcontrollers – Embedded Systems, Jonathan W. Valvano

Digital Design and Computer Architecture, D. M. Harris and S. L. Harris

ARM assembler in Raspberry Pi Roger Ferrer Ibáñez

https://thinkingeek.com/arm-assembler-raspberry-pi/

Thumb Instruction Programming

ARM vs. Thumb programmer's models

R0	
R1	
R2	
R3	
R4	
R5	
R6	
R7	
R8	
R9	
R10	
R11	
R12	
SP	
LR	
PC	

ARM state

• 16 + 1 = 17 normal registers

Thumb state

• 11 + 1 = 12 normal registers

ARM state

CPSR

Thumb state

CPSR

ARM Register Sets (2-1)

- The biggest register <u>difference</u> involves the **SP** register.
 - the Thumb state unique stack mnemonics (PUSH, POP)
 - the ARM state.
 no such stack mnemonics (PUSH, POP)
- PUSH, POP instructions <u>assume</u>
 the existence of a <u>stack pointer</u> (R13)
- PUSH, POP instructions translate into load and store instructions in the ARM state.

ARM Register Sets (2-2)

- The CPSR register holds
 - processor mode bits (user or exception flag)
 - · interrupt mask bits
 - condition codes and
 - Thumb status bit
- The Thumb status bit (T) indicates the processor's current state:
 - 0 for ARM state (default)
 - 1 for Thumb.
- Although other <u>bits</u> in the <u>CPSR</u> may be <u>modified</u> in software, it's <u>dangerous</u> to <u>write</u> to **T** directly;
 - the results of an improper state change are *unpredictable*.

N Negative flag

Z Zero flag

C Carry flag

V Overflow flag

To <u>disable</u> Interrupt (**IRQ**), set **I**To <u>disable</u> Fast Interrupt (**FIQ**), set **F**

USR User mode

FIQ Fast Interrupt mode


SVC Supervisor mode

ABT Abort mode


UND Undefined mode

SYS System mode

Branch instructions

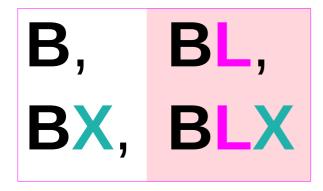

BL and **BLX** copy the return address into **LR** (R14)

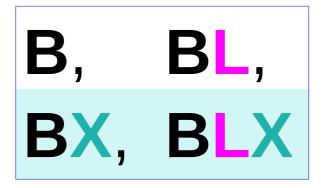

BX and **BLX** can change the processor state

https://developer.arm.com/documentation/dui0489/c/arm-and-thumb-instructions/branch-and-control-instructions/b--bl--bx--blx--and-bxj

Branch instructions and operand types

B {cond} labelB {cond} Rm	BL {cond} labelBL {cond} Rm
BX {cond} labelBX {cond} Rm	BLX {cond} labelBLX {cond} Rm

 B {cond} label 	 BL {cond} label
 BX {cond} label 	 BLX {cond} label

BX {cond} Rm	BLX {cond} Rm
• B (cond) Rm	BL (cond) Rm

Branch
Branch with Link
Brand and eXchange

Brand with Link and eXchange

- B {cond} label
- BL {cond} label
- BLX {cond} label
- BX {cond} Rm
- BLX {cond} Rm

B and BL instructions (1)

- B {cond} label
- B {cond} Rm
- BL {cond} label
- BL {cond} Rm
- · cond is an optional condition code
- label is a program-relative expression
- The B instruction
 - causes a <u>branch</u> to <u>label</u>.
- The BL instruction
 - copies the <u>address</u> of the next instruction into r14 (Ir, the link register)
 - causes a branch to label.

Branch

Branch with Link

Brand and eXchange

Brand with Link and eXchange

B and **BL** instructions (2)

- machine-level B and BL instructions have a range of ±32Mb from the address of the current instruction.
 - However, you can use these instructions even if label is <u>out of range</u>.
 - Often you do <u>not know</u> where <u>label</u> is placed by the linker.
 - When necessary, the ARM linker adds veneer code to allow longer branches

```
2^{24} Byte = 2^{4} MB = 16 MB
```

- +/- 8 MB (forward, backward)
- +/- 32 MB (2 lsb's : 4 bytes alignment)

B and BL instructions (3)

- The ARM BL instruction has a 24-bit immediate for encoding the branch offset
- this would give you a range of 2²⁴ bytes, or +/-8MB (given that the immediate allows forwards or backwards).
- all ARM instructions are 4 bytes long, and must be size aligned.
- no need to consider the two least significant bits of the address
- taking our branch range from +/-8MB to +/-32MB.

- 2^{24} Byte = 2^{4} MB = 16 MB
 - +/- 8 MB (forward, backward)
- +/- 32 MB (2 lsb's : 4 bytes alignment)



https://community.arm.com/support-forums/f/architectures-and-processors-forum/3061/range-of-bl-instruction-in-arm-state

BX and **BLX** instructions (1)

- BX {cond} label
- BX {cond} Rm
- BLX {cond} label
- BLX {cond} Rm
- cond is an optional condition code
- label is a program-relative expression
- Rm is a register containing an address to branch to
- The BX instruction
 - causes a <u>branch</u> to the address contained in Rm
 - <u>changes</u> the instruction set, if required:
- The BLX instruction
 - copies the <u>address</u> of the next instruction into r14 (Ir, the link register)
 - causes a branch to label.
 - can change the instruction set

Branch

Branch with Link

Brand and eXchange

Brand with Link and eXchange

BX and **BLX** instructions (2)

B {cond} label
B {cond} Rm
BL {cond} Rm
BL {cond} Rm
BLX {cond} label
BX {cond} Rm
BLX {cond} Rm

Branch
Branch with Link
Brand and eXchange
Brand with Link and eXchange

with label

<u>always changes</u> the state.


ARM state → Thumb state


Thumb state → ARM state


with Rm

 $Rm[0] = 0 \rightarrow to ARM state$ $Rm[0] = 1 \rightarrow to Thumb state$


B, BL, BX, and BLX instructions

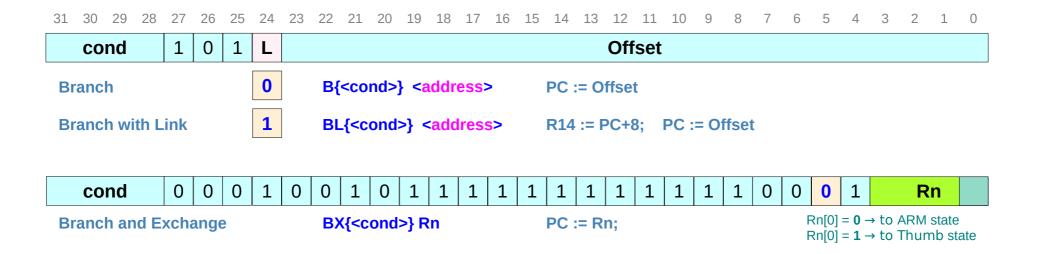

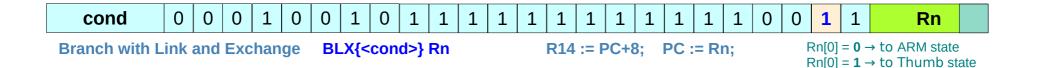

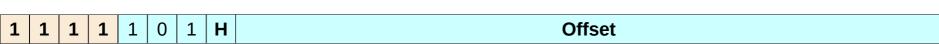

Branch instructions – changing the state

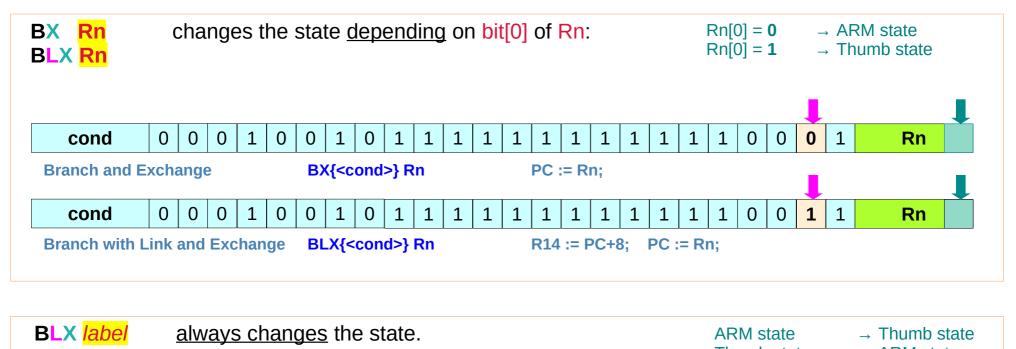



https://developer.arm.com/documentation/dui0489/c/arm-and-thumb-instructions/branch-and-control-instructions/b--bl--bx--blx--and-bxj

Entering and leaving the Thumb state (1)

- several ways to <u>enter</u> or <u>leave</u> the <u>Thumb state</u> properly.
- the usual method is via the BX (Branch and EXchange) instruction.
- also BLX (Branch, Link, and EXchange) with version 5 architecture.
- during the <u>branch</u>, the CPU examines the <u>lsb</u> of the <u>destination address</u> in a register operand to <u>determine</u> the <u>new state</u>.
- all ARM instructions will align themselves on either a 32- or 16-bit boundary →
- the lsb of the destination address is not used in the branch directly.
- if the lsb is 1 when branching from ARM state, the processor switches to Thumb state before it begins executing from the new address;
- if the lsb is 0 when branching from Thumb state, back to ARM state it goes.

- BX {cond} Rm
- BLX {cond} Rm

with Rm Rm[0] = $\mathbf{0} \rightarrow$ to ARM state Rm[0] = $\mathbf{1} \rightarrow$ to Thumb state

https://community.arm.com/developer/ip-products/processors/f/cortex-a-forum/5655/question-about-a-code-snippet-on-arm-thumb-state-change

Entering and leaving the Thumb state (2)

- all ARM instructions will align themselves on either a 32- or 16-bit boundary →
- the lsb of the destination address is not used in the branch directly.
- if the lsb is 1 when branching from ARM state, the processor switches to Thumb state before it begins executing from the new address;
- if the lsb is 0 when branching from Thumb state, back to ARM state it goes.

https://community.arm.com/developer/ip-products/processors/f/cortex-a-forum/5655/question-about-a-code-snippet-on-arm-thumb-state-change


32-bit / 16-bit alignment

Since all ARM <u>instructions</u> have either a 32- or 16-bit <u>alignment</u>

the LSB of the address is <u>not used</u> in the branch directly.

32-bit (4 bytes) word - the least significant 2 bits of the target address are not used 16-bit (2 bytes) word - the least significant 1 bit of the target address is not used

can use the least significant bit is used to change the state (ARM ↔ Thumb)

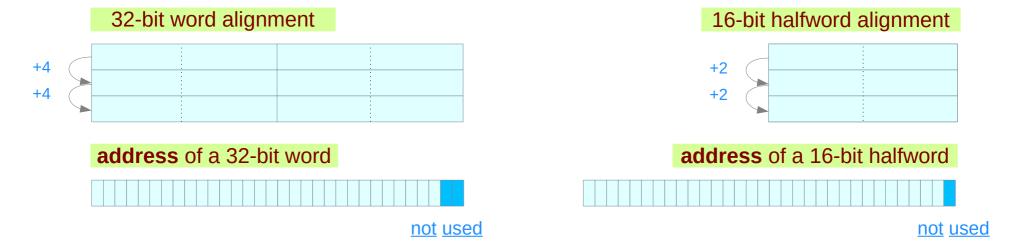

https://www.cs.princeton.edu/courses/archive/fall13/cos375/ARMthumb.pdf

Branch and link operation (1)


Both the ARM and Thumb instruction sets contain a primitive subroutine call instruction, **BL**, which performs a branch-with-link operation.

LR ← the return address the <u>next value</u> of the PC

PC ← the destination address **PC** := Rn;

LR[0] ← 1 if the BL <u>executed</u> from Thumb state LR[0] ← 0 if the BL <u>executed</u> from ARM state

The result is to transfer control to the destination address, passing the return address in LR as an additional parameter to the called subroutine

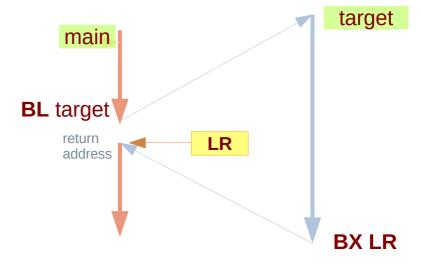

"BL target" in Thumb state then assign LR[0] = 1

"BL target" in ARM state then assign LR[0] = 0

/IHI0042E_aapcs.pdf

Branch and link operation (2)


Control is returned to the instruction following the **BL** when the return address is loaded back into the PC

A subroutine call can be synthesized by any instruction sequence that has the effect:

```
LR[31:1] ← return address R14 := PC+8;

LR[0] ← code type <u>at return address</u>
(0 ARM, 1 Thumb)

PC ← subroutine address PC := Rn;
```

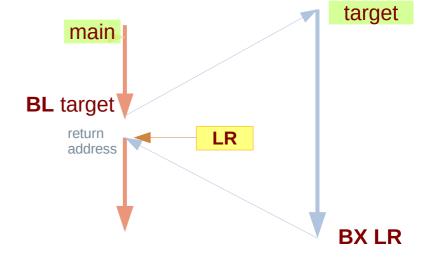

LR ← the return address

LR[31:1] ← the return address

LR[0] ← 0 called from ARM codes

LR[0] ← 1 called from Thumb codes

PC ← the destination address

/IHI0042E_aapcs.pdf


Branch and Exchange (1)

- the Branch and Exchange (BX) instruction.
- also Branch, Link, and <u>Exchange</u> (BLX)
 if you're using an ARM with version 5 architecture.
- During the branch, the CPU examines
 the least significant bit (<u>lsb</u>) of the <u>destination address</u>
 to determine the <u>new state</u>.

BX R0 ; to ARM state R0 0


BX R0 ; to Thumb state R0 1

address of a 32-bit word in Rm

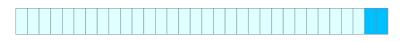

not used

https://www.embedded.com/introduction-to-arm-thumb/

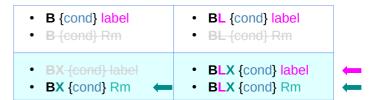

with label ← always changes the state.

ARM state → Thumb state

Thumb state → ARM state

with Rm \leftarrow Rm[0] = $\mathbf{0} \rightarrow$ to ARM state
Rm[0] = $\mathbf{1} \rightarrow$ to Thumb state

Branch and Exchange (2)

- Since all ARM instructions will align themselves on either a 32- or 16-bit boundary, the lsb of the address is not used in the branch directly.
- if the lsb is 1 when branching <u>from ARM state</u>, the processor <u>switches</u> to <u>Thumb state</u> before it begins executing from the new address;
- if the lsb is 0 when branching from Thumb state, the processor switches back to ARM state it goes.

```
BX Rm ←
BLX Rm ←
; destination address in the regsiter Rm
If Rm[0] is 0, to ARM state.
If Rm[0] is 1, to Thumb state.

BLX lable ←
; destination address is the PC-relative lable expression always change: (ARM → Thumb, Thumb → ARM)
```

```
B {cond} label
B {cond} Rm
BL {cond} Rm
BL {cond} Rm
BLX {cond} label
BLX {cond} Rm
BLX {cond} Rm
```

```
with label ← always changes the state.

ARM state → Thumb state

Thumb state → ARM state
```

```
with Rm \leftarrow
Rm[0] = \mathbf{0} \rightarrow to ARM state
Rm[0] = \mathbf{1} \rightarrow to Thumb state
```

Branch and Exchange (2)

change into Thumb state, then back

SUB BRANCH:

```
BL thumb_sub; must be in a space of +/- 4 MB add R1, #7; point to SUB_RETURN with bit 0 clear BX R1; assembler-specific instruction to switch to ARM SUB RETURN:
```

Branch and Exchange (3)

- the BX instruction example to go <u>from ARM to Thumb</u> state and <u>back</u>.
- first switches to Thumb state (BX R1)
- then <u>calls</u> a <u>subroutine</u> <u>written</u>
 in <u>Thumb</u> code (<u>BL</u> thumb <u>sub</u>)
- upon <u>return</u> from the subroutine (BX R1) the system again switches back to ARM state:

```
mov R0, #5; argument to function is in R0
add R1, PC,#1; load address of SUB_BRANCH,
; set for THUMB by adding 1

BX R1; R1 contains address
; of SUB_BRANCH+1
```

; to switch to Thumb

```
SUB_BRANCH:

BL thumb_sub

; must be in a space of +/- 4 MB

add R1, #7 ; point to SUB_RETURN
; with bit 0 clear

BX R1 ; to switch to ARM

SUB RETURN:
```

Branch and Exchange (4)

- this example <u>assumes</u> that
 R1 is *preserved* by the subroutine.
- The PC always contains the address of the <u>current</u> instruction plus 8

```
add R1, PC,#1
· (4 bytes)
BX R1
· (4 bytes)
· SUB_BRANCH
```

SUB_BRANCH(PC of add inst. + 8 bytes)

```
mov R0, #5
                    ; argument to function is in R0
      add R1, PC,#1; load address of SUB BRANCH,
                     ; set for THUMB by adding 1
      BX R1
                     : R1 contains address
                     ;of SUB BRANCH+1
                     :to switch to Thumb
+4
      SUB BRANCH:
         thumb sub
                     ; must be in a space of +/- 4 MB
      add R1, #7
                     ; point to SUB RETURN
                     ; with bit 0 clear
      BX R1
                     ; to switch to ARM
      SUB RETURN:
```

Branch and Exchange (5)

- The Thumb BL instruction actually resolves into two instructions, so 8 bytes are used between SUB_BRANCH and SUB_RETURN.
- BL thumb_sub (4 bytes)
 - BL (H=0) Offset_high (2 bytes)
 - BL (H=1) Offset_low (2 bytes)
- add R1, #7 (2 bytes)
- **BX R1** (2 bytes)

BX R1 ; R1 contains address

;of SUB_BRANCH+1 ;to switch to Thumb

```
SUB_BRANCH: BL thumb sub
```

; must be in a space of +/- 4 MB

add R1, #7 ; point to SUB_RETURN

; with bit 0 clear

BX R1 ; to switch to ARM

SUB RETURN:

State changing example (1)

Change into Thumb state, then back

mov R0, #5	; argument to function is in R0
add R1, PC, #1	; Load address of SUB_BRANCH, Set for THUMB by adding 1
BX R1	; R1 contains address of SUB_BRANCH+1

; Assembler-specific instruction to switch to Thumb

SUB BRANCH:

BL thumb_sub add R1, #7 BX R1 ; Must be in a space of +/- 4 MB ; Point to SUB_RETURN with bit 0 clear

; Assembler-specific instruction to switch to ARM

SUB_RETURN:	

https://community.arm.com/developer/ip-products/processors/f/cortex-a-forum/5655/question-about-a-code-snippet-on-arm-thumb-state-change

thumb sub:

State changing example (2)

Change into Thumb state, then back

mov R0, #5	
add R1, PC, #1	
BX R1	

; switch to Thumb

SUB BRANCH:

BL thumb_sub add R1, #7 BX R1

: switch to ARM

SUB RETURN:

In ARM mode, PC indicates 2 instructions ahead

PC of 'ADD R1,PC,#1' is the address of SUB_BRANCH

execution mode switch from **ARM** to **Thumb** at the **SUB_BRANCH** and the program will execute in **Thumb** mode.


And **R1** is now 'SUB_BRANCH+1' and by adding to 7 it will become 'SUB_BRANCH+8'.

'SUB_BRANCH+8' is the address of 'SUB_RETURN' and the program jumps to the address of which LSB value is 0 and the execution mode will become from **Thumb** mode to **ARM** mode.


https://community.arm.com/developer/ip-products/processors/f/cortex-a-forum/!

State changing example (3)

in ARM-state, to call a subroutine addressed by **r4** with control returning to the following instruction, do:

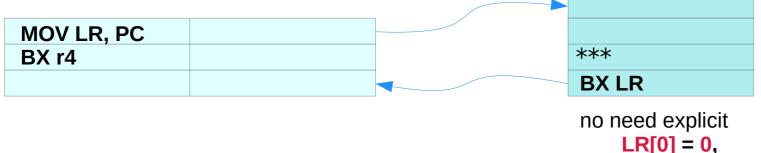

The equivalent sequence will <u>not</u> work <u>from Thumb state</u> because the instruction that sets LR (**MOV LR, PC**) does <u>not</u> copy the <u>Thumb-state</u> bit to **LR[0]**.

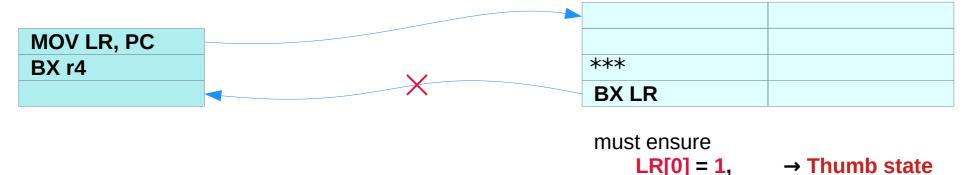


30

/IHI0042E aapcs.pdf

→ ARM state

Switching the state (1) **BX** or **BLX**

- There are several ways to <u>enter</u> or <u>leave</u> the <u>Thumb</u> state properly.
- The usual method is via the Branch and Exchange (BX) instruction.
- also Branch, Link, and <u>Exchange</u> (BLX)
 if you're using an ARM with version 5 architecture.
- During the branch, the CPU examines
 the least significant bit (<u>lsb</u>) of the <u>destination address</u>
 to determine the <u>new state</u>.

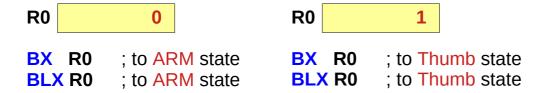

Switching the state (2) Exception Handler

- When an exception occurs, the processor automatically begins executing in ARM state at the address of the exception vector.
- So another way to <u>change state</u> is to place your 32-bit code in an <u>exception handler</u>.
- If the CPU is running in Thumb state
 when that exception occurs, you can count on it
 being in ARM state within the handler.
- If desired, you can have the exception handler put the CPU into Thumb state via a <u>branch</u>.

Switching the state (3) **T** bit in the **SPSR**

The final way to change the state is via a **return** from **exception**.

- When returning <u>from</u> the processor's <u>exception mode</u>, the <u>saved value</u> of T in the <u>SPSR</u> register is used to <u>restore</u> the <u>state</u>.
- This T bit can be used, for example, by an <u>operating system</u> to <u>manually restart</u> a task in the <u>Thumb state</u> – if that's how it was running previously.

Thumb instruction set benefits

- The biggest reason to look for an ARM processor with the Thumb instruction set is if you need to reduce code density.
- In addition to <u>reducing</u> the total amount of <u>memory</u> required, you may also be able to <u>narrow</u> the <u>data bus</u> to just 16 bits.
- With the narrower bus, it will take two bus cycles to fetch a single 32-bit instruction;
- but you'll only <u>pay</u> that penalty in the parts of your code that <u>can't</u> be <u>implemented</u> with the <u>Thumb instructions</u>.
- And you'll still have the benefits of a powerful 32-bit RISC processor. A nifty trick indeed.

BLX in ARM Architecture v5

In ARM Architecture v5
both ARM and Thumb state
provide a BLX instruction
that will call a subroutine <u>addressed by a register</u>
and <u>correctly sets the return address</u>
to the sequentially <u>next value</u> of the <u>program counter</u>.

/IHI0042E_aapcs.pdf

Thumb → ARM interworking call



to **BL** to an intermediate Thumb code segment that executes the **BX** instruction.

the **BL** instruction loads the **link register** immediately before the **BX** instruction is executed.

In addition, the Thumb instruction set version of BL sets bit 0 when it loads the link register with the return address.

When a Thumb-to-ARM interworking subroutine call returns using a **BX LR** instruction, it causes the required state change to occur automatically.

```
BL __call_via_r4
BX r4

Stop
BX r4

LR[0] = 0 → ARM state
```

```
CODE16
                                                                               CODE32
                                      Stop
ThumbProg
                                          MOV
                                                 r0. #0x18
                                                                           ARMSubroutine
                                                 r1. =0x20026
    MOV
          r0. #2
                                          LDR
                                                                               ADD
                                                                                      r0. r0. r1
    MOV
         r1, #3
                                                                               BX
                                                                                      LR
                                          SWI
                                                 0xAB
    ADR
          r4, ARMSubroutine
                                        call via r4
                                                                               END
    BL
                                          ВХ
           __call_via_r4
                                                 r4
```

https://developer.arm.com/documentation/dui0040/d/Interworking-ARM-and-Thumb/Basic-assembly-language-interworking/Implementing-interworking-assembly-language-subroutines

Thumb → ARM interworking call



If you always use the <u>same register</u> to store the <u>address</u> of the <u>ARM subroutine</u> that is being called from <u>Thumb</u>, this segment can be used to send an interworking call to <u>any</u> ARM subroutine.

You must use a **BX LR** instruction at the end of the ARM subroutine to return to the caller.

You cannot use the MOV pc,Ir instruction to return in this situation because it does not cause the required change of state.

```
ADR r4, ARMSubroutine

CODE16
ThumbProg

***

ADR r4, ARMSubroutine

BL __call_via_r4

***

_call_via_r4

BX r4

CODE32
ARMSubroutine

***

BX LR
```

ARM → Thumb interworking call



<u>no need</u> to set bit 0 of the **link register** because the routine is <u>returning</u> to ARM state.

store the return address by copying **PC** into **LR** with a **MOV Ir,pc** instruction immediately before the **BX** instruction.

Remember that the address operand to the **BX** instruction that calls the **Thumb subroutine** must have bit 0 set so that the processor executes in **Thumb state** on arrival.

As with Thumb-to-ARM interworking subroutine calls, you must use a **BX** instruction to return.

```
CODE16
ADR r4, ThumbSub + 1
...
MOV Ir, pc
BX r4

CODE16
ThumbSub
ADD r0, r0, r1
BX LR
END
```

 $LR[0] = 0 \rightarrow ARM state$

ADR r4, ThumbSub + 1 BX r4

ARM → Thumb interworking call example code (1)

```
AREA ArmAdd, CODE, READONLY
                                                                      : name this block of code.
                                                                       : Mark 1st instruction to call.
    ENTRY
                                                                      : Assembler starts in ARM mode.
main
    ADR
            r2, ThumbProg + 1
                                                                      : Generate branch target address and set bit 0.
                                                                      ; hence arrive at target in Thumb state.
    ВХ
            r2
                                                                       ; Branch exchange to ThumbProg.
    CODE16
                                                                      ; Subsequent instructions are Thumb.
ThumbProa
    MOV
            r0. #2
                                      : Load r0 with value 2.
    MOV
            r1. #3
                                      ; Load r1 with value 3.
    ADR
            r4, ARMSubroutine
                                      ; Generate branch target address, leaving bit 0
                                       : clear in order to arrive in ARM state.
                                       ; Branch and link to Thumb code segment that will
    BL
              call via r4
                                      ; carry out the BX to the ARM subroutine.
                                      : The BL causes bit 0 of Ir to be set.
Stop
                                      : Terminate execution.
            r0, #0x18
                                      ; angel SWIreason ReportException
    MOV
                                      ; ADP Stopped ApplicationExit
            r1, =0x20026
    LDR
                                      ; Angel semihosting Thumb SWI
    SWI
            0xAB
                                      ; This Thumb code segment will
  call via r4
                                       : BX to the address contained in r4.
    BX
                                      ; Branch exchange.
            r4
```

ARM → Thumb interworking call example code (2)

```
CODE32
ARMSubroutine
ADD r0, r0, r1
BX LR
END
```

```
; Subsequent instructions are ARM.
```

; Add the numbers together

; and return to Thumb caller

; (bit 0 of LR set by Thumb BL).

; Mark end of this file.

Thumb → ARM interworking call example code (1)

```
AREA ThumbAdd, CODE, READONLY
                                                              ; Name this block of code.
                                                               : Mark 1st instruction to call.
    ENTRY
                                                               : Assembler starts in ARM mode.
main
    MOV
            r0, #2
                                                               : Load r0 with value 2.
    MOV r1, #3
                                                               : Load r1 with value 3.
    ADR
            r4, ThumbSub + 1
                                                               ; Generate branch target address and set bit 0,
                                                               ; hence arrive at target in Thumb state.
                                                               : Store the return address.
    MOV
            Ir, pc
                                                               ; Branch exchange to subroutine ThumbSub.
    BX
            r4
                                                               : Terminate execution.
Stop
    MOV
            r0, #0x18
                                                               ; angel SWIreason ReportException
    LDR
            r1, =0x20026
                                                               ; ADP Stopped ApplicationExit
            0x123456
                                                                     ; Angel semihosting ARM SWI
    SWI
    CODE16
                                                               ; Subsequent instructions are Thumb.
ThumbSub
    ADD
            r0, r0, r1
                                                               ; Add the numbers together
    BX
            LR
                                                               ; and return to ARM caller.
    END
                                                               ; Mark end of this file.
```

Cortex-M3: 32-bit processor

- The Thumb instruction set is a <u>subset</u> of the most commonly used 32-bit ARM instructions.
- Thumb instructions are each 16 bits long, and have a corresponding 32-bit ARM instruction that has the same effect on the processor model.
- The Cortex-M3 processor is a high performance 32-bit processor designed for the microcontroller market.
- It offers significant benefits to developers, including: outstanding processing performance combined with
 - <u>fast</u> interrupt handling.
 - enhanced system debug with
 - extensive breakpoint and trace capabilities.

https://developer.arm.com/documentation/dui0552/a/introduction/about-the-cortex-m3-processor-and-core-peripherals

Cortex-M3: Thumb state only

- The Cortex-M3 processor only supports
 execution of instructions in Thumb state. (T = 1)
- The following can clear the **T** bit to **0**:
 - instructions BLX, BX and POP {PC}
 - restoration from the stacked xPSR value on an exception return
 - bit[0] of the vector value on an exception entry or reset.
- In the Cortex-M3 processor, attempting to execute instructions when the T bit is 0 results in a fault or lockup.
 See Lockup for more information.

- The Thumb status bit (T) indicates the processor's <u>current state</u>:
 - · 0 for ARM state (default)
 - 1 for Thumb.

https://developer.arm.com/documentation/dui0552/a/the-cortex-m3-processor/programmers-model/core-registers

Thumb Instruction

Thumb instructions (1)

- The Thumb instructions
 - 16-bit instructions
 - a compact <u>shorthand</u> for a <u>subset</u> of the <u>32-bit</u> ARM instructions
- every Thumb instruction has the equivalent 32-bit ARM instruction.
- not every ARM instructions has the equivalent Thumb subset;
- a <u>single</u> ARM instruction can only be simulated with a <u>sequence</u> of <u>Thumb</u> instructions



- for example, there's <u>no way</u>
 to access status or coprocessor registers.
- a long branch with link (BL)
- the assembler splits
 Instruction 1 (H = 0)
 Instruction 2 (H = 1)

https://www.cs.princeton.edu/courses/archive/fall13/cos375/ARMthumb.pdf

Thumb instructions (2)

- the ARM contains only <u>one</u> instruction set: the 32-bit set.
- When it's operating in the Thumb <u>state</u>,

the processor simply <u>expands</u>
the smaller <u>shorthand instructions</u>
fetched from memory

into their 32-bit equivalents.

 The <u>difference</u> between two equivalent instructions (the <u>ARM</u> and <u>Thumb</u> instructions) lies in

how the *instructions* are <u>fetched</u> and <u>interpreted</u> prior to <u>execution</u>, <u>not</u> in how they function.

 dedicated hardware expands the 16-bit instruction into 32-bit

it doesn't slow execution even a bit.

 the narrower 16-bit instructions do offer memory advantages.

https://www.cs.princeton.edu/courses/archive/fall 13/cos 375/ARM thumb.pdf

Thumb instructions (3)

- Roughly speaking, a CPU instruction is a particular sequence of bits
- to the CPU, a particular sequence of bits could mean "add two 32-bit values and carry"
- The exact value of bits in this sequence has nothing to do with values being added.
- In the ARM mode, this sequence of bits has 32 bits.
- In the thumb mode, it only has 16 bits.
- apparently, the thumb mode has <u>less number</u> of encoded instructions than the ARM mode (<u>less bits</u> to <u>encode</u> them),
- for a same function, most instructions are <u>encoded differently</u> for the <u>ARM</u> and the <u>thumb</u> modes, respectively,

https://electronics.stackexchange.com/questions/353192/how-does-an-arm-processor-in-thumb-state-execute-32-bit-values

Thumb instructions (4)

- for example, the x86 uses 8-bit instructions but is also able to work on 32 bit values.
- For ARM, the instruction length is what changes when you switch to/from ARM and thumb modes.
- For example, the instruction MOV R0, R1
 copy the contents of the 32-bit R1 register
 to the R0 register
 is encoded in the following way:
 - *E1A00001* for ARM (32 bit : 4 bytes)
 4608 for Thumb (16-bit : 2 bytes)
- But the processor will perform exactly the <u>same operation</u>, and it will do it on <u>32-bit wide data</u>, whatever the <u>mode</u>.

https://electronics.stackexchange.com/questions/353192/how-does-an-arm-processor-in-thumb-state-execute-32-bit-values

Thumb instructions (5)

- The Thumb instruction set is a subset of the most commonly used 32-bit ARM instructions.
- Thumb instructions are 16 bits long, and have a <u>corresponding</u> 32-bit ARM instruction that has the same effect on the processor model.
- Thumb instructions operate
 with the standard ARM register configuration,
 enabling excellent interoperability
 between ARM and Thumb states.
- Thumb has all the advantages of a 32-bit core:
 - 32-bit address space
 - 32-bit registers
 - 32-bit shifter and Arithmetic Logic Unit (ALU)
 - 32-bit memory transfer

https://developer.arm.com/documentation/ddi0333/h/introduction/arm1176jz-s-architecture-with-jazelle-technology/the-thumb-instruction-set

Thumb instructions (6)

- The ARM processor
 can manipulate 32 bit values
 because it is a 32-bit processor,
 whatever mode it is running in (Thumb or ARM).
- thus, registers are 32 bits wide
- register width <u>doesn't</u> change when you switch mode (state)
- the data bus width of the processor has <u>nothing to do with</u> the <u>length</u> of the <u>instructions</u>.
- The instructions could be encoded in any length.

https://electronics.stackexchange.com/questions/353192/how-does-an-arm-processor-in-thumb-state-execute-32-bit-values

Thumb instructions (7)

- The Thumb instruction set provides most of the functionality of a typical application.
 - arithmetic and logical operations
 - load/store data movements
 - conditional and unconditional branches
- any code written in C could be executed successfully in Thumb state.
- However, device drivers and exception handlers must often be written at least partly in ARM state

https://www.cs.princeton.edu/courses/archive/fall13/cos375/ARMthumb.pdf

Thumb instructions (8)

- Switching modes allows programmers to <u>decide</u> on the <u>compromise</u> between <u>code density</u> and <u>flexibility</u>
- can <u>pack</u> more instructions in a kB of code with <u>16-bit</u> instructions,
- but the 32 bit instructions are more flexible
 - · they offer more features and
 - · you can do more with a single instruction

https://electronics.stackexchange.com/questions/353192/how-does-an-arm-processor-in-thumb-state-execute-32-bit-values

Thumb instructions (9)

- All Thumb instructions are 16 bits in length.
- Thumb provides approximately 30% better code density over ARM code.
- Most code written for Thumb is in a high-level language such as C and C++.
- ATPCS (ARM Thumb Procedure Call Standard) defines how ARM and Thumb code call each other, called ARM-Thumb interworking.
- Interworking uses the branch exchange (BX) instruction and branch exchange with link (BLX) instruction to <u>change</u> state and <u>jump</u> to a specific routine.

https://www.sciencedirect.com/topics/computer-science/thumb-instruction-set

Thumb instructions (10)

- In Thumb, *only* the branch instructions are conditionally executed.
- The barrel shift operations are separate instructions
 - ASR
 - · LSL
 - LSR
 - ROR
- The multiple-register load-store instructions only support the increment after (IA) addressing mode.
- The Thumb instruction set includes POP and PUSH instructions as stack operations.
- POP and PUSH instructions only support a full descending stack.
- There are <u>no</u> Thumb instructions to access the <u>coprocessors</u>, <u>cpsr</u>, and <u>spsr</u>.

https://www.sciencedirect.com/topics/computer-science/thumb-instruction-set

Thumb instructions (11)

	ARM	Thumb
	(CPSR T=0)	(CPSR T=1)
Instruction size	32-bit	16-bit
Core instructions	58	30
Conditional execution	most	only branch instruction
Data Processing	access to barrel shifter	<u>separate</u> barrel shifter
Instructions	and ALU	and ALU instructions
Program Status Reg	R/W in privileged mode	no direct access
Register usage	15 general purpose reg	8 general purpose reg
	+ PC	+ 7 high reg + PC

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
N	Z	С	V																					I	F	T		n	nod	е	

https://electronics.stackexchange.com/questions/353192/how-does-an-arm-processor-in-thumb-state-execute-32-bit-values

9/12/24


Thumb long branch with link **BL** instruction (1)

```
THUMB assembler: BL label
H=0
LR := PC + OffsetHigh << 12
H=1
temp := next instruction address
PC := LR + OffsetLow << 1
                                          PC := PC + (OffsetHigh << 12) + (OffsetLow << 1)
LR := temp | 1
                                   H=0
                                                            1
                                                               0
                                                                           11-bit Offset_high
                                                   1
                                                      1
                                                         1
                                   H=1
                                                   1
                                                            1
                                                               1
                                                                           11-bit Offset low
          23-bit Offset
                                    11-bit Offset_high
                                                                        11-bit Offset low
                                                                                                   0
```

http://bear.ces.cwru.edu/eecs 382/ARM7-TDMI-manual-pt3.pdf?ref=zdimension.fr

Thumb long branch with link **BL** instruction (2)

ARM B or BL instruction

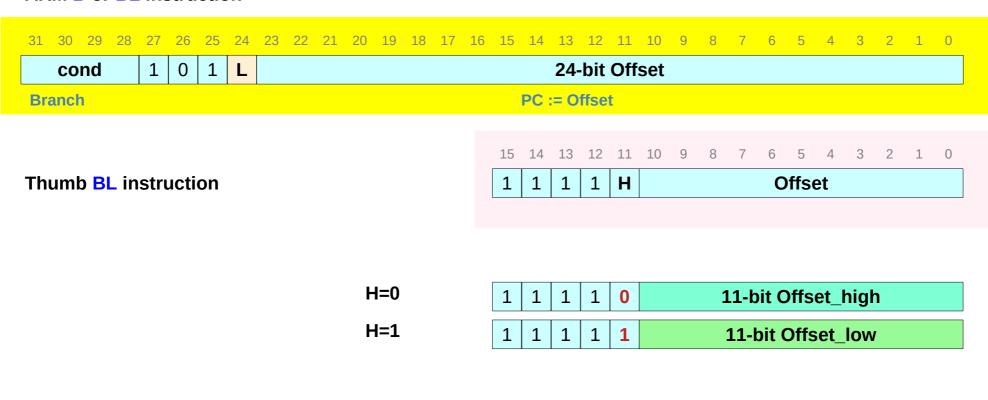

http://bear.ces.cwru.edu/eecs 382/ARM7-TDMI-manual-pt3.pdf?ref=zdimension.fr

23-bit Offset

0

11-bit Offset low

11-bit Offset_high

Thumb long branch with link **BL** instruction (3)

Examples

```
BL faraway
                      ; Unconditionally Branch to 'faraway'
                      ; and place following instruction address,
next ...
                      ; ie 'next', in R14, the Link Register (LR)
                      ; and set bit 0 of LR high (1)
                      ; Note that the THUMB opcodes will contain
                      ; the number of halfwords to offset.
                      ; Must be Half-word aligned.
faraway ...
H=0
LR := PC + OffsetHigh << 12
H=1
temp := next instruction address
PC := LR + OffsetLow << 1
                                             PC := PC + (OffsetHigh << 12) + (OffsetLow << 1)
```

 $http://bear.ces.cwru.edu/eecs_382/ARM7-TDMI-manual-pt3.pdf?ref=zdimension.fr$

LR := temp | 1

Thumb long branch with link **BL** instruction (4)

- This format specifies a long branch with link.
- The assembler splits
 the 23-bit two's complement half-word offset specifed by the label into two 11-bit halves, ignoring bit 0 (which must be 0), and creates two THUMB instructions.
- Instruction 1 (H = 0)
 - In the <u>first</u> instruction the Offset field contains
 - the upper 11 bits of the target address.
 - · this is shifted left by 12 bits and
 - · added to the current PC address.
 - · The resulting address is placed in LR.

- Instruction 2 (H =1)
 - In the <u>second</u> instruction the Offset field contains
 - the lower 11-bit of the target address.
 - this is shifted left by 1 bit and
 - · added to LR.
 - LR, which now contains the full 23-bit address, is placed in PC, the address of the instruction following the BL
 - · is placed in **LR** and bit 0 of **LR** is set.
 - the branch offset must take account of the prefetch operation,
 - which causes the PC to be 1 word (4 bytes)
 ahead of the current instruction

http://bear.ces.cwru.edu/eecs 382/ARM7-TDMI-manual-pt3.pdf?ref=zdimension.fr

Thumb-2 Instruction

Thumb-2 Instructions (1)

- Thumb-1 only does 16 bit instructions
- Thumb-2 can do both 16 bit & 32 bit instructions
- Thumb-1 and Thumb-2
 - share <u>same</u> <u>architecture</u> for 32 bit data.
 - share the <u>same</u> data bus since <u>only</u> the <u>instruction</u> registers are different.

for 64 bit processors,
 Thumb (T32) can support
 both 16 & 32 bit instructions
 with some different in each set
 in order to conserve code space for some applications
 but at the expense of duplicate libraries.

Thumb-1 16-bit instructions 32-bit GP regs

Thumb-2 Mixed 16- and 32-bit instructions 32-bit GP regs

T32 Mixed 16- and 32-bit instructions 32-bit GP regs

A32
32-bit instructions
32-bit GP regs

A64 32-bit instructions 32- and 64-bit GP regs

https://electronics.stackexchange.com/questions/353192/how-does-an-arm-processor-in-thumb-state-execute-32-bit-values

Thumb-2 Instructions (2)

- Thumb-2 is an enhancement to the 16-bit Thumb instruction set.
- Thumb-2 adds 32-bit instructions
 that can be freely intermixed
 with 16-bit instructions in a program.
- the additional 32-bit instructions enable Thumb-2
 - to cover the functionality of the ARM instruction set.
 - to <u>combine</u> the <u>code</u> density of earlier versions of Thumb, <u>with</u> performance of the ARM instruction.

ARM		32-bit
Thumb	16-bit	
Thumb-2	16-bit	32-bit



added 32-bit Thumb-2 instruction

https://developer.arm.com/documentation/ddi0344/c/programmer-s-model/thumb-2-instruction-set

Thumb-2 Instructions (3)

 The most important <u>difference</u> between the <u>Thumb-2</u> instruction set and the <u>ARM</u> instruction set is

that <u>most</u> 32-bit Thumb instructions are unconditional, whereas most ARM instructions can be conditional.

ARM		32-bit
		(conditional)
Thumb	16-bit	
	(unconditional)	
Thumb-2	16-bit	32-bit
	(unconditional)	(unconditional)

- Thumb-2 introduces a conditional execution instruction,
 IT, that is a logical if-then-else function that you can apply to following instructions to make them conditional.
- If cond Then ... Else ...

ADD r0,r0,r0 ADD r1,r0,r0 ADD r2,r0,r0 ADD r3,r0,r0

T EQ + ADD r0,r0,r0
T EQ + ADD r1,r0,r0
E EQ + ADD r2,r0,r0
T EQ + ADD r3,r0,r0

ADDEQ r0,r0,r0 (Always if for 1st one)
ADDEQ r1,r0,r0 (T for 2nd one)
ADDNE r2,r0,r0 (E for 3rd one)
ADDEQ r3,r0,r0 (T for 4th one)

https://developer.arm.com/documentation/ddi0344/c/programmer-s-model/thumb-2-instruction-set

Thumb-2 Instructions (4)

Thumb-2 instructions are <u>accessible</u>
 as were Thumb instructions
 when the processor is in Thumb state,
 that is, the T bit in the CPSR is 1
 and the J bit in the CPSR is 0.

TJ = 10

 In addition to the 32-bit Thumb instructions, there are several 16-bit Thumb instructions and a few 32-bit ARM instructions, introduced as part of the Thumb-2 architecture.

https://en.wikipedia.org/wiki/Jazelle#Implementation

New 32-bit Thumb Instructions (1-1)

 The <u>new 32-bit Thumb</u> instructions are added in the space previously occupied by the <u>Thumb BL</u> and <u>BLX</u> instructions.

TJ = 10

- This is made possible by <u>treating</u> BL and BLX as 32-bit instructions, instead of treating them as two 16-bit instructions.
- This means that BL and BLX, and all the other 32-bit Thumb instructions, can only take exceptions on their start address.
- They <u>cannot</u> take <u>exceptions</u> at the <u>boundary</u> between <u>halfword1</u> and <u>halfword2</u> of the instruction.

New 32-bit Thumb Instructions (1-2)

 All implementations must ensure that <u>both</u> halfwords are <u>fetched</u> and <u>consolidated</u> <u>before</u> they are <u>issued</u> and <u>executed</u> to comply with this <u>exception</u> event restriction.

TJ = 10

- This is a <u>change</u> <u>from</u> <u>Thumb</u>.
- Before Thumb-2, the two halfwords of BL and BLX instructions execute independently, and can take exceptions independently.

New 32-bit Thumb Instructions (2-1)

- The <u>new 32-bit Thumb</u> instructions are designed for:
- the <u>existing ARM/Thumb</u> Programmers' Model, with as <u>few modifications</u> as possible.

TJ = 10

- Certain <u>changes</u> are essential to introduce the <u>32-bit Thumb</u> instructions, notably to the <u>Prefetch abort and Undefined Instruction exceptions</u>.
- There is <u>no increase</u> in the <u>number</u> of <u>registers</u>
 (general purpose or <u>special</u> purpose registers), and <u>no increase</u> in <u>register sizes</u>.
- <u>existing compiler code generation</u> techniques, as far as possible.

New 32-bit Thumb Instructions (2-2)

- New concepts are supplementary rather than obligatory.
- For example, literals can still be loaded using PC-relative instructions, or use in-line immediate values embedded in the MOV 16-bit immediate and MOVT instructions.

TJ = 10

New 32-bit Thumb Instructions (3)

 You may <u>not need</u> to rewrite too <u>much</u> depending on what features of the <u>ARM instruction set</u> and <u>ARM variant</u> you've used.

TJ = 10

- It's also possible that your ARM code is already <u>compatible</u> with Thumb-2.
- ARM created Unified Assembly Language (UAL)
 once Thumb-2 was introduced
 in order to increase the portability of code.
- it is <u>not</u> a <u>significant deviation</u>
 from ARM assembly of olden days,
 with the biggest change being the introduction of the IT(E) directive for <u>conditional execution</u>.

New 32-bit Thumb Instructions (4)

 There are some other constructs that won't port directly, and if you are using <u>features</u> of a more <u>advanced</u> or <u>complex ARM core that</u> the <u>Cortex-M4</u> doesn't have, then that will require a <u>rewrite</u> of that portion.

TJ = 10

- I think if the code is <u>not</u> already <u>written</u> in **ARM UAL** that, while it would take time, it would be relatively <u>simple</u> to run a <u>script</u> over the code that can <u>flag</u> the usage of <u>features</u> that are <u>not</u> written correctly for **UAL**.
- A simple <u>regular expression</u> could check for <u>conditionals</u> on the <u>end</u> of instructions, and it may even be relatively <u>easy</u> to then convert those constructs to use IT(E) <cond>.
 - If cond Then ... Else ...

Thumb 2 instruction set (4)

- The main enhancements are:
- **1.** 32-bit instructions added to the Thumb instruction set to:
 - provide support for exception handling in Thumb state
 - provide <u>access</u> to <u>coprocessors</u>
 - include Digital Signal Processing (DSP)
 - · and media instructions
- **2.** improve performance in cases where a <u>single</u> 16-bit instruction restricts functions available to the compiler.
- **3.** addition of a **16-bit IT instruction**that enables *one* to *four* following Thumb instructions, the IT block, to be conditional

https://developer.arm.com/documentation/ddi0344/c/programmer-s-model/thumb-2-instruction-set and the contraction of the contr

Thumb 2 instruction set (5)

- The main enhancements are:
- 4. addition of a 16-bit CZB instruction
 - Compare with Zero and Branch (CZB)
 to improve code density by replacing two-instruction
 sequence with a single instruction.
- 5. The 32-bit ARM Thumb-2 instructions are added in the space occupied by the Thumb BL and BLX instructions

https://developer.arm.com/documentation/ddi0344/c/programmer-s-model/thumb-2-instruction-set

32-bit ARM Thumb-2 Instruction Format (1)

- The <u>first</u> halfword (hw1) determines the instruction length and functionality.
- If the processor decodes the instruction as 32-bit long, then the processor <u>fetches</u> the <u>second</u> halfword (hw2) of the instruction from the instruction <u>address</u> <u>plus</u> two.
- The availability of both 16-bit Thumb
 and 32-bit instructions in the Thumb-2 instruction sets,
 gives you the flexibility to emphasize
 performance or code size on a subroutine level,
 according to the requirements of their applications.

31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

hw1 hw2

https://developer.arm.com/documentation/ddi0344/c/programmer-s-model/thumb-2-instruction-set

32-bit ARM Thumb-2 Instruction Format (2)

For example, you can code critical loops for applications such as fast interrupts and DSP algorithms using the 32-bit media instructions in Thumb-2 and use the smaller 16-bit classic Thumb instructions for the rest of the application.
 This is for code density and does not require any mode change.

31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

cond

https://developer.arm.com/documentation/ddi0344/c/programmer-s-model/thumb-2-instruction-set

ARM, Thumb, Thumb 2 instruction encodings (1)

- officially there's no "Thumb-2 instruction set".
- Ignoring ARMv8
 - where everything is <u>renamed</u> and <u>AArch64</u> complicates things),
- from ARMv4T to ARMv7-A
- there are two instruction sets: ARM and Thumb.
- they are both "32-bit" in the sense that they operate on
 - up-to-32-bit-wide data
 - in 32-bit-wide registers
 - with 32-bit addresses.
- In fact, they represent the exact same instructions
- it is only the instruction encoding which differs
- the CPU has two different decode front-ends to its pipeline which it can switch between.

ARM, Thumb, Thumb 2 instruction encodings (2)

- ARM instructions have
- fixed-width 4-byte encodings
- which require 4-byte alignment.
- Thumb instructions have variable-length
 - 2-byte "narrow" encoding
 - 4-byte "wide" encoding
- requiring 2-byte alignment
- most instructions have 2-byte encodings,
- but bl and blx have always had 4-byte encodings*.

•

https://stackoverflow.com/questions/28669905/what-is-the-difference-between-the-arm-thumb-and-thumb-2-instruction-encodings

ARM, Thumb, Thumb 2 instruction encodings (3)

- The really confusing bit came in ARMv6T2, which introduced "Thumb-2 Technology".
- Thumb-2 encompassed not just
 - adding a load more instructions to Thumb (mostly with 4-byte encodings) to bring it almost to comparable to ARM,
 - <u>but</u> also *extending* the execution state to allow for conditional execution of most Thumb instructions,
 - and finally introducing a whole new <u>assembly syntax</u> (UAL, "<u>Unified Assembly Language</u>")
 - which *replaced* the previousseparate ARM and Thumb syntaxes
 - and allowed *writing* code once and assembling it to either ARM or Thumb instruction set without modification.

Thumb-2 Technology
4-byte encodings
conditional execution

UAL (Unified Assembly Language) unify ARM and Thumb <u>syntaxes</u> assembling to either ARM or Thumb

ARM, Thumb, Thumb 2 instruction encodings (4)

- The Cortex-M architectures only implement the Thumb instruction set -
- ARMv7-M (Cortex-M3/M4/M7)
 supports most of "Thumb-2 Technology",
 including conditional execution and
 encodings for VFP instructions,
- whereas ARMv6-M (Cortex-M0/M0+)
 only uses Thumb-2 in the form of
 a handful of 4-byte system instructions.
- Thus, the new 4-byte encodings
 (and those added later in ARMv7 revisions)
 are still Thumb instructions
- the "Thumb-2" aspect of them is that they can have 4-byte encodings, and that they can (mostly) be conditionally executed via it

their menmonics are seemed to be only defined in UAL

ARM, Thumb, Thumb 2 instruction encodings (7)

- Thumb: 16 bit instruction set
- ARM: 32 bit wide instruction set hence more flexible instructions and less code density
- Thumb2 (mixed 16/32 bit):
 a compromise between ARM and thumb(16) (mixing them), to get both performance/flexibility of ARM and instruction density of Thumb.
- so a Thumb2 instruction can be either an ARM (only a subset of) with 32 bit wide instruction or a Thumb instruction with 16 bit wide.

UAL (Unified Assembly Language) (1-1)

- Unified assembly language (UAL) is the new assembly syntax introduced by ARM Ltd.
 - to handle the ambiguities introduced by the original Thumb-2 assembly syntax and
 - provide similar syntax for ARM, Thumb and Thumb-2.
- UAL is backwards compatible with old ARM assembly, but incompatible with the Thumb assembly syntax.
- UAL syntax is the default assembly syntax beginning with ARMv7 architectures.

http://downloads.ti.com/docs/esd/SPNU118/unified-assembly-language-syntax-support-spnu1184444.html

UAL (Unified Assembly Language) (1-2)

- When writing assembly code, the .arm and .thumb directives are used to specify ARM and Thumb UAL syntax, respectively.
- The .state32 and .state16 directives remain to specify non-UAL ARM and Thumb syntax.
- The .arm and .state32 directives are equivalent since UAL syntax is backwards compatible in ARM mode.
- Since non-UAL syntax is <u>not supported</u> for Thumb-2 instructions, Thumb-2 instructions <u>cannot</u> be <u>used</u> inside of a .state16 section.
- However, assembly code with .state16 sections that contain <u>only</u> non-UAL **Thumb** code can be assembled for ARMv7 architectures to allow easy porting of older code.

http://downloads.ti.com/docs/esd/SPNU118/unified-assembly-language-syntax-support-spnu1184444.html

UAL (Unified Assembly Language) (2-1)

- the ARM Unified Assembler Language (UAL) syntax provides a <u>canonical form</u> for all ARM and Thumb instructions.
- UAL describes the <u>syntax</u> for the <u>mnemonic</u> and the operands of each instruction.
- In addition, it assumes that instructions and data items can be given labels.
- It does <u>not specify</u> the <u>syntax</u> to be used for <u>labels</u>, <u>nor</u> what assembler <u>directives</u> and <u>options</u> are available.

•

https://developer.arm.com/documentation/ddi0406/c/Application-Level-Architecture/The-Instruction-Sets/Unified-Assembler-Language

UAL (Unified Assembly Language) (2-2)

- Most earlier ARM assembly language mnemonics are still supported as <u>synonyms</u>
- Most <u>earlier</u> Thumb assembly language <u>mnemonics</u> are not supported.

•

https://developer.arm.com/documentation/ddi0406/c/Application-Level-Architecture/The-Instruction-Sets/Unified-Assembler-Language

UAL (Unified Assembly Language) (3)

- UAL includes instruction selection rules that specify <u>which</u> instruction encoding is <u>selected</u> when more than one can provide the required functionality.
- For example, both 16-bit and 32-bit encodings exist for an ADD R0, R1, R2 instruction.
- The most common instruction selection rule is that when both 16-bit and 32-bit encodings are available, the 16-bit encoding is selected, to optimize code density.
- Syntax options exist to <u>override</u> the <u>normal</u> instruction selection rules and <u>ensure</u> that a <u>particular</u> encoding is selected.
- These are <u>useful</u> when <u>disassembling</u> code, to ensure that subsequent assembly produces the <u>original code</u>, and in some other situations.

https://developer.arm.com/documentation/ddi0406/c/Application-Level-Architecture/The-Instruction-Sets/Unified-Assembler-Language

NEON and VFP

- For armv7 ISA (and variants)
- The NEON is a SIMD and parallel data processing unit for integer and floating point data
- the VFP is a fully IEEE-754 compatible floating point unit
- In particular on the A8,
 the NEON unit is much <u>faster</u> for just about everything,
- even if you don't have highly parallel data, since the VFP is non-pipelined.
- So why would you ever use the VFP?!
- The most major difference is that the VFP provides double precision floating point.
- Secondly, there are some specialized instructions that that VFP offers that there are no equivalent implementations for in the NEON unit.
- SQRT comes to mind, perhaps some type conversions.

https://stackoverflow.com/questions/4097034/arm-cortex-a8-whats-the-difference-between-vfp-and-neon

Jezelle DBX (Direct Bytecode Execution)

Jazelle (1)

Jazelle DBX (direct bytecode execution)
 is an extension that allows some ARM processors
 to execute Java bytecode in hardware
 as a third execution state
 alongside the existing ARM and Thumb modes.

TJ = 10

- Jazelle functionality was specified in the ARMvTEJ architecture
- the first processor with Jazelle technology was the ARM926EJ-S.
- Jazelle is denoted by a "J" appended to the CPU name except for <u>post-v5 cores</u> where it is required (albeit only in trivial form) for architecture conformance.

https://en.wikipedia.org/wiki/Jazelle#Implementation

Jazelle (2)

• The J bit

• The **J** bit in the CPSR indicates when the processor is in Jazelle state.

•	When $J = 0$
	the processor is in ARM or Thumb state,
	depending on the T bit.

•	When .	J = 1	
	the _l	processor is in <mark>Jazelle</mark> :	state.

TJ = 00	ARM
TJ = 10	Thumb

https://developer.arm.com/documentation/ddi0301/h/programmer-s-model/the-program-status-registers/the-j-bit

Jazelle (3)

• The combination of **J** = **1** and **T** = **1** causes <u>similar effects</u> to setting **T=1** on a non Thumb-aware processor.

TJ = 00 ARM TJ = 10 Thumb

 That is, the <u>next instruction</u> executed causes entry to the <u>Undefined Instruction exception</u>. **TJ** = 01 Jazelle **TJ** = 11 undef


- entry to the exception handler causes the processor to <u>re-enter</u> ARM state, and
- the handler can <u>detect</u>
 that this was the <u>cause</u> of the <u>exception</u>
 because J and T are <u>both set</u> in <u>SPSR und</u>.
- MSR cannot be used to change the J bit in the CPSR.

https://developer.arm.com/documentation/ddi0301/h/programmer-s-model/the-program-status-registers/the-j-bit and the contract of the contract

89

Jazelle (4)

- The placement of the J bit avoids the status or extension bytes in code running on ARMv5TE or earlier processors.
- This ensures that OS code written using the deprecated syntax CPSR, SPSR, CPSR_all, or SPSR_all for the <u>destination</u> of an **MSR** instruction continues to work.
- The MSR instruction is used to write
 - · to the CPSR or
 - to the SPSR of the current mode.

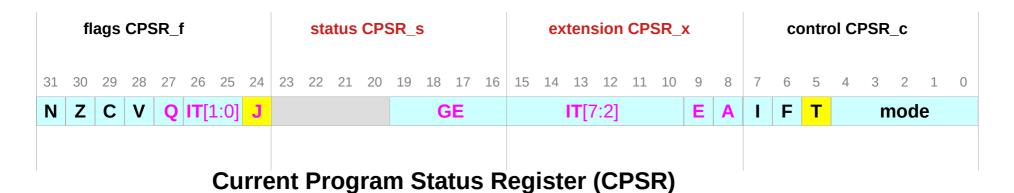

https://developer.arm.com/documentation/ddi0301/h/programmer-s-model/the-program-status-registers/the-j-bit

CPSR Bits (1)

N Negative flag	To <u>disable</u> Interrupt (IRQ), set I	To <u>disable</u> Interrupt (IRQ), set I	USR	10000
Z Zero flag	To <u>disable</u> Fast Interrupt (FIQ), set F	To <u>disable</u> Fast Interrupt (FIQ), set F	FIQ	10001
C Carry flag	the T bit shows whether the processor runs	the T bit shows whether the processor runs	IRQ	10010
V Overflow flag	in ARM state or in Thumb state.	in ARM state or in Thumb state.	SVC	10011
	never set this bit	never set this bit	ABT	10111
	can be changed only in a <u>privileged</u> mode	can be changed only in a <u>privileged</u> mode	UND	11011
			SYS	11111

flags CPSR_f									status CPSR_s							extension CPSR_x								control CPSR_c							
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
N	Z	С	CV																	Ī	F	T		n	nod	е					
						Cu	rre	ent	Pr	og	rar	n S	Sta	tus	R	eg	ist	er	(CI	25	R)										

https://developer.arm.com/documentation/ddi0301/h/programmer-s-model/the-program-status-registers/the-j-bit https://courses.washington.edu/cp105/02 Exceptions/Status Register Instructions.html

CPSR Bits (2)

Jazelle bit

J

Q Cumulative saturation bit

IT[1:0] if-Then exectuion state bits

for the Thumb IT (If-Then) instruction

GE greater than or equal to flags

IT[7:2] if-Then exectuion state bits

for the Thumb IT (If-Then) instruction

E Endianness execution state bit
0 - Little-endian, 1 - Big-endian
A Asynchronous abort mask bit

31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

N Z C V Q IT[1:0] J GE IT[7:2] E A I F T mode

Current Program Status Register (CPSR)

https://www.keil.com/pack/doc/CMSIS/Core A/html/group CMSIS CPSR.html

MRS – Move to Register from Status

- MRS is use to read
 - from the CPSR or
 - from the SPRS of the current mode
- It move the value from the status register into a regular register.
- The SPSR that will be read is the one that is active for the CPU's current mode.

MRS R0, CPSR MRS R1, SPSR

 Reading the SPSR while in user or system mode is not valid and yields unpredictable results.

 $https://courses.washington.edu/cp105/02_Exceptions/Status_Register_Instructions.html$

MSR – Move to Status from Register

- The MSR instruction is used to write
 - to the CPSR or
 - to the SPSR of the current mode.
- Writing to the SPSR while in the user or system mode is not valid and the results are not predictable.
- Any writes to the CPSR in user mode are <u>ignored</u>.
- The CPSR can only be written to in a priveleged mode.
- MSR CPSR, R0
- MSR SPSR, R1

https://courses.washington.edu/cp105/02 Exceptions/Status Register Instructions.html

64-bit Processors

A32 + T32 ISA's A64 ISA

64-bit processor (1)

ARMv7-A

ARMv8-A

AARCH 32

AARCH 32

AARCH 64

ARM+Thumb ISAs

A32+T32 ISAs

A64 ISAs

ARMv7-A

AARCH32

ARM+Thumb ISAs

ARMv8-A

AARCH32

A32+T32 ISAs

ARMv8-A

AARCH64

A64 ISAs

https://armkeil.blob.core.windows.net/developer/Files/pdf/graphics-and-multimedia/Porting%20 to%20 ARM%2064-bit.pdf

64-bit processor (1)

ARMv7-A

AARCH 32

LargePhysAddrExtn

VirtualizationExtn

TrustZone

ARM+Thumb ISAs

NEON

Hard Float

ARMv8-A

AARCH 32

AARCH 64

EL3, EL2, EL1 and EL0 exception hierarchy

CRYPTO

CRYPTO

A32+T32 ISAs

A64 ISAs

LD acquire/ST release: C1x/C++11 compliance

IEEE 754-2008 compliant floating point

AdvSIMD (SP float)

AdvSIMD (SP+DP float)

https://armkeil.blob.core.windows.net/developer/Files/pdf/graphics-and-multimedia/Porting%20 to%20 ARM%2064-bit.pdf

ARM, Thumb, Thumb 2 instruction encodings (5)

- there is a 32-bit execution state (AArch32) and a 64-bit execution state (AArch64).
- the 32-bit execution state supports two different instruction sets:
 - T32 ("Thumb") and
 - A32 ("ARM").
- The 64-bit execution state supports only one instruction set - A64.
- All A64, like all A32, instructions are
 32-bit (4 byte) in size, requiring 4-byte alignment.
- Many/most A64 instructions can operate on both 32-bit and 64-bit registers (or arguably 32-bit or 64-bit views of the same underlying 64-bit register).

ARM, Thumb, Thumb 2 instruction encodings (6)

- All ARMv8 processors (like all ARMv7 processors) that implement AArch32 support Thumb-2 instructions in the T32 instruction set.
- Not all ARMv8-A processors implement AAarch32, and some don't implement AArch64.
- Some Processors support both, but only support AArch32 at <u>lower exception levels</u>.

https://stackoverflow.com/questions/28669905/what-is-the-difference-between-the-arm-thumb-and-thumb-2-instruction-encodings

64-bit processor (1)

- Evolution of the ARM architecture
- The diagram shows how all the features present in ARMv7-A have been carried forward into ARMv8-A.
- But ARMv8 supports two execution states:
 - AArch32
 the A32 and T32 instruction sets
 (ARM and Thumb in ARMv7-A) are supported
 - AArch64
 the new A64 instruction set is introduced.
- Although backwards compatible with ARMv7-A, the exception, privilege and security model has been significantly extended and is now classified as a set of exception levels, EL0 to EL3, in a four-level hierarchy.

ARMv7-A

AARCH32

ARM+Thumb ISAs

ARMv8-A

AARCH32

A32+T32 ISAs,

AARCH64

A64 ISAs

https://armkeil.blob.core.windows.net/developer/Files/pdf/graphics-and-multimedia/Porting%20 to%20 ARM%2064-bit.pdf

64-bit processor (2)

 In AArch32, the ARMv7-A Large Physical Address Extensions are supported, providing

- 32-bit virtual addressing and
- 40-bit physical addressing.
- In AArch64, this is extended, again in a backward compatible way, to provide
 - 64-bit virtual addresses and
 - 48-bit physical address
- Other additions include cryptographic support at instruction level.

ARMv7-A
AARCH32
ARM+Thumb ISAs

ARMv8-A AARCH32, A32+T32 ISAs, AARCH64 A64 ISAs

https://armkeil.blob.core.windows.net/developer/Files/pdf/graphics-and-multimedia/Porting%20 to%20 ARM%2064-bit.pdf

64-bit processor (3)

- Overview of AArch64 in ARMv8-A
- The A64 instruction set, defined in AArch64, has been designed from the ground up as a <u>clean</u>, <u>modern</u> instruction set which operates on 64-bit or 32-bit native datatypes or registers.
- A64 is a <u>fixed-length</u> instruction set in which all instructions are <u>32 bits</u> in length.
- It does, as you might expect, have many similarities with the A32 instruction set which you'll be familiar with from earlier ARM architectures.
- There are some things you'll find which are new and some things which you'll go looking for and aren't there!

ARMv7-A

AARCH32

ARM+Thumb ISAs

ARMv8-A

AARCH32,


A32+T32 ISAs,

AARCH64

A64 ISAs


https://armkeil.blob.core.windows.net/developer/Files/pdf/graphics-and-multimedia/Porting%20to%20ARM%2064-bit.pdf

64-bit processor (4)

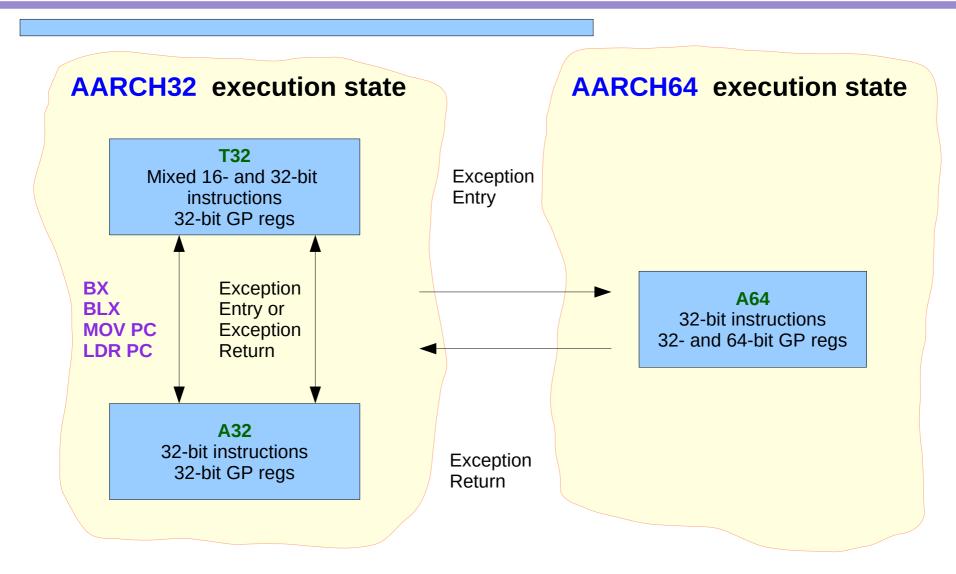

https://armkeil.blob.core.windows.net/developer/Files/pdf/graphics-and-multimedia/Porting%20to%20ARM%2064-bit.pdf

64-bit processor (5)

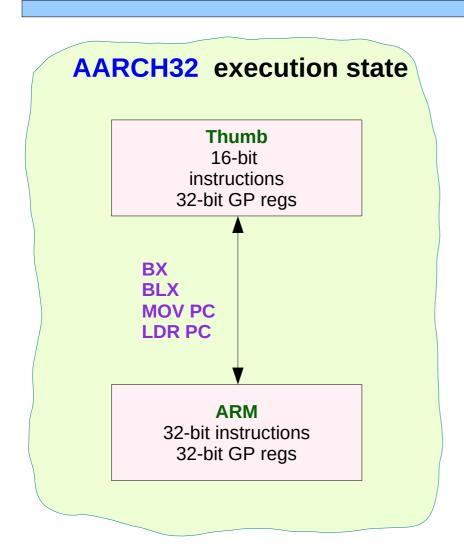


https://armkeil.blob.core.windows.net/developer/Files/pdf/graphics-and-multimedia/Porting%20 to%20 ARM%2064-bit.pdf


64-bit processor (6)

Changing Execution state and Instruction set

- A fully-populated ARMv8-A processor supports both AArch32 and Aarch64 execution states.
- <u>Transition</u> between the two is always <u>across</u> an <u>exception boundary</u>.

This differs from ARMv7-A
 in which a <u>change</u> of instruction set is triggered
 by an <u>interworking branch</u> (e.g. BLX).

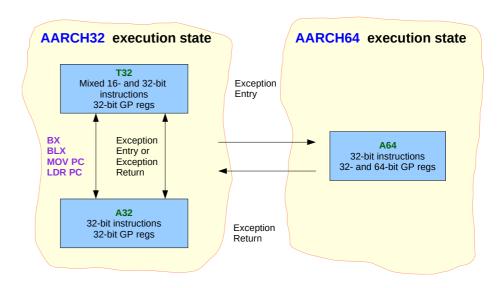

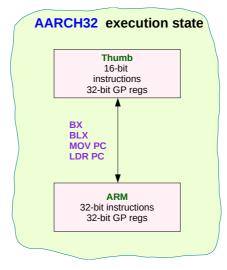


https://armkeil.blob.core.windows.net/developer/Files/pdf/graphics-and-multimedia/Porting%20to%20ARM%2064-bit.pdf

64-bit processor (7)

Changing Execution state and Instruction set

- the relationship between the T32, A32 and A64 instruction sets and
- the events which can cause a <u>switch</u> between them.
- the execution state
- can <u>stay</u> the same or
- go <u>from</u> 32-bit <u>to</u> 64-bit
 - · when taking an exception, or
 - · when returning from an exception
- This introduces a natural hierarchy of 64-bit and 32-bit support at each level

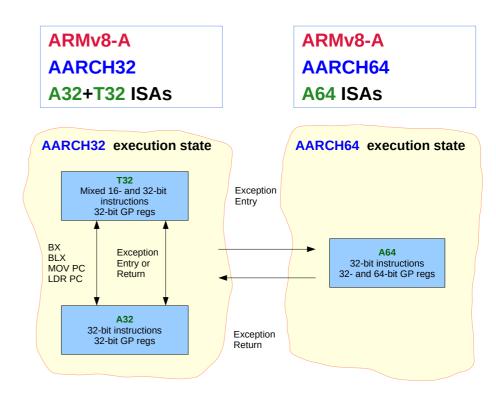

https://armkeil.blob.core.windows.net/developer/Files/pdf/graphics-and-multimedia/Porting%20to%20ARM%2064-bit.pdf

References

- [1] http://wiki.osdev.org/ARM_RaspberryPi_Tutorial_C
- [2] http://blog.bobuhiro11.net/2014/01-13-baremetal.html
- [3] http://www.valvers.com/open-software/raspberry-pi/
- [4] https://www.cl.cam.ac.uk/projects/raspberrypi/tutorials/os/downloads.html